




Pump Panel Mounting Bracket Instructions

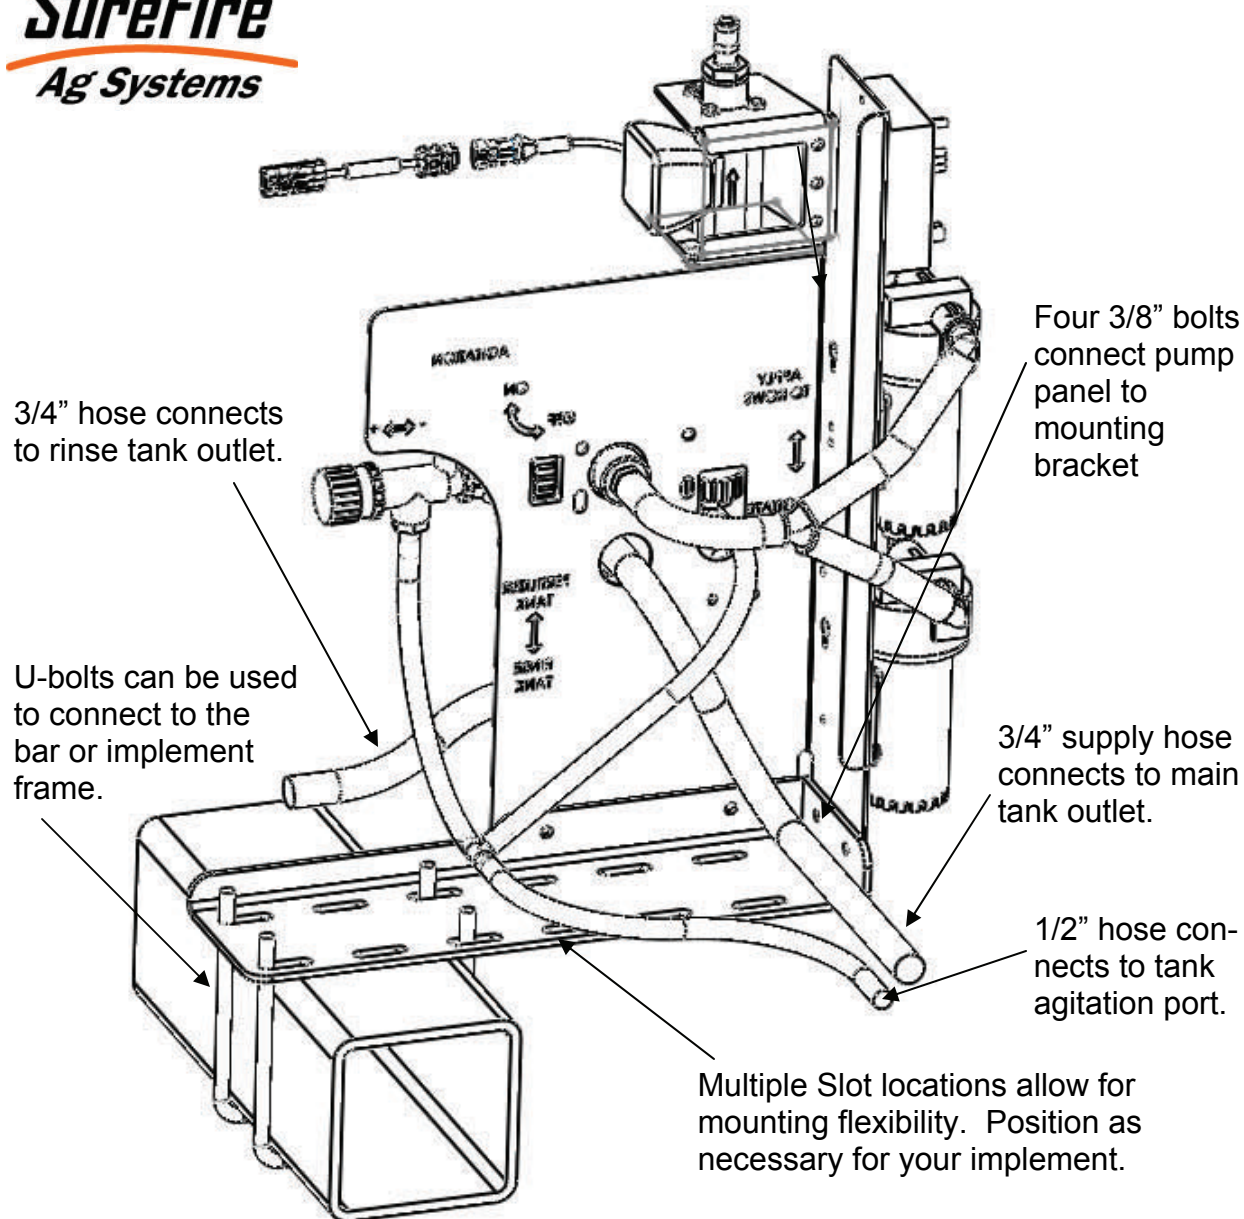

Installation Steps

1. Attach the mounting bracket to your implement bar. SureFire has multiple U-bolt sizes available for many bar sizes.
2. Attach the pump panel to the bracket with four 3/8" bolts.
3. Connect the tank outlet to the 3/4" hose as shown.
4. Connect the tank agitation port to the 1/2" hose as shown. If the product being applied doesn't need agitation, the 1/2" hose can be teed into the 3/4" supply hose. This will allow pump recirculation for optimum performance, but no agitation.
5. Connect the rinse tank outlet to the 3/4" hose as shown.