




# 396-2824Y1

## Great Plains NutriPro Torpedo Mounting Brackets

Applicator Manufacturer:




Kit Number: 516-04-150150

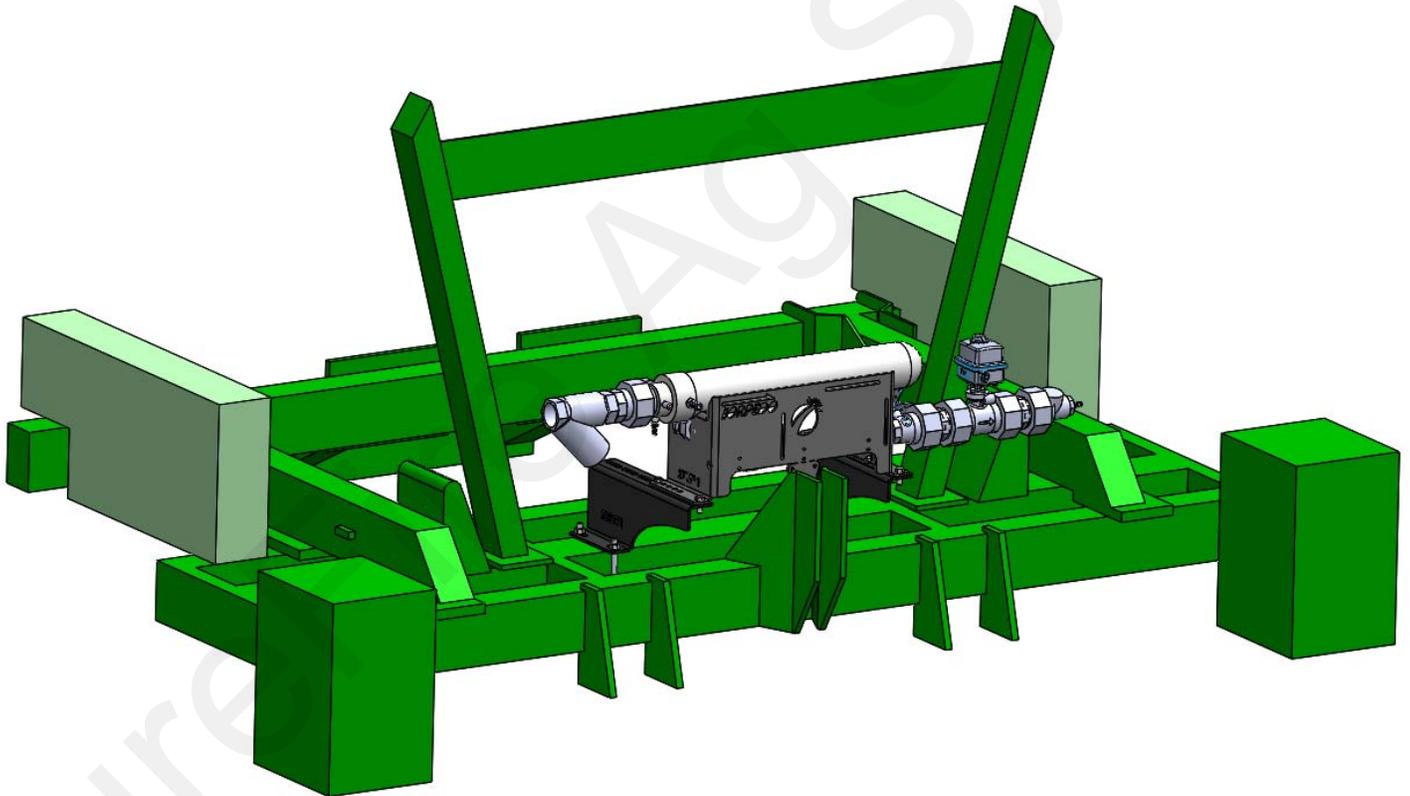



# Parts List and Exploded View

| ITEM NO. | PART NUMBER  | DESCRIPTION                         | QTY. |
|----------|--------------|-------------------------------------|------|
| 1        | 462-2821Y1   | NutriPro Torpedo Mounting Bracket   | 2    |
| 2        | 380-1027     | 1/2" x 6" x 7.5" Square Bend U-Bolt | 2    |
| 3        | 323-08       | 1/2" Flange Nut                     | 4    |
| 4        | 300-080104-5 | 1/2" x 1-1/4" Hex Head Bolt         | 4    |

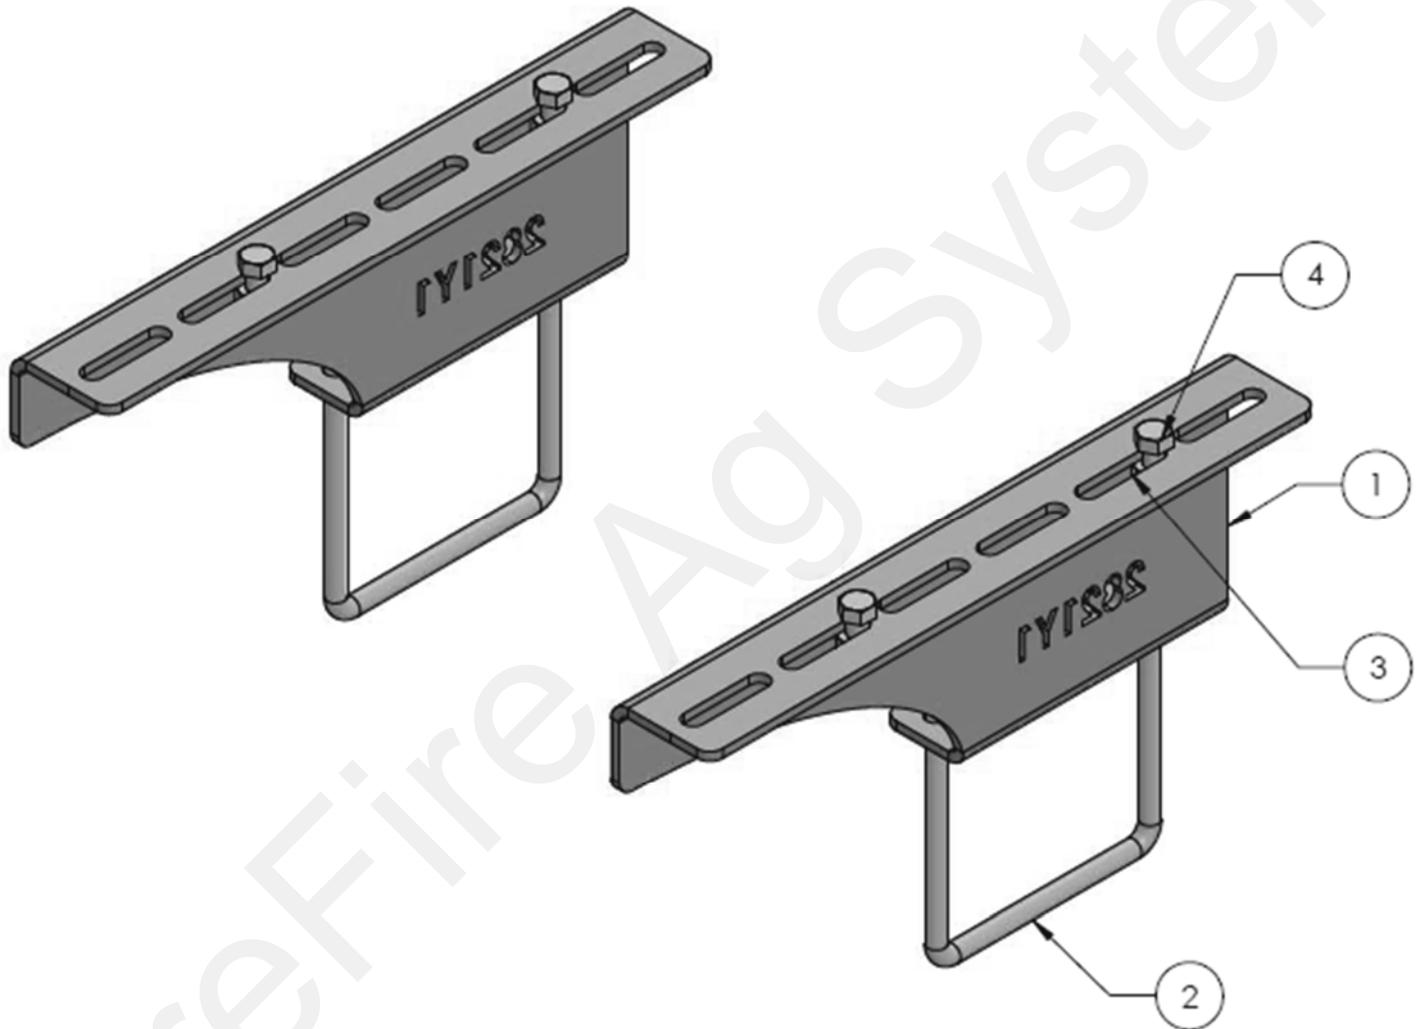




# Step by Step Instructions

1. Using a 1/2" x 6" x 7-1/2" U-bolt, loosely attach 420-2821Y1 to 6x6 center implement frame.
2. Repeat Step 1 for second 420-2821Y1 bracket.

*NOTE: In some installations a 1/2" x 4" x 7-1/2" u-bolt may be substituted for the 1/2" x 6" x 7-1/2" u-bolt in order to attach to 4x6 implement frame.*

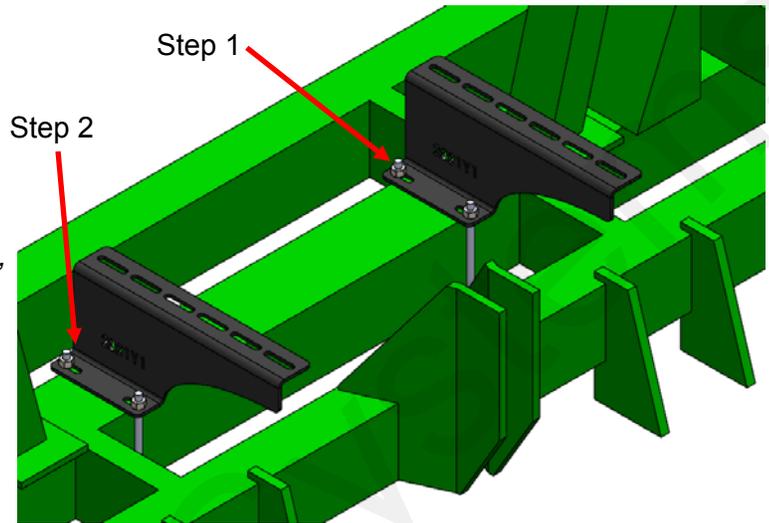

3. Position SureFire Ag Torpedo bracket (PN 2719Y1, Not Included in Kit 516-04-150150) on 2821Y1 brackets. Bolt loosely using 1/2" hex head bolts and 1/2" flange nuts.
4. Inspect bracket and Torpedo mounting for interference and tighten all bolts.

*Note: In order to easily access Torpedo fittings, the preferred orientation is rotated 180° from the picture on the right.*

