




396-5663Y1

Sentinel Row Control / Zip Valve Mounting Instructions for Orthman 1tRIPr II


Kit Number: 515-01-400225

**Description: Sentinel Row Control / Zip Valve Mounting Bracket for
Orthman 1tRIPr II (Casted Row Unit)**

Sentinel Configurations

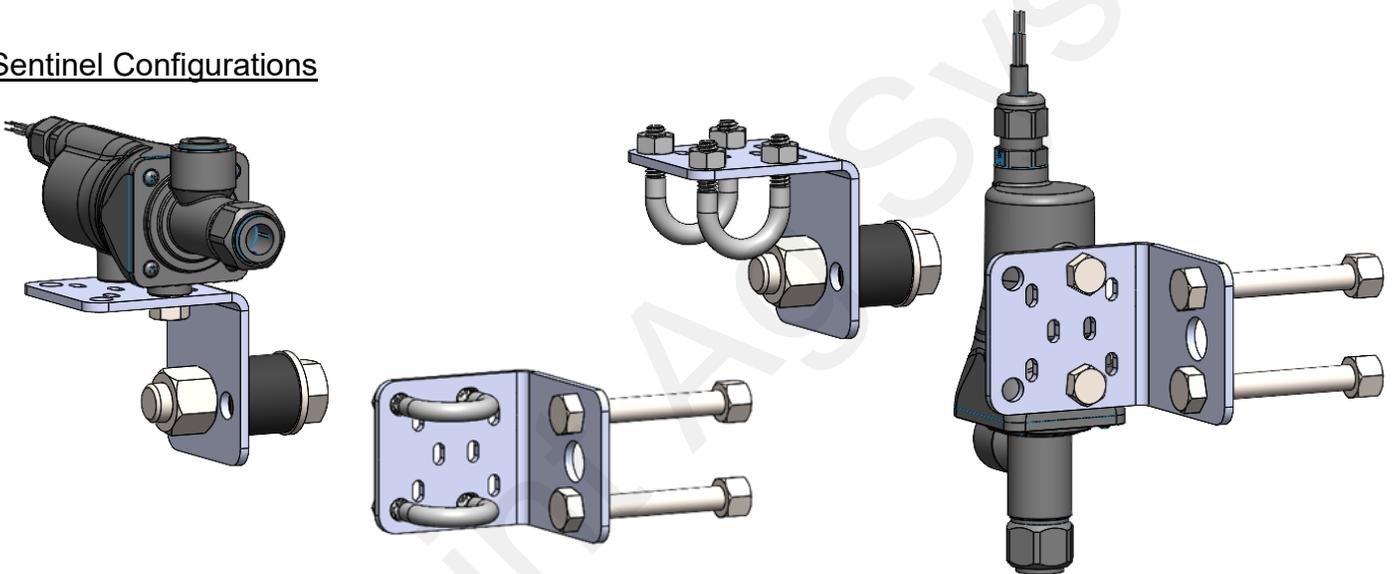

Gen 3 LiquiShift Configurations


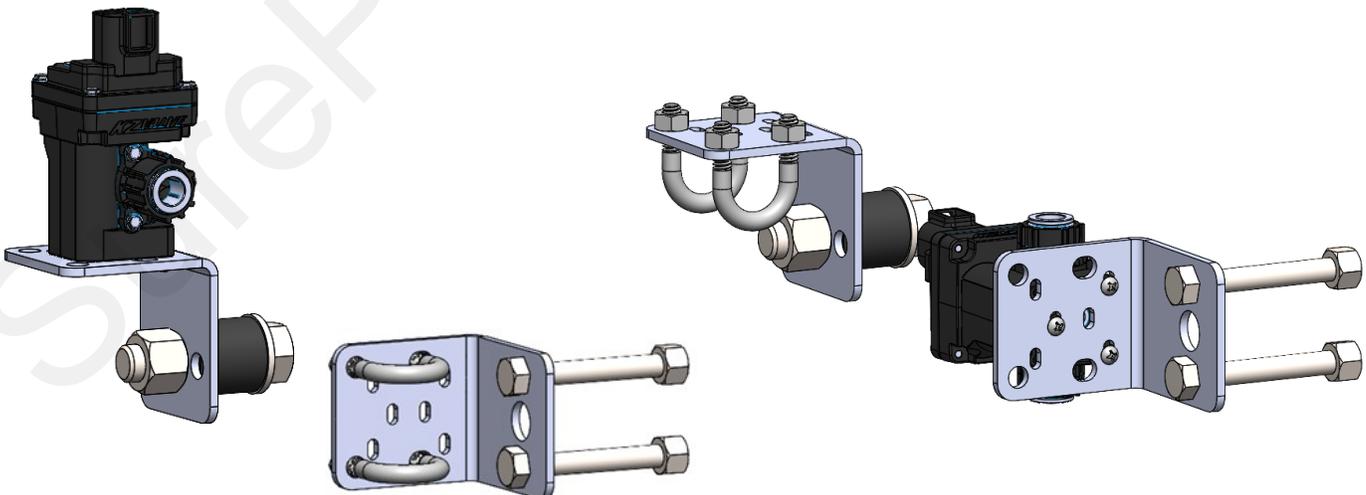




Parts List

| ITEM NO. | PART NUMBER | DESCRIPTION | QTY. |
|----------|----------------|--|------|
| 1 | 069-5589Y1 | Orthman 1tRIPr II Hose Mount Spacer | 1 |
| 2 | 300-040006-5 | 1/4" x 3/8" Hex Head Bolt - G5 | 2 |
| 3 | 300-050208-5 | 5/16" x 2-1/2" Hex Head Bolt - G5 | 2 |
| 4 | 300-080108-5 | 1/2" x 1-1/2" Hex Head Bolt - G5 | 1 |
| 5 | 302-0400120108 | 1/4" Round Bend U-Bolt - 3/4" x 1-1/2" | 2 |
| 6 | 321-04 | 1/4" Nylock Nut | 4 |
| 7 | 321-05 | 5/16" Nylock Nut | 2 |
| 8 | 321-08 | 1/2" Nylock Nut | 1 |
| 9 | 330-08 | 1/2" Flat Washer | 1 |
| 10 | 331-04-SS | 1/4" Lock Washer - Stainless Steel | 2 |
| 11 | 400-5588Y1 | Orthman 1tRIPr II Hose Mounting Bracket | 2 |
| 12 | 757-97349A200 | Size 6 Thread Forming Screw for Plastic - SS | 3 |

Valves not included in kit.

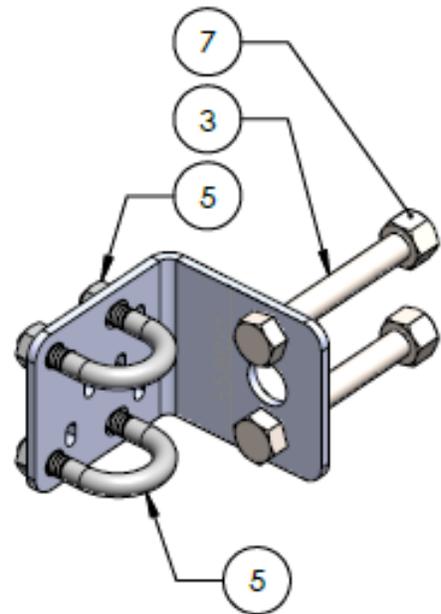
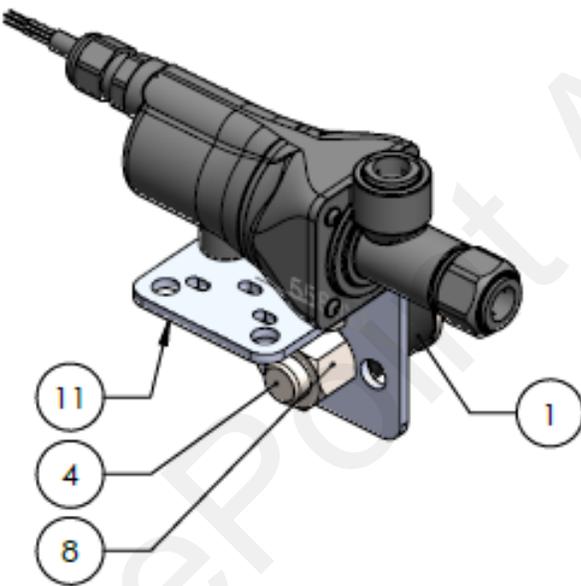





Step by Step Instructions

Sentinel Row Control

1. Mount the 400-5588Y1 brackets to the row unit on the locations shown, using the provided hardware.
2. Mount Sentinel Row Control valve on the top or bottom bracket using the hardware provided.

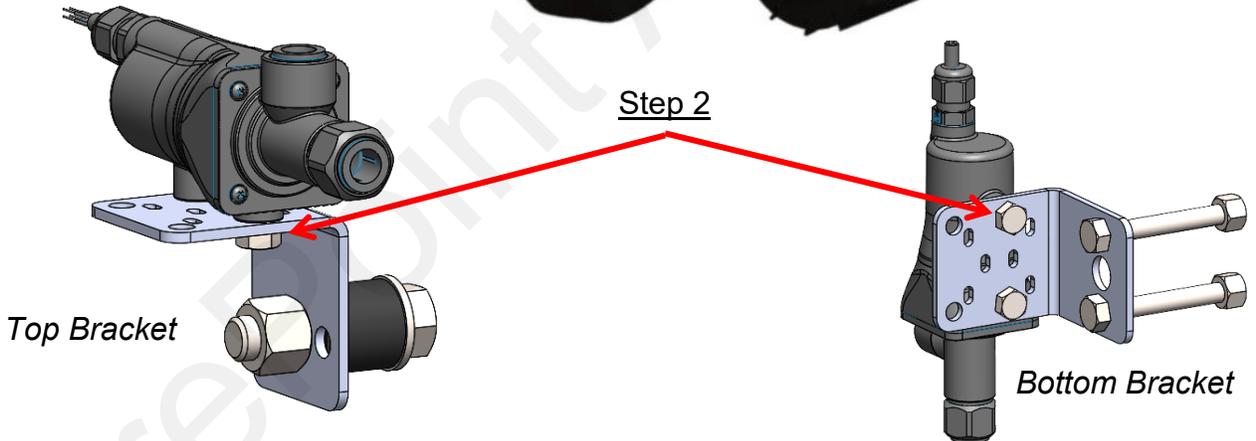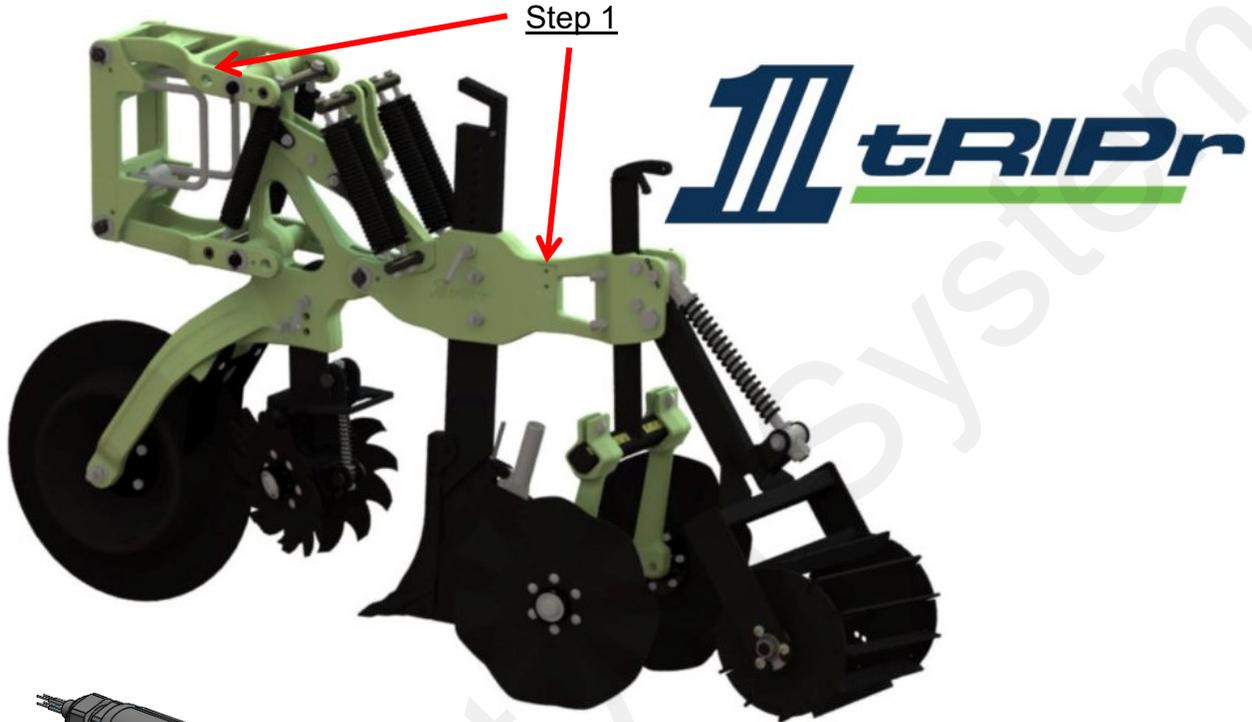

3. Use the provided u-bolts to secure the hose to the mounting bracket.


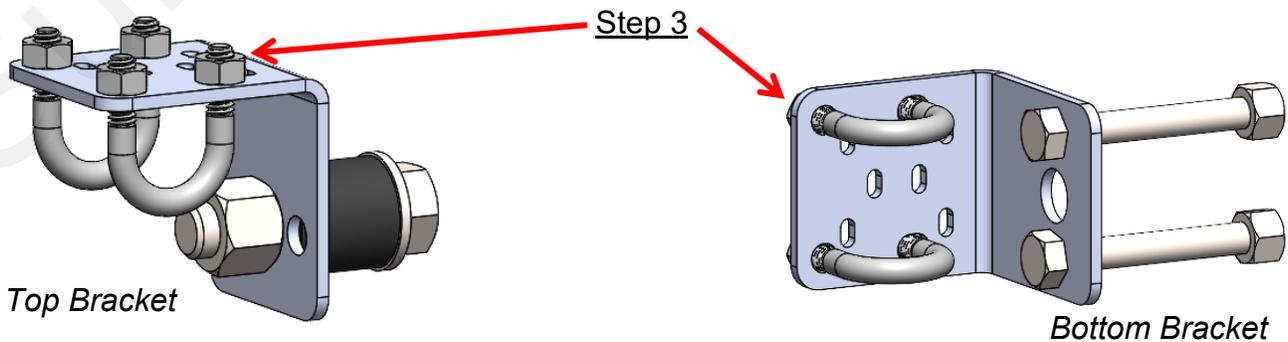




Step by Step Instructions

Gen 3 LiquiShift

1. Mount the 400-5588Y1 brackets to the row unit in the locations shown, using the provided hardware.
2. Mount Gen 3 LiquiShift zip valve on the top or bottom bracket using the hardware provided.

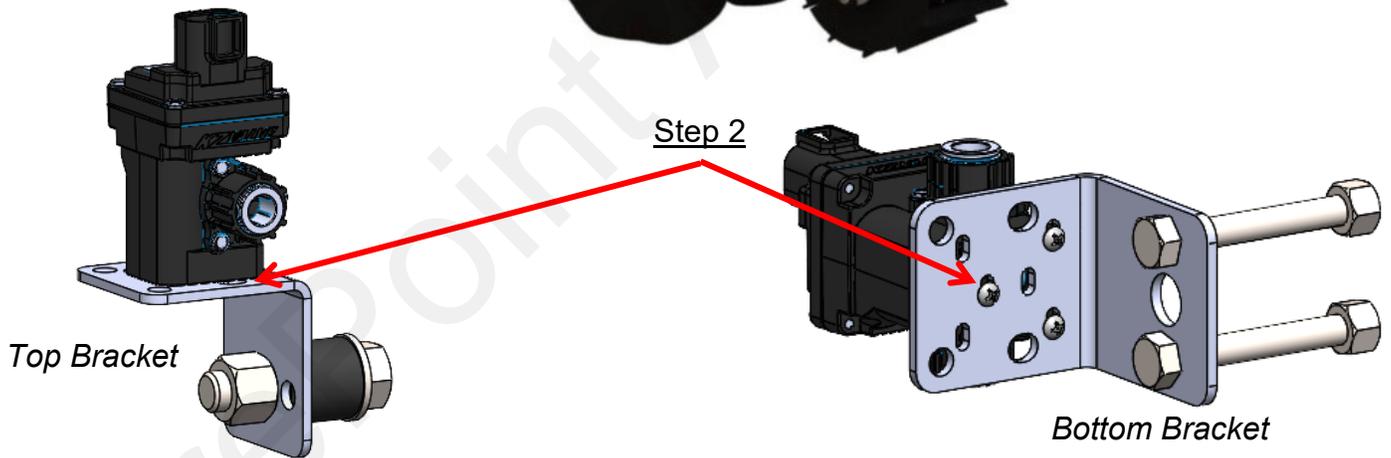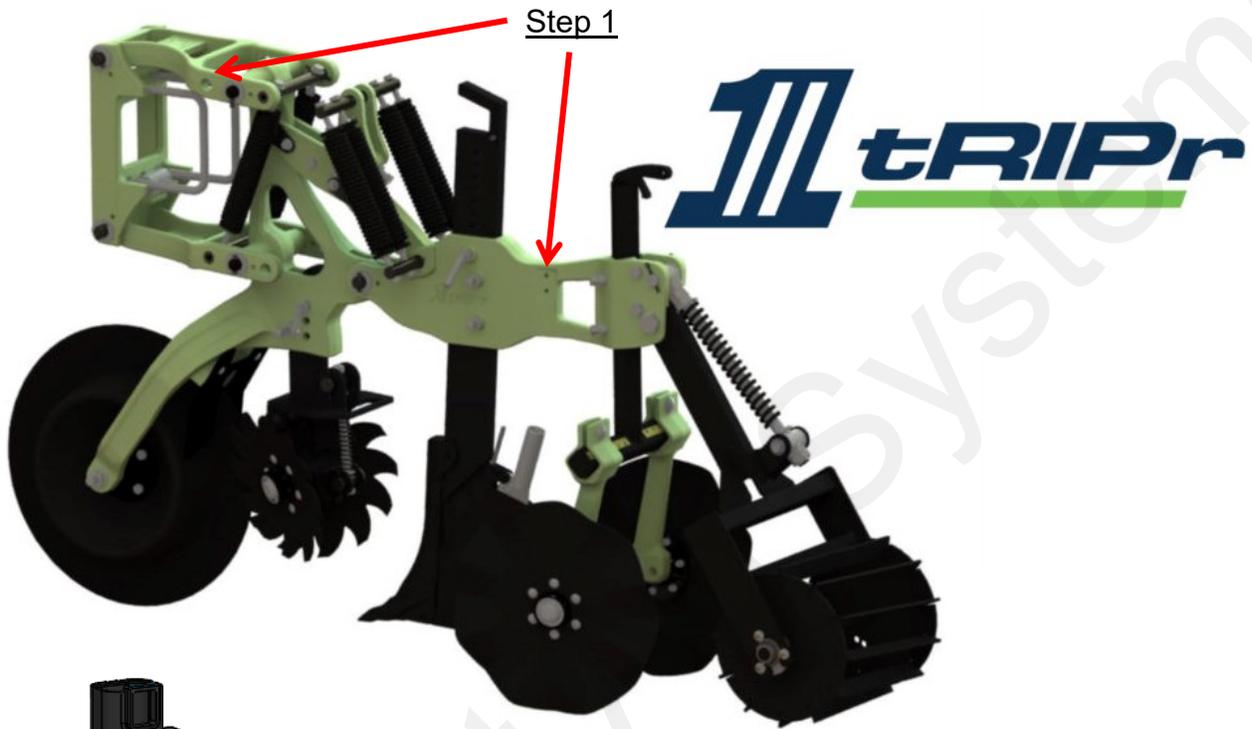

3. Use the provided u-bolts to secure the hose to the mounting bracket.

