



396-4176Y1


QuickDraw^{MAX} Dual Large Valve Update Instructions

Kit Number: 606-07-100300

**Kit Description: QuickDraw^{MAX} 4 Product to Dual Large Valve
6 Product Upgrade Kit**


Kit Number: 606-07-100400

**Kit Description: QuickDraw^{MAX} 6 Product to Dual Large Valve
6 Product Upgrade Kit**


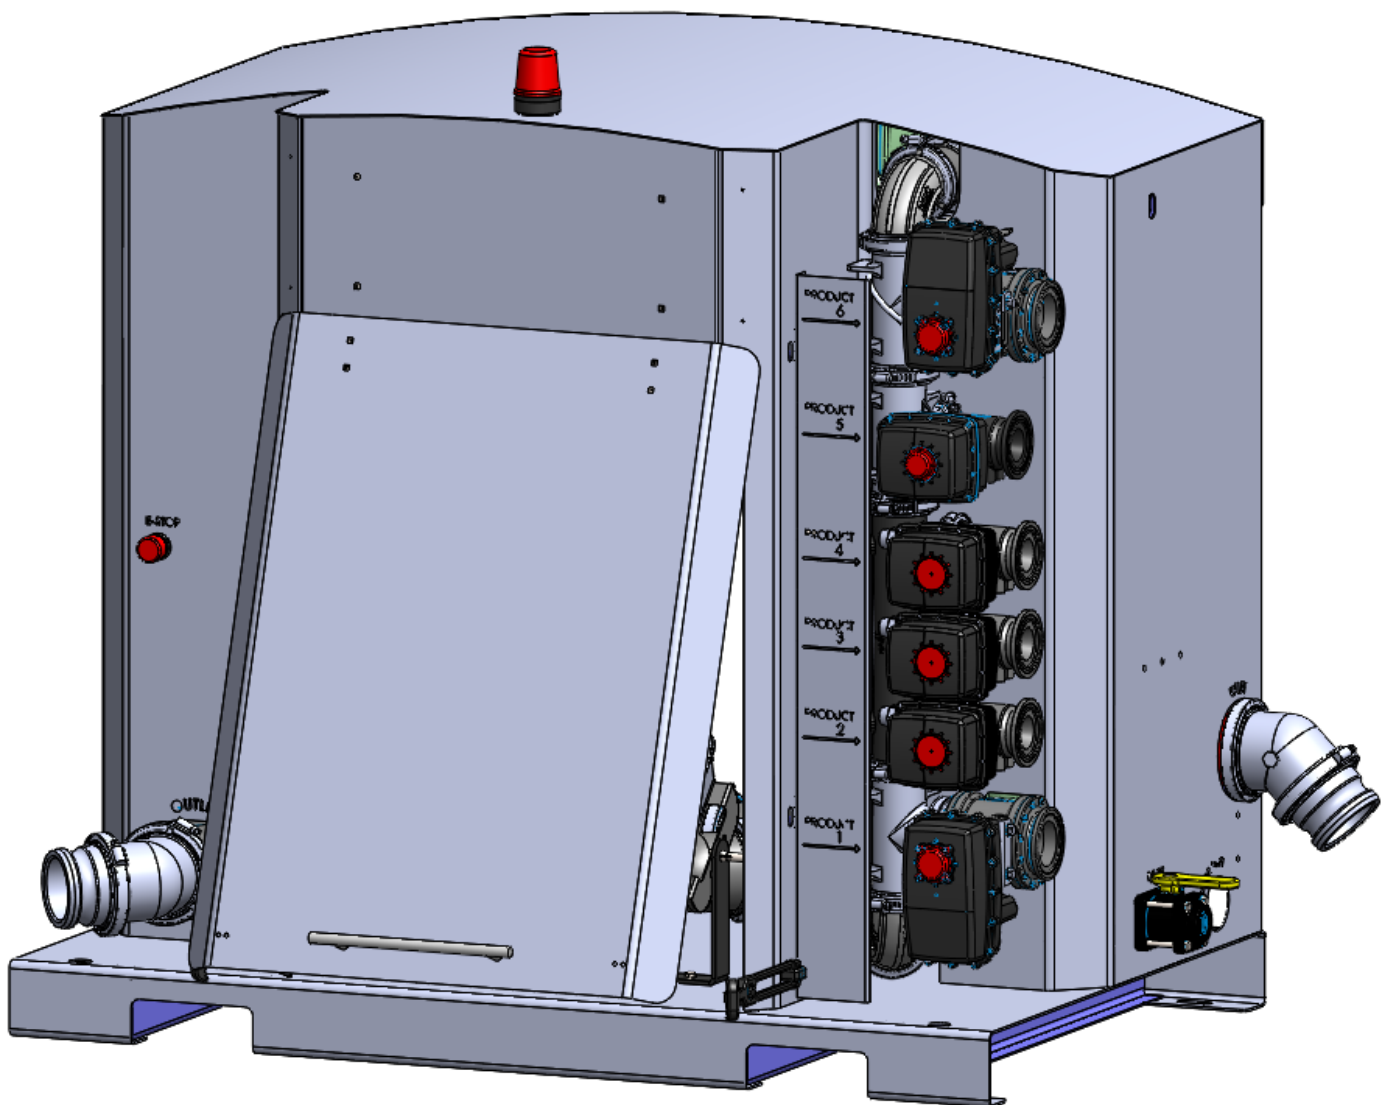




Step by Step Instructions - 606-07-100300

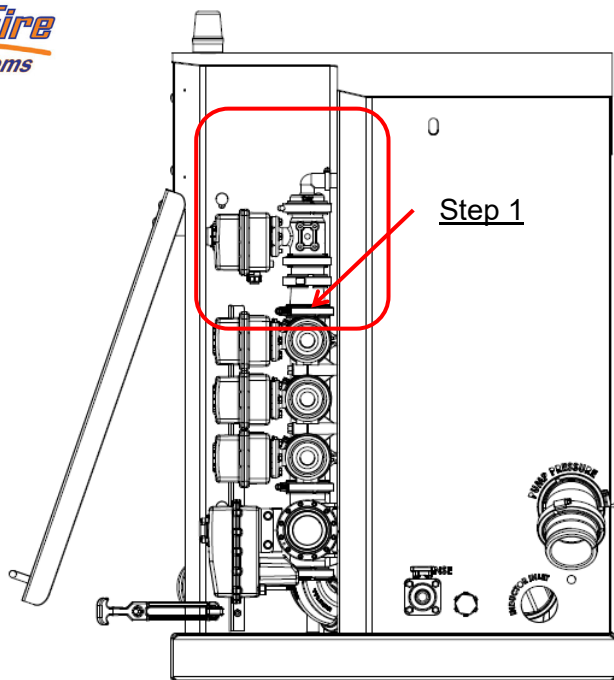


1. Remove clamp/gasket from the top of the 3-way valve manifold, and cut rinse hose. Set the rinse valve assembly aside for re-assembly.
2. Remove (3) bolts holding the metal product number plate.
3. Assemble upgrade kit components as shown below.
4. Reconnect new valve assembly in place using the original clamps/gaskets, check for leaks. Secure in place with the provided U-bolt, mounted across the manifold tee fitting as shown.
5. Connect rinse valve assembly to the 90° sweep fitting inside the cabinet using a clamp and gasket and reconnect rinse hose. (Extra hose is provided if needed)
6. Using (3) mounting bolts from 6 product number plate, mount the new 475-3218Y1-GY Dual large valve product valve number plate.

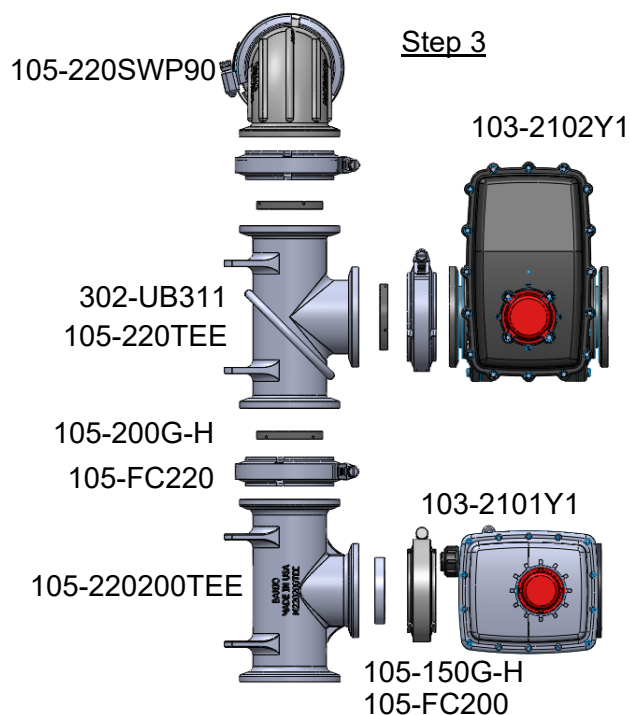
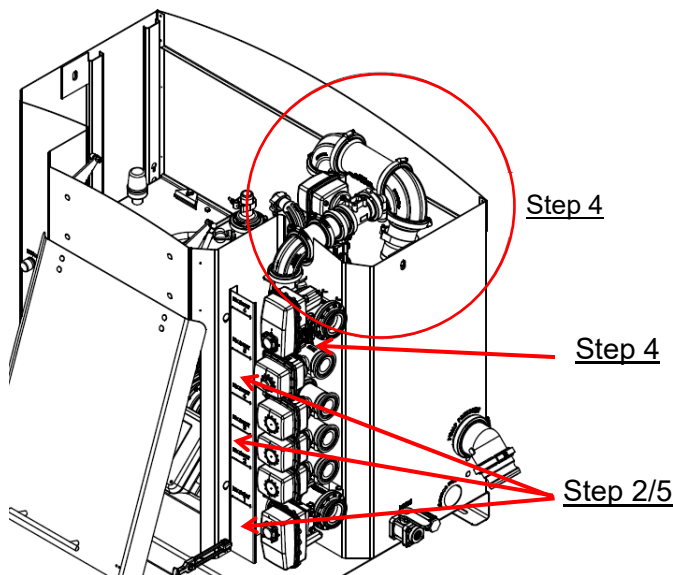


QuickDraw ^{MAX} Dual Large Valve Upgrade Kit			
Item No.	Part Number	Description	Qty
1	103-2101Y1	1" KZ Valve Assembly - CAN Control	1
2	103-2102Y1	2" Valve for KZ QD Valve Assembly - CAN Control	1
3	105-150G-H	1-1/2" EPDM Manifold Gasket for 200 Series Manifold Fittings	1
4	105-200G-H	2" EPDM Manifold Gasket for 220 Series Manifold Fittings	4
5	105-220200TEE	2" Full Port Manifold x 2" Manifold Tee	1
6	105-220SWP90	2" Full Port Manifold Sweep - 90 Degree	1
7	105-220TEE	2" Full Port Manifold Tee	1
8	105-FC200	2" Manifold Clamp	1
9	105-FC220	2" Full Port Manifold Clamp	4
10	280-100-AG200	1" AG200 Bulk	30"
11	302-UB311	M311 U-Bolt Assembly - 1 SS Ubolts, 2 SS Washers, 2 SS Nuts	1
12	475-3218Y1-GY	6 Valve Number Plate (Two Large Valves Option)	1

Step by Step Instructions - 606-07-100400

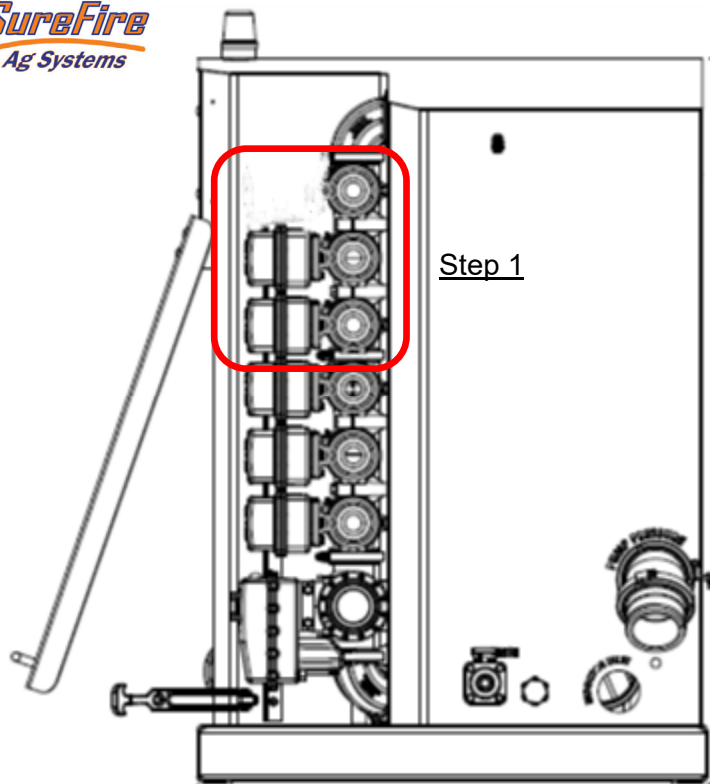

1. Remove mounting bolt, and top clamp and gasket in order to remove top 3-valve manifold, leaving 90° sweep elbow in place. Save clamps and gaskets for re-assembly.
2. Remove 1 valve from the 3-valve manifold and set aside to be reassembled later. Save clamp and gasket for re-assembly.
3. Remove (3) bolts holding the metal product number plate.
4. Assemble upgrade kit components as shown.
5. Reconnect new valve assembly in place using the original clamps/gaskets, check for leaks. Secure in place with the provided U-bolt, mounted across the manifold tee fitting as shown.
6. Using (3) mounting bolts from 6 product number plate, mount the new 475-3218Y1-GY Dual large valve product valve number plate.

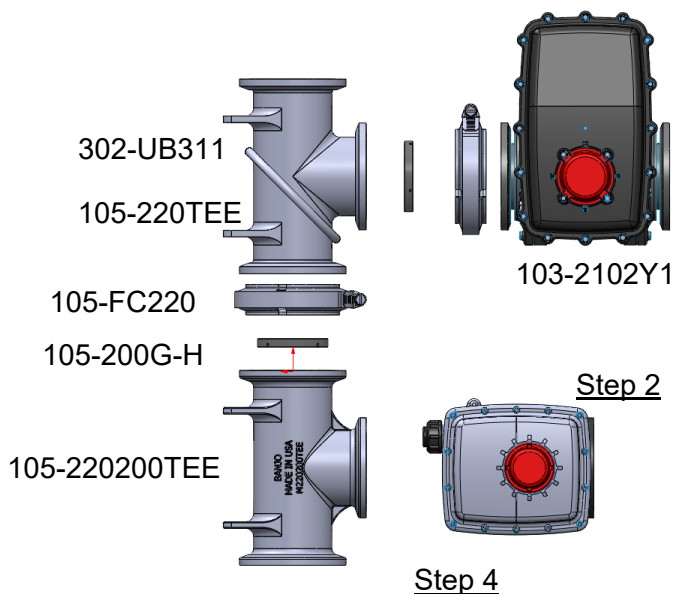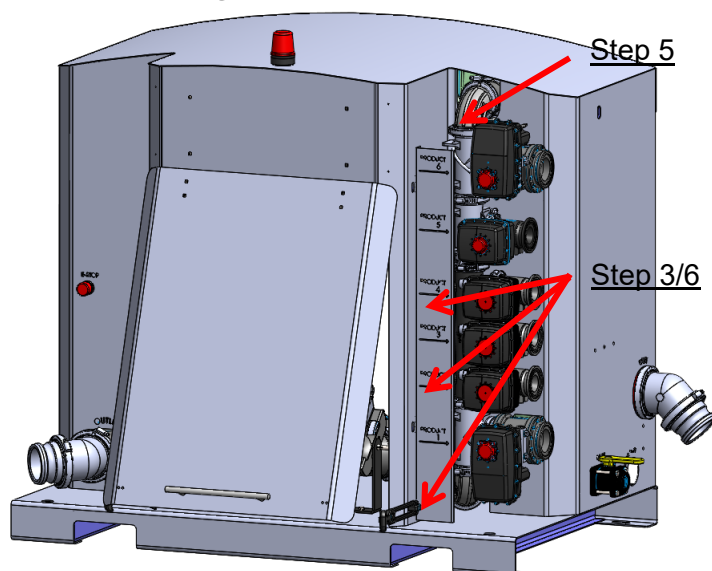

QuickDraw ^{MAX} Dual Large Valve Upgrade Kit			
Item No.	Part Number	Description	Qty
1	103-2102Y1	2" Valve for KZ QD Valve Assembly - CAN Control	1
2	105-200G-H	(FOR FC220s) 2" EPDM Manifold Gasket for 220 Series Manifold Fittings	2
3	105-220200TEE	2" Full Port Manifold x 2" Manifold Tee	1
4	105-220TEE	2" Full Port Tee	1
5	105-FC220	2" Full Port Manifold Clamp	2
6	302-UB311	M311 U-Bolt Assembly - 1 SS Ubolts, 2 SS Washers, 2 SS Nuts	1
7	475-3218Y1-GY	6 Valve Number Plate (Two Large Valves Option)	1

Note: Re-Use existing manifold clamps/gaskets to re-connect new valve tees.