



396-2892Y1


QuickDraw Upgrade from 4-product to 6-product

Kit Number: 606-05-100100



Remove the 4-product panel from beside the valve stack.

After valves 5 and 6 are attached, this panel will be replaced with the new 6-product panel.

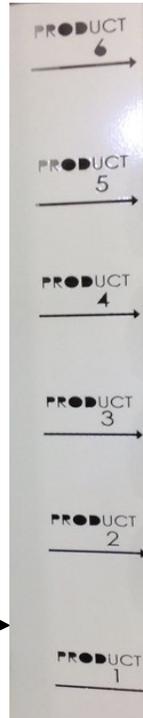

In addition to the valve changes described here, the controller software must be upgraded and the Valve Addresses on valves 5 & 6 must be set.



Remove these two clamps to remove the rinse valve assembly. The rinse valve assembly will go inside the cabinet after valves 5 & 6 are attached.

Valves 5 & 6 will attach on the outside valve stack where the rinse valve assembly was removed.



The rinse valve assembly attaches here (inside the cabinet).

Valves 5&6 attach here



Cut the rinse hose to the proper length