

396-001250




**PumpRight
Fertilizer System
for
Ag Leader
Liquid Product
Control Module
And
Liquid ISO Module
with PWM Control**

Ag Leader &



for PWM Control

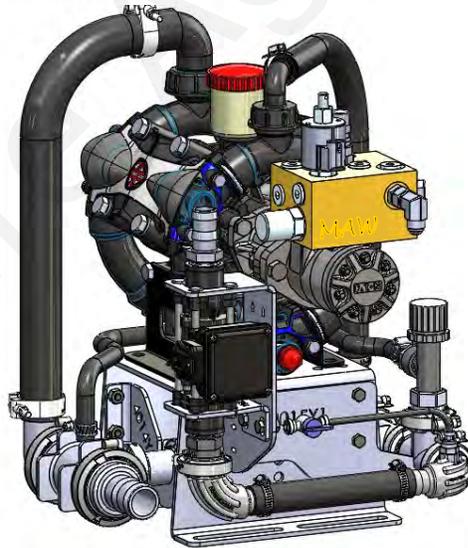

Maximum Pump Flow and Application Rates

	Number of Diaphragms	Max Flow GPM	Max GPA on 40' at 6 MPH	Max GPA on 60' at 6 MPH
PR17	3	17	35	23.5
PR30	3	30	62	41
PR40	4	40	82	55
D250	6	55		75

SureFire Ag Systems



Table Of Contents

Introduction

- Basic Steps to Install your Fertilizer System1
- Complete Fertilizer System Example Drawings2-3

Components - Liquid

- Flowmeters, Section Valves, Pressure Sensor4-7
- Pump Priming and Air Bleed Valve, Recirculation8-9
- Flow Indicators and Manifolds, Check Valves, Orifice Charts10-17
- Dual Check Valve Systems, Row Distribution.....18-21

Components - Wiring & Electrical

- Ag Leader Liquid Product Control Module, Aux Input Module.....22-25
- ISO Liquid Rate and Liquid Swath Control Modules26
- ISO Aux Input and Implement Switch Modules, Gen 2 to Gen 1 Adapter27
- System Schematics.....28
- Wiring Harness Drawings29-33

Installation Overview

- Floating Ball Flow Indicators, PumpRight Pump Installation34-35
- Hydraulic Connections, Hydraulic Oil Flow Requirements36-38
- Liquid Plumbing Connections39-40

Setup & Operation (See this for initial setup and startup)

- Display Setup for LPCM, Configuration Setup, Liquid App Channel Setup41-42
- Controller Setup, Control Valve Settings, Manual Speed Entry43-44
- Pressure Sensor, Swath Control, Aux Input, Equipment Settings45
- Configuration Setup, Product Setup, Equipment Setup46
- Run Screen, Auto Test, Liquid Diagnostics, Manual Test47-49
- InCommand / ISO Liquid Setup50
- Speed Input, Automatic Swath Control, Equipment Configuration51
- Product Setup52
- Equipment Setup—Vehicle, Implement, Controller53
- Controller Settings, Control Valve Settings, ISO Settings, Universal Terminal..54
- UT and Liquid ISO Run Screen, Settings, Calibration.....55-59
- Ag Leader Run Screen for ISO Liquid60-61

Troubleshooting

- Pump Will Not Run, Section Valve Won't Move62-63
- Application Rate Fluctuates, Slow Getting to Target Rate64
- Flowmeter Troubleshooting, Tap Test, Liquid Diagnostics Screen64-66

Maintenance & Parts

- Air Bladder, Winterization, Changing Pump Oil.....67
- **Pre-season Service**68-70
- Valve and Diaphragm Replacement71-73
- Pump Assembly and Parts Breakdowns74
- PWM Valve and Motor Parts75

A

Introduction

BComponents
Liquid**D**Components
Wiring & Elec.**E**Installation
Overview**F**Setup &
Operation**G**Trouble-
Shooting**H**Maintenance
& Parts

SureFire Ag Systems



General Description

A

Introduction

You have purchased a SureFire fertilizer system for your equipment. This system will be controlled by your Ag Leader display and Ag Leader Liquid Product Control Module of Ag Leader Liquid ISO Module, which you will need to purchase from your Ag Leader dealer. The rate controller will adjust the speed of the SureFire PumpRight hydraulic pump based on feedback from the flowmeter and vehicle speed. The system is capable of section control to minimize overlap areas with optional section valves. The system will also use the Ag Leader Aux Input Module and DirectCommand.

Basic Installation Steps

1. Install Ag Leader display, Liquid Product Control Module, Aux Input Module, and DirectCommand per Ag Leader instructions.
2. Open the packages and familiarize yourself with the components. Refer to manual sections B & D for component information.
3. Mount the PumpRight pump and make hydraulic connections. See section E for hydraulic plumbing information.
4. Plumb the tank to the PumpRight inlet. See section E for details.
5. Install the plumbing kit including section valves, flow indicator columns / manifolds, check valves, plumbing to each row unit delivery point. See section B for information on these components.
6. Attach the flowmeter outlet to section valve or manifold inlet. Attach section valve outlets to flow indicator inlets.
7. Attach harnesses as shown in Section D.
8. Setup Controller for SureFire fertilizer system as shown in Section F.
9. Fill system with water, conduct initial operation and tests per Section F.
10. Winterize system with RV Antifreeze if freezing temperatures are expected.
11. Do pre-season service each year as described on pages 72 and 73.


System Overview Example

A

Introduction

The following gives an example of a complete SureFire Fertilizer system with these components:

- Ag Leader Display
- Ag Leader Liquid Product Control Module, Aux Input Module, and DirectCommand
- PumpRight PR17
- Section Valves
- Flow Indicators
- Check Valves with Colored Disc Orifices

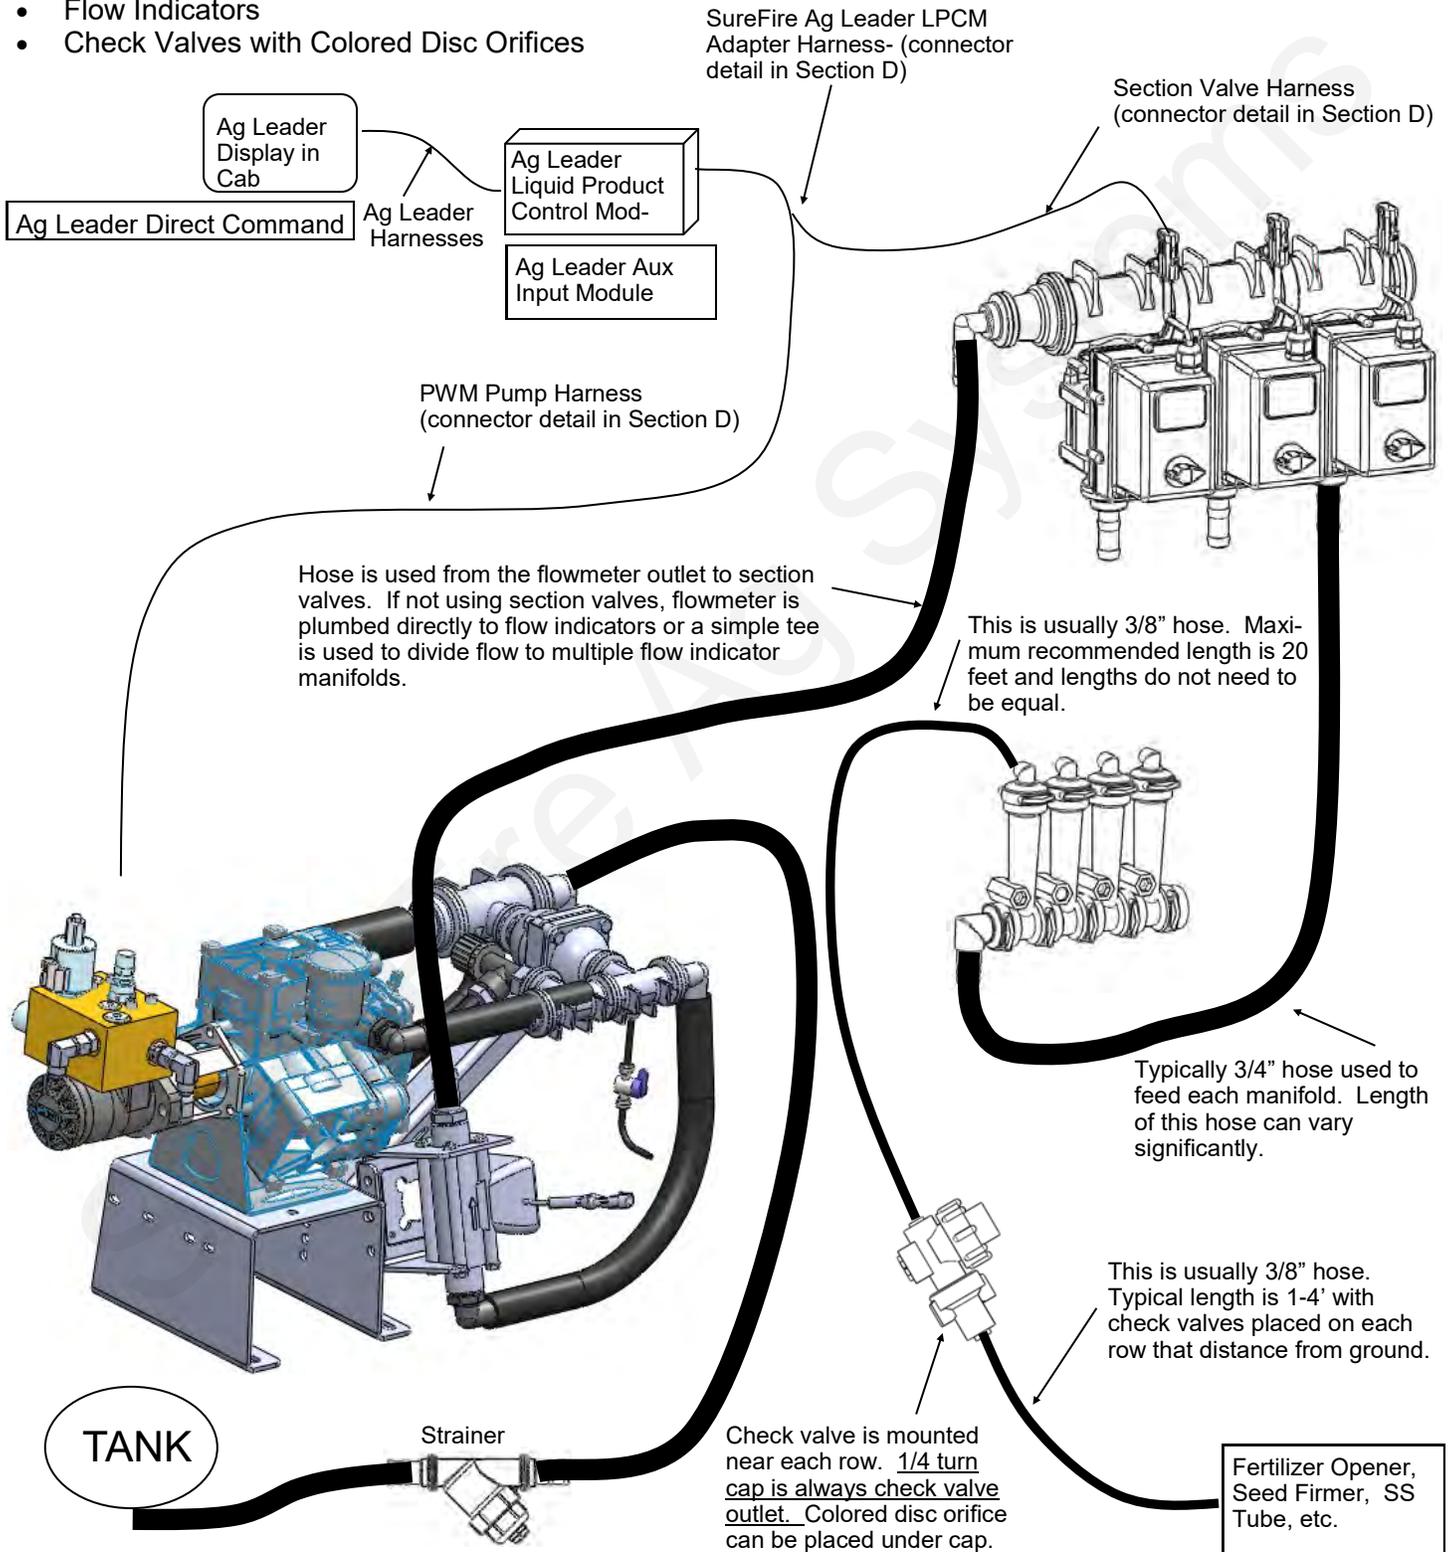


System Overview Example

A Introduction

The following gives an example of a complete SureFire Fertilizer system with LiquiShift and these components:


- John Deere Display
- GreenStar Rate Controller
- PumpRight PR30
- LiquiShift Valve Stack
- Isolated Feed Flow Indicators
- Zip Valves

For complete information on Gen3 LiquiShift, see the Gen3 LiquiShift manual, 396-4608Y1.

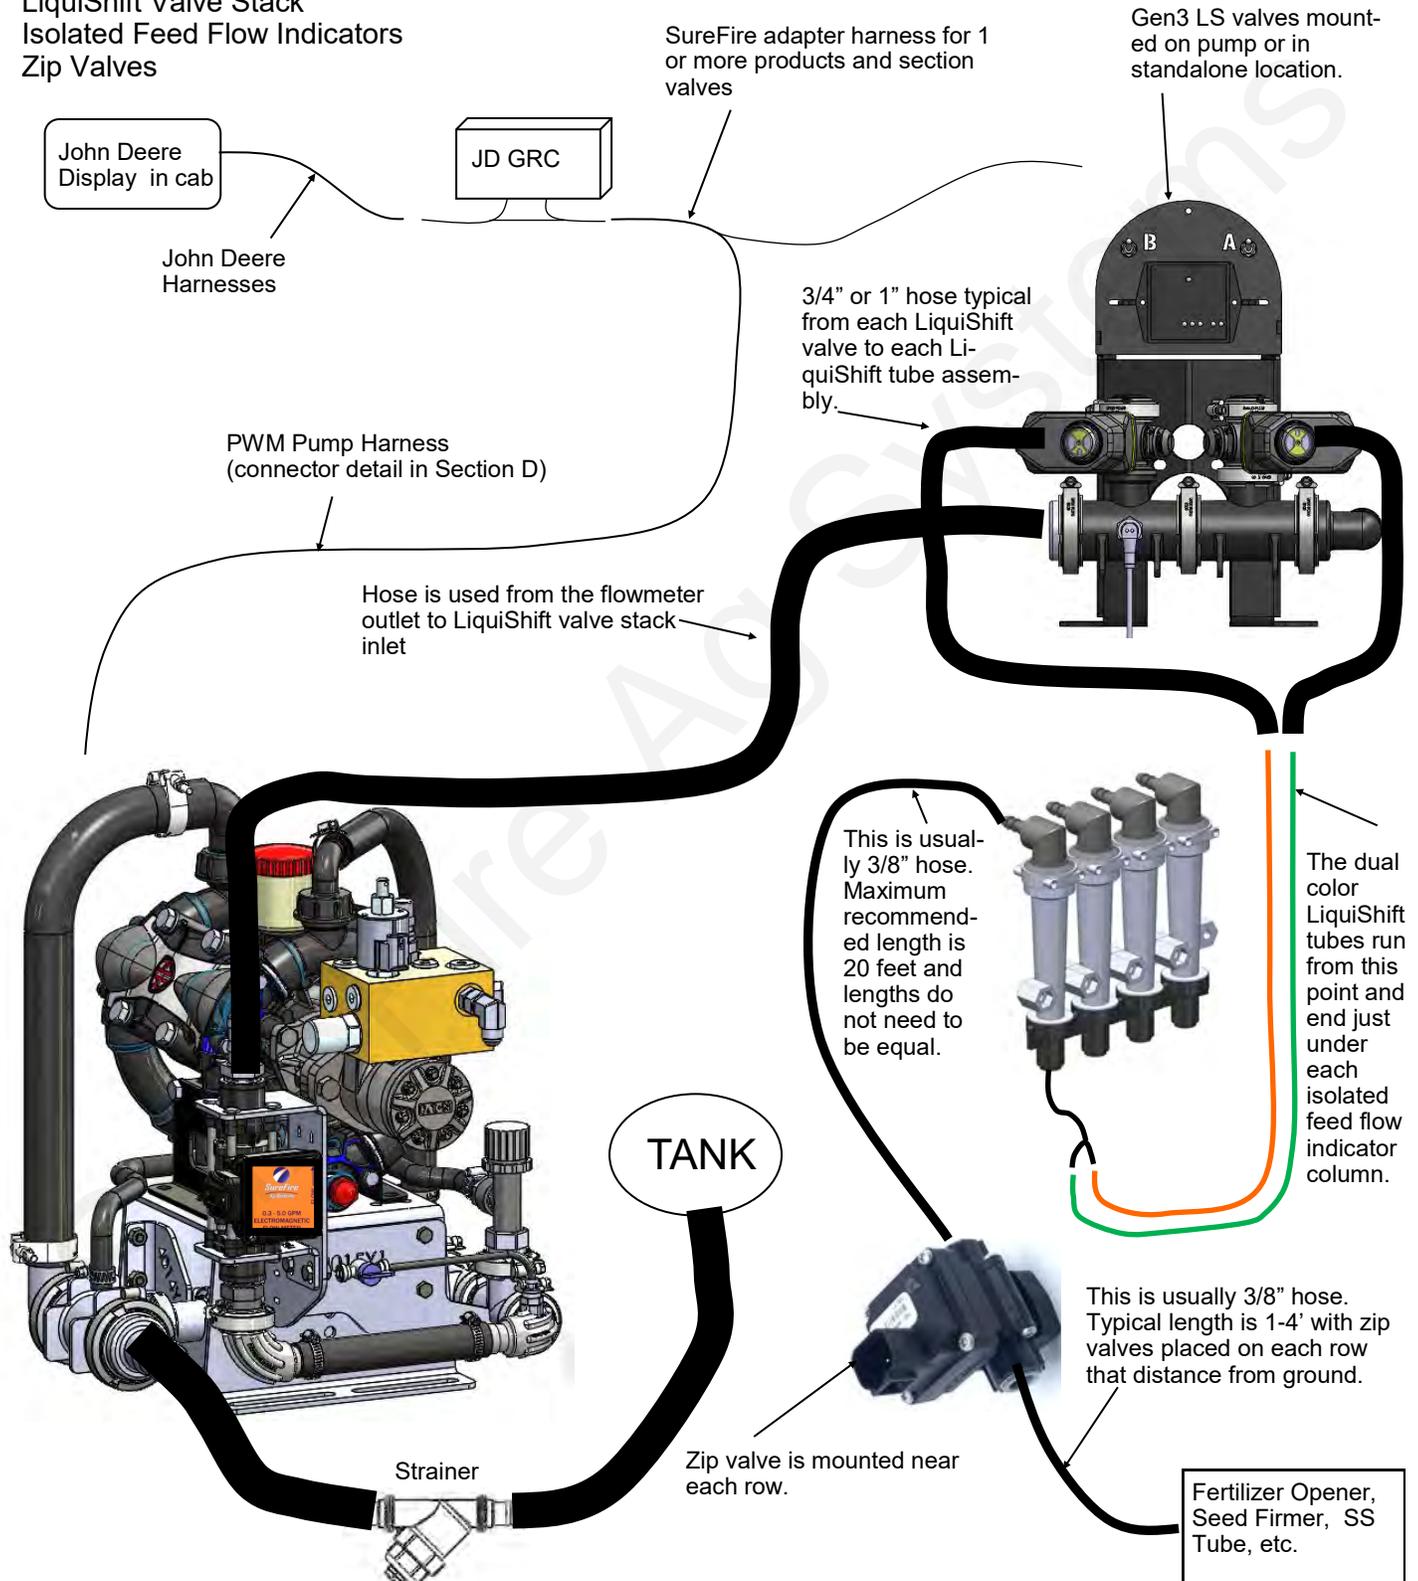

PR17 & PR30 Electromagnetic Flowmeter Kits


- 0.13 - 2.6 GPM Item Number 500-02-2082 (PR17)
- 0.3 - 5.0 GPM Item Number 500-02-2085 (PR17)
- 0.6 - 13 GPM Item Number 500-02-2090 (PR17 & PR30)**
- 1.3 - 26 GPM Item Number 500-02-2095 (PR30)**

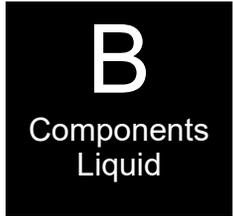

Kits include flowmeter, adapter harness, mounting bracket, hose barb fittings & hose clamps.

-Before doing any arc welding on the implement, unplug the cable to the flowmeter, or damage to the flowmeter may result.


-Do not power wash the flowmeter. High pressure spray directed at the back edge of the face plate or at the wire connector may allow water into the flowmeter electronics.

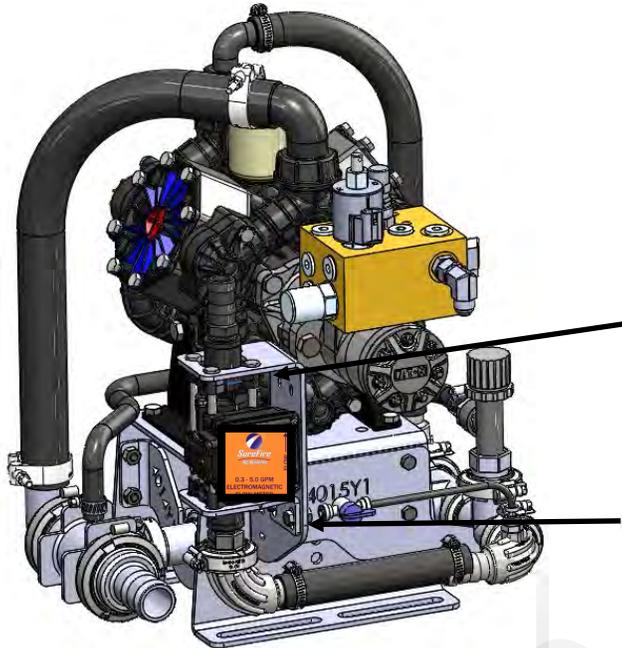

Mounting Bracket, 410-4015Y1 (QTY 1) (not used for PR40 and D250 Pump)

Mounting Bracket, 400-3826Y1 (QTY 1) (not used for PR40 and D250 Pump)

Amp SuperSeal 3-pin connector
Use adapter 201-17842
to connect to 3-pin MP harness

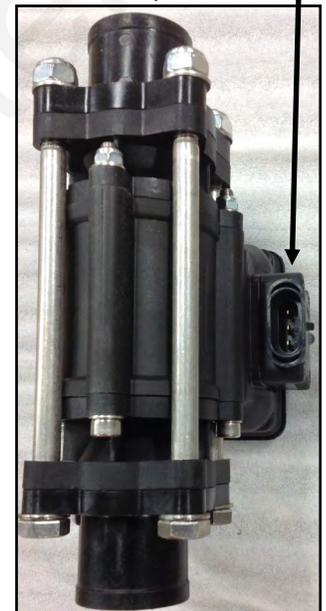

Troubleshooting Tip:



Remove red guard to reach pins. Be careful so you don't break red side keepers.

3-pin MP Tower A- Signal B- 12V Power C- Ground (See the next page for more flowmeter tips)
3-pin AMP SuperSeal 1- Ground 2- 12V Power 3- Signal

Electromagnetic flowmeters are superior to traditional turbine flowmeters in two basic ways. First, they have no moving parts. There are no wear items or potential for contaminants to jam a spinning turbine.

Second, electromagnetic flowmeters detect the flow by electrically measuring the velocity of the liquid, which makes them independent of viscosity or density of the fluid measured. They are extremely accurate using the standard calibration number. **SureFire still recommends you perform a catch test to verify the system is properly installed and configured.**

Flowmeter Model (black meter with orange label)	JD GRC Flow Calibration	FPT Size	Hose Barb In kit
0.13 - 2.6 GPM	3000	3/4"	1"
0.3 - 5 GPM	3000	3/4"	1"
0.6 - 13 GPM	2000	3/4"	1"
1.3 - 26 GPM	2000	1"	1"

The flowmeters will accurately read higher than the rated range.


Earlier model flowmeters (meters with white labels with black text) have different calibration numbers. The flow cal number (pulses per gallon) is printed on the serial number sticker on the side of the flowmeter.



PR40 & D250 Electromagnetic Flowmeter Kit


2.6 - 53 GPM Item Number 500-02-2080

Kits include flowmeter, adapter harness, mounting bracket, hose barb fittings & hose clamps.

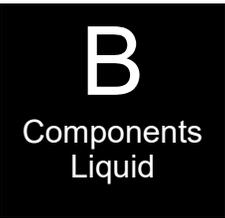


-Before doing any arc welding on the implement, unplug the cable to the flowmeter, or damage to the flowmeter may result.

-Do not power wash the flowmeter. High pressure spray directed at the back edge of the face plate or at the wire connector may allow water into the flowmeter electronics.

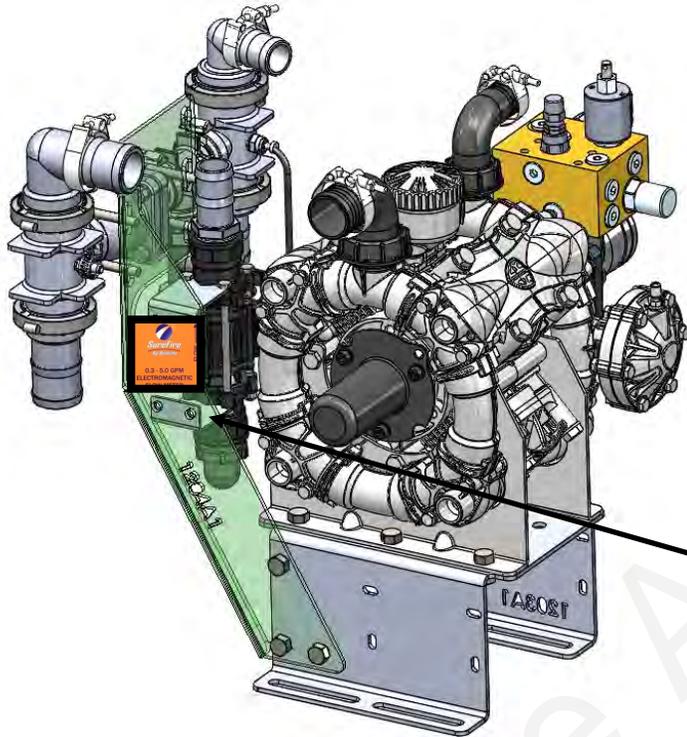

Amp SuperSeal 3-pin connector
Use adapter 201-17842
to connect to 3-pin MP harness

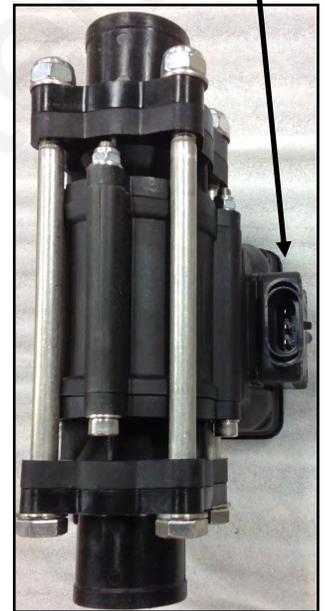

Mounting Bracket,
400-3335Y1 (QTY 2)
(used for PR40 and D250
Pump only)



Remove red guard to reach pins. Be careful so you don't break red side keepers.



Troubleshooting Tip:

3-pin AMP SuperSeal 1- Ground 2- 12V Power 3- Signal

Power to Ground should be 12 volts.

Signal to Ground should be 4.5 to 5 volts

Do Tap Test between Signal and Ground to test harnessing.

3-pin MP Tower A- Signal B- 12V Power C- Ground

Additional Tip:

If flowmeter is not reading and the harnessing has checked out OK with voltage readings and tap test, try cleaning the inside tube of flowmeter with warm soapy water and a soft brush. Sometimes, a film builds up on the electrodes.

Flowmeter Model (black meter with orange label)	JDRC 2000 Flow Calibration	FPT Size	Hose Barb In kit
2.6—53 GPM	2000	1-1/4"	1-1/2"
1.3—26 GPM	2000	1"	1"

The flowmeters will accurately read higher than the rated range.

Earlier model flowmeters (meters with white labels with black text) have different calibration numbers. The flow cal number (pulses per gallon) is printed on the serial number sticker on the side of the flowmeter.

Section Valves and LiquiShift Valves



B
Components
Liquid



105-100PLG (alternate
105-100PLG025 includes 1/4" pipe
thread for gauge)

105-100075BRB90

Note: Ensure back-side port is capped prior to use

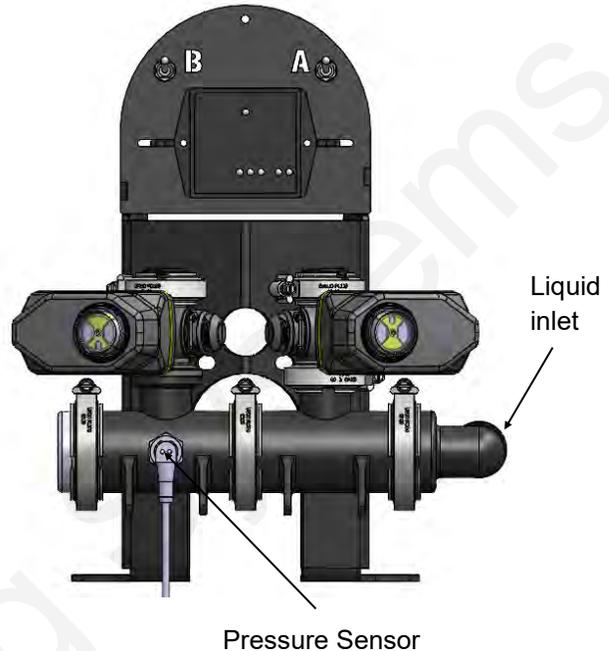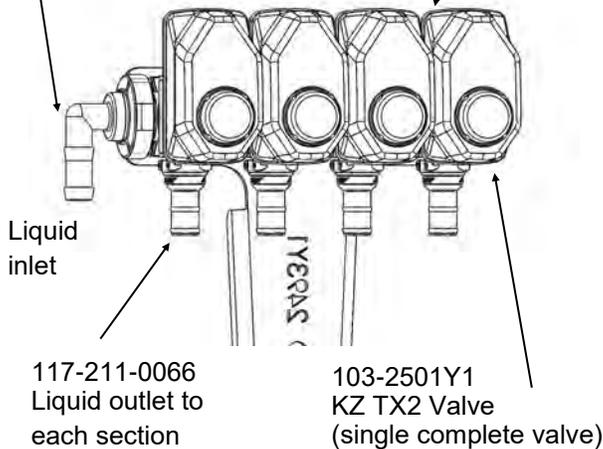

Additional Parts:

- 1" Gasket 105-100G-H
- 1" Clamp 105-FC100

How section valves work

Section valves can be assembled into groups with a common inlet to control flow to each section. Common assemblies use up to 4-6 valves, however, more can be used where practical. Many alternate fittings can be used to accommodate different hose sizes and configurations.

The valves have a 3-pin weather pack electrical connector. This has a power, ground, and switched wire. The power measured to ground should have 12 volts when the controller is on. The switched wire will have 12 volts to turn the valve on, and 0 volts to turn the valve off.

Wiring Connector:
Pin A—Red, 12 Volts +
Pin B—Black, Ground -
Pin C—White, Signal
12V=on ; 0V=off

Mounting Hardware:
2 Valve Bolt Kit
384-1100

Mounting Bracket
400-2493Y1

How LiquiShift Works

LiquiShift is a two-valve manifold specifically built and controlled to provide the operator a very wide flow range for variable rate application. It is valuable for variable rate prescription application or high-speed implements, or variable rate between different fields. LiquiShift has an A and B valve that are opened based on the system pressure.

The valves themselves are identical to a regular section valve (KZ TX2) and have a 3-pin weather pack electrical connector.

The A Valve is connected to a smaller metering tube. The B Valve is connected to a larger metering tube. The LiquiShift controller automatically turns on the A valve, or the B valve, or both valves depending on the flow required.

Gen3 LiquiShift systems on the GRC are available with up to 12 sections depending on the implement.

See also: [Gen3 LiquiShift Manual \(396-4608Y1\)](#)
[Gen2 LiquiShift Manual \(396-4063Y1\)](#)



Pressure Sensor

3 Wire Sensor with 2" Manifold x 1/4" MPT Fitting


B
Components
Liquid

The Ag Leader display has the ability to show fertilizer system pressure from 2 sensors on the display. The SureFire harnesses for the Ag Leader system have a Pressure 1 (Main) connector on both the pump harness and the section harness. Aux Pressure (Pressure 2) is also available on the 2nd section harness if the system has more than 6 sections. The pressure sensor is most often mounted on electric section valves when used in PumpRight systems. The pressure sensor is a 100 psi, 0 to 5 v, 3-wire type sensor for compatibility with the Ag Leader. The sensor has a 1/4" MPT fitting.

Ag Leader displays the system pressure on the in cab controller. **The pressure reading is only for informational purposes and is NOT used in the flow control process.** Flow control uses the flowmeter feedback only.

The pressure sensor is very helpful to optimize system performance and troubleshoot any issues.

The pressure transducer is factory calibrated and will display a very accurate pressure reading on the display. No manual gauge is required.

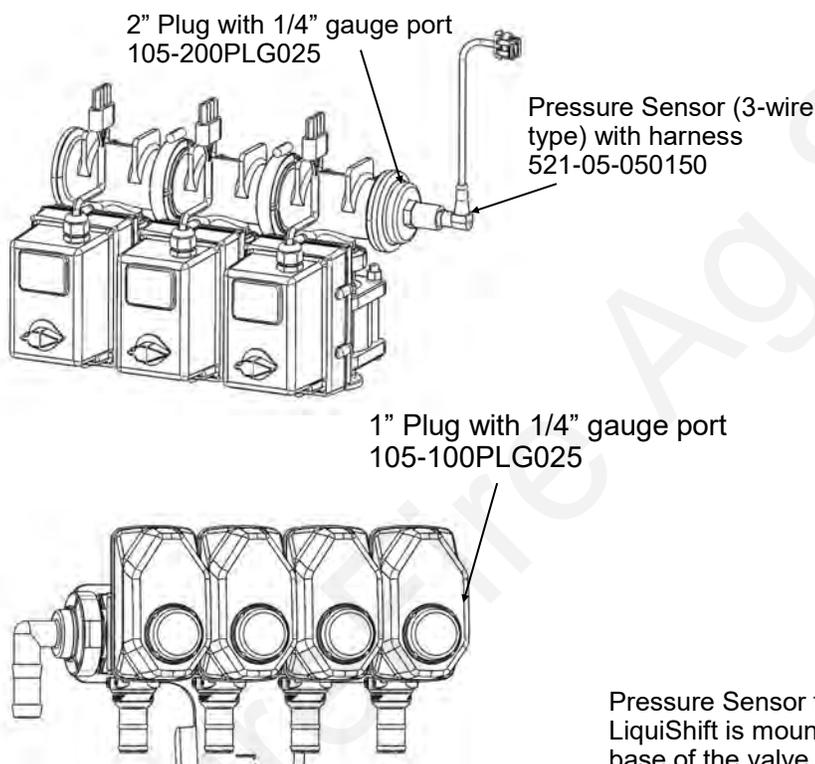

Ag Leader
Pressure Calibration: 50 mv/psi



Pressure Sensor for LiquiShift is mounted at the base of the valve stack. The same sensor is used for LiquiShift and displayed on the Ag Leader display.


Pressure Sensor Hose Tap Kits

When electric section valves or LiquiShift is **not** used in the fertilizer system, the best location to install the pressure sensor is in the hose after it leaves the flowmeter. To use these kits, order the correct kit for your hose size. Then also order the kit above that includes the 2" Manifold x 1/4" MPT fitting.

- 3/4" Hose Pressure Tap 520-00-055800
- 1" Hose Pressure Tap 520-00-055850
- 1 1/2" Hose Pressure Tap 520-00-055900

Pump Priming and Air Bleed Valve

An air bleed valve is included with each pump to aid in system priming. It is shipped in the pump accessories bag and must be installed during system installation.

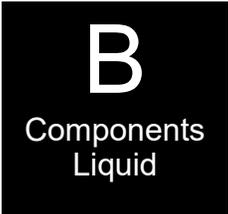

Why use an air bleed valve:

Most fertilizer systems are equipped with a 4 lb or 10 lb check valve on the end of each hose delivering fertilizer to the ground. These valves do not let air escape from the system, unless it is pressurized. PumpRight liquid pumps are not good air compressors. Therefore, the pump can struggle to prime due to air trapped on the outlet side of the pump.

The air bleed valve is a small 1/4" valve that when opened lets air escape from the pump outlet at zero pressure. Open until liquid comes out and then close the valve.

Be sure the air bleed valve tube does not become plugged with dirt or it will not allow air to bleed.


How to install the air bleed valve:

Remove the 1/4" plug from the quick connect fitting on the pump outlet side (see pictures below). Next, insert the 1/4" tubing in the quick connect fitting. Run the 1/4" tubing to an easily accessible spot on your equipment. Next, cut the tubing and push the 1/4" valve onto the tubing. Finally, run the tubing to a low location where any fertilizer that escapes will run on the ground.

Be sure the air bleed valve tube does not become plugged with dirt or it will not allow air to bleed.


PR17 & PR30

Attach 1/4" tubing to 1/4" QC on the 90 deg HB sweep gauge port

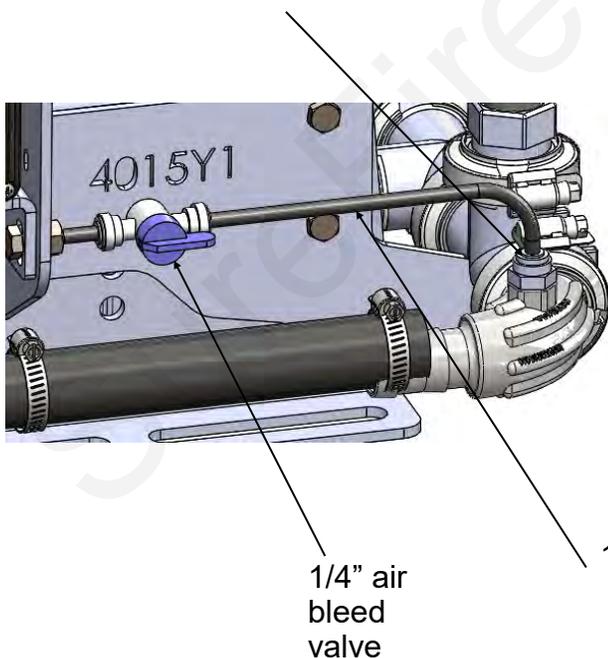

PR40 & D250

Attach 1/4" tubing to 1/4" QC on back side of 1" x 2" tee on outlet side of pump

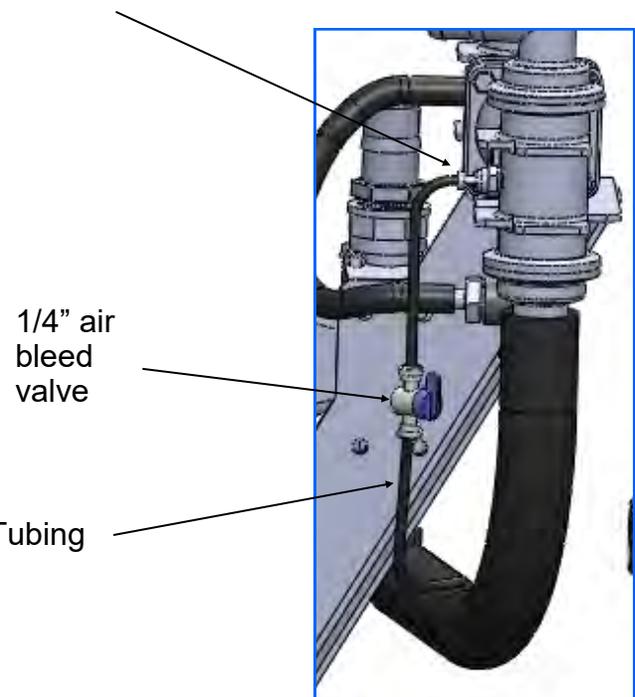

Recirculation & Agitation

A recirculation valve is standard on all 4 PumpRight models outlet plumbing assembly.

B

Components
Liquid

How Recirculation Works:


When running a PumpRight pump at less than 20% of its maximum flow, it sometimes improves system stability to allow the pump to run faster. Opening the recirculation valve diverts some pump flow before the flowmeter, causing the pump to run faster. The application rate is still measured by the flowmeter and everything that passes through the flowmeter is applied to the ground. If the pump is surging at a low flow rate, open the recirculation regulation valve slowly until the pump runs smoothly. Start with a quarter to a half turn. OPENING THE VALVE LOWERS THE MAXIMUM RATE THAT CAN BE APPLIED TO THE GROUND. Close the valve if a higher rate is required.

How to modify for tank agitation:

If tank agitation is required, the recirculation valve can be re-plumbed to divert flow to the tank. All that is required is to remove the 1/2" recirculation hose from the pump. Then replace the 3/8" MPT x 1/2" HB on the inlet side of the pump with a 3/8" plug which is included in your PumpRight accessories bag. Finally, install a longer 1/2" hose from the recirculation valve back to the tank.


PR17 & PR30

Recirculation Regulation Valve,
102-23520-3/4
Start with a quarter to a half turn.

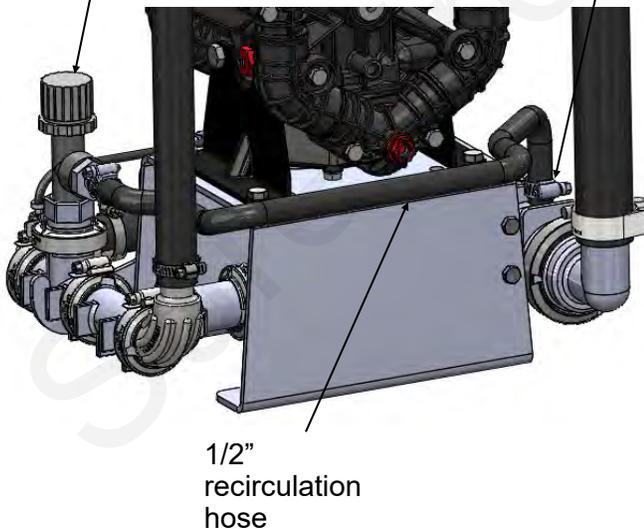

PR40 & D250

Recirculation hose attaches to back of 2" x 1" tee
on pump inlet

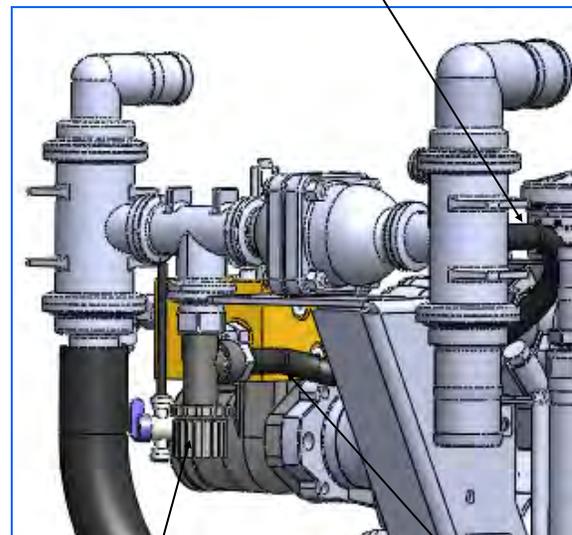

Product Distribution

B

Components
Liquid

To assure proper and even distribution to each row, the product being applied must be metered to each individual row. This metering is done by one of the 3 following methods which create back pressure so an equal amount of liquid is applied to each row:


1. A metering orifice may be placed in the top cap of each floating ball flow indicator. (See photos on page 12. This is not used very often.)
2. A metering orifice may be placed in the check valve cap in the line that leads to each row. (See photo on page 14)
3. A dual metering tube kit with dual check valves may be used. (See pages 18-21)
4. A LiquiShift valve stack may be used that automatically selects which metering tube to use based on system pressure.

Floating Ball Flow Indicator & Manifold System

Flow indicators give a clear visual signal that a fertilizer system is working. These indicators use an o-ring and wire clip connection to snap together in any configuration necessary.

SureFire has simple tee brackets and U-bolts that will mount these to a variety of bar sizes.

Two main types of flow indicators are used. On 30" row spacing, the low flow column with 1/4" push to connect outlet is recommended for rates under 10 GPA. For rates over 10 GPA the full flow column with 3/8" hose barb outlet is preferred.

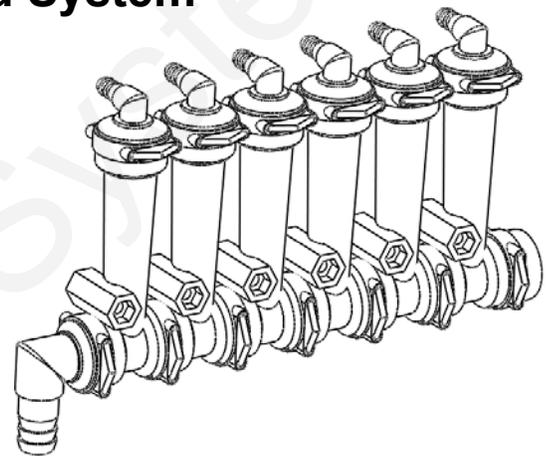

Parts List

Complete Columns

701-20460-950	Single Full Flow Column with 3/8" HB - 90 Degree Outlet
701-20460-940	Single Full Flow Column with 3/8" QC - 90 Degree Outlet
701-20460-960	Single Full Flow Column with 1/2" HB - 90 Degree Outlet
701-20460-935	Single Low Flow Column with 3/8" QC - 90 Degree Outlet
701-20460-920	Single Low Flow Column with 1/4" QC - 90 Degree Outlet

Fittings

701-20503-00	ORS x 3/4" HB - Straight
701-20511-00	ORS x 3/8" HB - 90 Degree
701-20512-00	ORS x 1/2" HB - 90 Degree
701-20513-00	ORS x 3/4" HB - 90 Degree
701-20516-00	ORS x 1/4" QC - 90 Degree
701-20517-00	ORS x 3/8" QC - 90 Degree
701-20518-00	ORS x 1/4" FPT - 90 Degree
701-20519-00	ORS x 1/4" FPT - Straight
701-20520-00	ORS Male x ORS Female - 90 degree
701-20521-00	Wilger End Cap
701-20523-00	ORS Male x ORS Female x 3/8" FPT - Isolator
701-20525-00	ORS Male x ORS Male x 1" FPT - Tee

Service Parts Only

701-20460-02	Wilger Flow Indicator Ball Retainer
701-20460-03	FKM O-Ring for indicator body & fittings
701-20460-04	Wilger Lock U-clip
701-20460-05	Flow Indicator Ball - 1/2" SS Ball
701-20460-06	Flow Indicator Ball - Maroon Glass
701-20460-07	Flow Indicator Ball - Red Celcon
701-20460-08	Flow Indicator Ball - Green Poly
701-20460-09	Flow Indicator Ball - Black Poly
701-20460-15	Viton O-Ring for column & fittings
701-40225-05	Viton O-Ring for Orifice

Brackets & U-Bolts

400-1037A1	3-6 Row Bracket
400-3155Y1	7-12 Row Bracket
400-2011A1	White Backer Plate for 3-6 Row Bracket
400-2010A1	White Backer Plate for 7-12 Row Bracket
400-1315A2	Flow Indicator Bracket, 6-8 in wide hitch mount



Floating Ball Flow Indicators- Full Flow Column (mostly 3/8" HB)

The full flow column is typically used with rates over 10 GPA on 30" rows. For rates less than 10 GPA SureFire recommends the low flow columns with 1/4" push to connect outlet fittings.

The full flow columns are most often assembled with 3/8" hose barb outlets. See the low flow info below for the difference between full and low flow columns.


Full Flow Indicators w/ 3/8" Hose Barb Outlet

Column Flow (GPM):	.05-2.70 GPM
Equivalent Application Rate On 30" Rows at 6 MPH:	2-70 GPA

Ball Selection for 30" Rows

GPM	GPA	Ball
.05-.18	2-6	Green Plastic*
.09-.30	3-10	Red Plastic*
.31-.72	10-20	Maroon Glass
.40-2.1	13-70	Stainless Steel (1/2")

*Plastic balls may float on heavier fertilizers, such as 10-34-0. SureFire recommends using the low flow column for these flow rates.

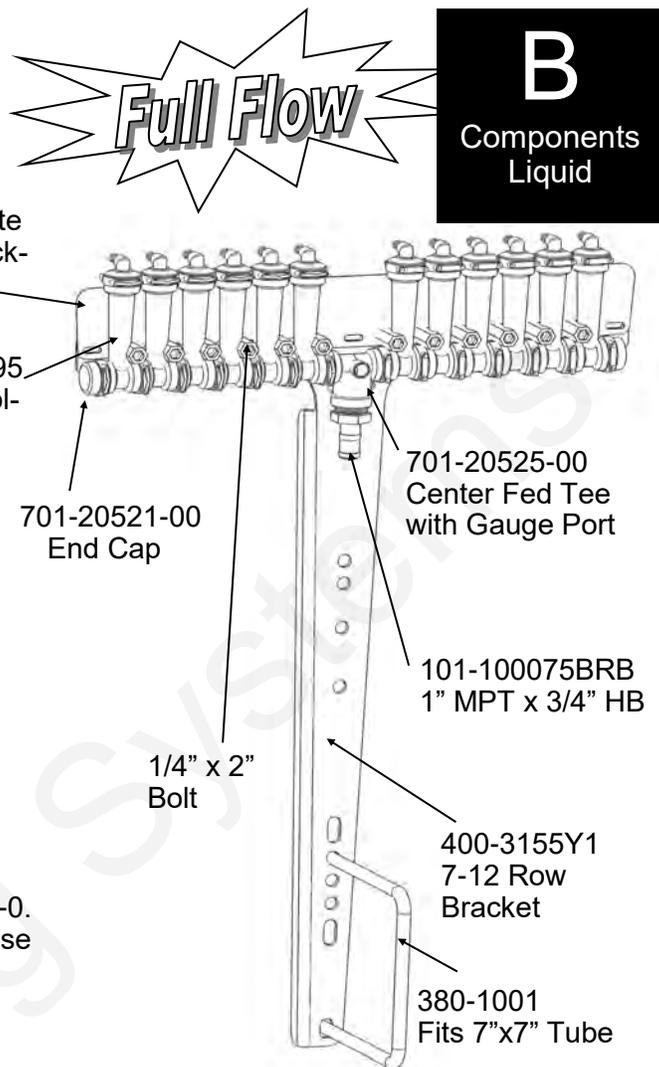

Low Flow Column (mostly 1/4" QC or 3/8" QC)

The low flow column has a smaller internal diameter. This means a heavier ball can be used to monitor a smaller flow.

SureFire uses the low flow columns with 1/4" push to connect outlet fittings. The flow capability of 1/4" tubing and the low flow column are a great pair for rates on 30" rows under 10 GPA.

Externally, the low flow column can only be identified by "Low Flow" molded into one side of the column. All the same fittings work with low flow and full flow columns.


Low Flow Indicators w/ 1/4" Push to Connect Outlet

Column Flow (GPM):	.03-.30 GPM
*** Low Flow Column with 3/8" hose barb	.03 - .70 GPM
Equivalent Application Rate On 30" Rows at 6 MPH (1/4" QC):	1-10 GPA

Ball Selection for 30" Rows


GPM	GPA	Ball
.03-.09	1-3	Green Plastic*
.05-.14	2-4	Red Plastic*
.10-.18	3-6	Maroon Glass
.15-.70	5-10	Stainless Steel (1/2")

*These balls may float on heavier fertilizers, such as 10-34-0. Use Maroon Glass in this case.

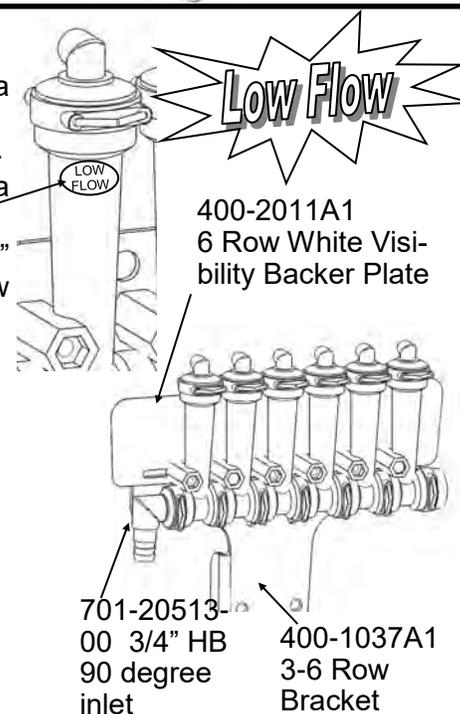

Floating Ball Flow Indicators— Metering Orifice Selection for 30” Rows

See www.surefireag.com for other row spacings

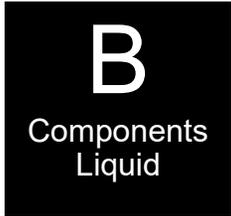

30” Spacing

Orifice	PSI	Gal/Min 28-0-0	MPH						
			4.0	4.5	5.0	5.5	6.0	6.5	7.0
28	10	0.043	2.15	1.91	1.72	1.56	1.43	1.32	1.23
	20	0.061	3.02	2.69	2.42	2.20	2.02	1.86	1.73
	30	0.075	3.72	3.31	2.98	2.71	2.48	2.29	2.13
	40	0.087	4.29	3.82	3.43	3.12	2.86	2.64	2.45
	50	0.097	4.82	4.28	3.85	3.50	3.21	2.97	2.75
	60	0.106	5.26	4.67	4.21	3.82	3.50	3.23	3.00
35	10	0.070	3.46	3.08	2.77	2.52	2.31	2.13	1.98
	20	0.098	4.86	4.32	3.89	3.54	3.24	2.99	2.78
	30	0.120	5.96	5.30	4.77	4.33	3.97	3.67	3.40
	40	0.139	6.88	6.11	5.50	5.00	4.58	4.23	3.93
	50	0.156	7.71	6.85	6.17	5.61	5.14	4.74	4.41
	60	0.170	8.41	7.48	6.73	6.12	5.61	5.18	4.81
40	10	0.090	4.47	3.97	3.57	3.25	2.98	2.75	2.55
	20	0.127	6.31	5.61	5.05	4.59	4.21	3.88	3.60
	30	0.157	7.75	6.89	6.20	5.64	5.17	4.77	4.43
	40	0.181	8.94	7.94	7.15	6.50	5.96	5.50	5.11
	50	0.202	9.99	8.88	7.99	7.26	6.66	6.15	5.71
	60	0.221	10.95	9.73	8.76	7.96	7.30	6.74	6.26
46	10	0.119	5.91	5.26	4.73	4.30	3.94	3.64	3.38
	20	0.169	8.37	7.44	6.69	6.08	5.58	5.15	4.78
	30	0.207	10.25	9.11	8.20	7.45	6.83	6.31	5.86
	40	0.239	11.83	10.51	9.46	8.60	7.88	7.28	6.76
	50	0.267	13.23	11.76	10.58	9.62	8.82	8.14	7.56
	60	0.293	14.50	12.89	11.60	10.55	9.67	8.92	8.29
52	10	0.149	7.36	6.54	5.89	5.35	4.91	4.53	4.21
	20	0.210	10.38	9.23	8.31	7.55	6.92	6.39	5.93
	30	0.257	12.70	11.29	10.16	9.24	8.47	7.82	7.26
	40	0.296	14.67	13.04	11.74	10.67	9.78	9.03	8.39
	50	0.332	16.43	14.60	13.14	11.95	10.95	10.11	9.39
	60	0.363	17.96	15.96	14.37	13.06	11.97	11.05	10.26
63	10	0.218	10.78	9.58	8.62	7.84	7.18	6.63	6.16
	20	0.307	15.20	13.51	12.16	11.05	10.13	9.35	8.69
	30	0.376	18.62	16.55	14.89	13.54	12.41	11.46	10.64
	40	0.435	21.51	19.12	17.21	15.64	14.34	13.24	12.29
	50	0.486	24.05	21.38	19.24	17.49	16.03	14.80	13.74
	60	0.532	26.33	23.40	21.06	19.15	17.55	16.20	15.04
78	10	0.341	16.87	14.99	13.49	12.27	11.24	10.38	9.64
	20	0.481	23.83	21.18	19.06	17.33	15.89	14.66	13.62
	30	0.590	29.22	25.97	23.37	21.25	19.48	17.98	16.70
	40	0.681	33.73	29.98	26.98	24.53	22.49	20.76	19.27
	50	0.762	37.72	33.53	30.17	27.43	25.14	23.21	21.55
	60	0.835	41.31	36.72	33.05	30.04	27.54	25.42	23.60
98	10	0.553	27.38	24.34	21.90	19.91	18.25	16.85	15.64
	20	0.782	38.72	34.42	30.98	28.16	25.82	23.83	22.13
	30	0.956	47.31	42.05	37.85	34.41	31.54	29.11	27.03
	40	1.106	54.76	48.67	43.81	39.82	36.50	33.70	31.29
	50	1.239	61.33	54.51	49.06	44.60	40.88	37.74	35.04
	60	1.354	67.02	59.58	53.62	48.74	44.68	41.24	38.30
107	10	0.649	32.11	28.54	25.69	23.35	21.41	19.76	18.35
	20	0.920	45.56	40.50	36.45	33.13	30.37	28.04	26.03
	30	1.124	55.63	49.45	44.51	40.46	37.09	34.24	31.79
	40	1.301	64.39	57.24	51.52	46.83	42.93	39.63	36.80
	50	1.451	71.84	63.86	57.47	52.25	47.89	44.21	41.05
	60	1.584	78.41	69.70	62.73	57.03	52.27	48.25	44.81
130	10	0.938	46.43	41.27	37.15	33.77	30.96	28.57	26.53
	20	1.319	65.27	58.02	52.22	47.47	43.51	40.17	37.30
	30	1.619	80.16	71.26	64.13	58.30	53.44	49.33	45.81
	40	1.867	92.43	82.16	73.94	67.22	61.62	56.88	52.82
	50	2.088	103.38	91.89	82.70	75.19	68.92	63.62	59.07
	60	2.292	113.46	100.85	90.76	82.51	75.64	69.82	64.83

Pumpright Pressure Recommendations (with 10 lb check valves):


- Minimum 20 PSI
- Maximum 80 PSI

Tower Electric Pump Pressure Recommendations (with 4 lb check valves):

- Minimum 10 PSI
- Maximum 30 PSI

Chart is for 28-0-0 Fertilizer @ 70°

- Heavier fertilizers (like 10-34-0) will have 5-15% less flow than chart indicates for a certain pressure
- Cold fertilizers will cause system pressure to increase at a given application rate.
- Tower Electric Pump Systems will have reduced flow and increased electrical current draw due to cold fertilizer increasing operating pressure. **Use the largest orifice possible for cold weather operation.**

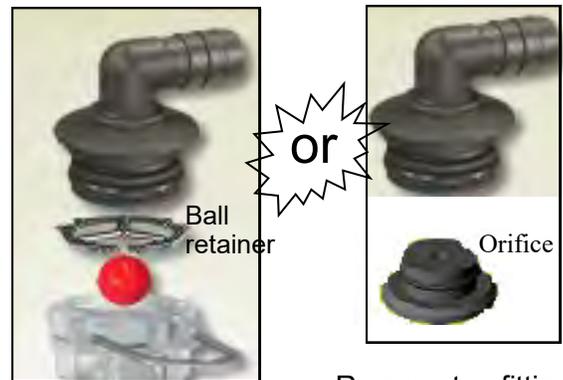

If using a metering orifice in the flow indicator, the orifice replaces the ball retainer. If not using an orifice here, the ball retainer must be in place.


Remove top fitting of each column. Then push the metering orifice into bottom of each outlet fitting. (*This is not used very often.*)

All application rates (gallons/acres) are estimates based on 0-28-0 (10.65 lbs/gallon) at 70 degrees F.





Check Valves

10 lb check valve with 3/8" hose barbs


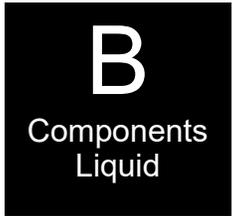


The recommended check valve for most **PumpRight** installations is the 10 lb check with 3/8" hose barbs. This works with 3/8" rubber hose which SureFire recommends for most applications over 10 GPA on 30" rows. The recommended minimum system operating pressure for this check is 20 psi, to ensure all checks open fully.

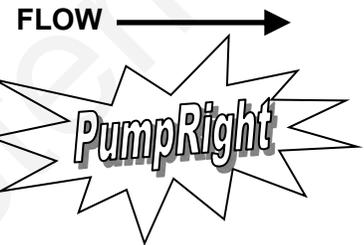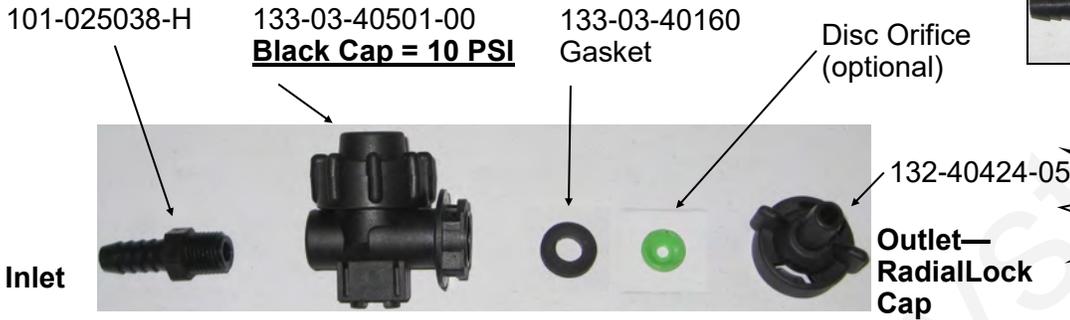

4 lb check valve with 1/4" quick connect fittings

4 lb check valves are typically used with **electric pump systems**. SureFire recommends this valve for use with 1/4" tubing applying up to 10 GPA on 30" rows. The recommended minimum system operating pressure for this check is 10 psi, to ensure all checks open fully.

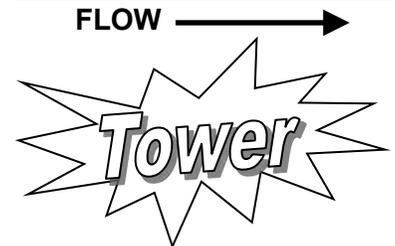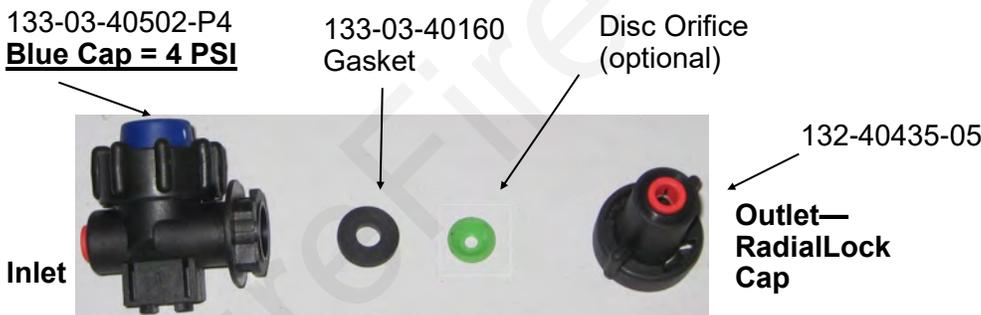

Special Purpose Check Valve Assemblies

Assembly Part Number	Description	Suggested Uses (30" rows)
136-10-04QC04QC	1/4" QC x 1/4" QC 10 lb	< 10 GPA with PumpRight & 1/4" Tubing
136-10-06QC06QC	3/8" QC x 3/8" QC 10 lb	With 3/8" tubing plumbing
136-04-06HB06HB	3/8" HB x 3/8" HB 4 lb	> 10 GPA with Electric Pumps
136-04-08HB08HB	1/2" HB x 1/2" HB 4 lb	> 50 GPA with PumpRight
136-10-08HB08HB	1/2" HB x 1/2" HB 10 lb	> 50 GPA with PumpRight

Colored Disc Orifice Chart for 30" rows

Download the SureFire Flow Calculator App for iPad

B

Components
Liquid

30" Spacing

Orifice Color (Approx Size)	PSI	Gal/Min	MPH						
		28-0-0	4.0	4.5	5.0	5.5	6.0	6.5	7.0
Pink (24)	10	0.033	1.62	1.44	1.30	1.18	1.08	1.00	0.93
	20	0.046	2.28	2.02	1.82	1.66	1.52	1.40	1.30
	30	0.057	2.80	2.49	2.24	2.04	1.87	1.73	1.60
	40	0.065	3.24	2.88	2.59	2.36	2.16	1.99	1.85
	50	0.073	3.64	3.23	2.91	2.64	2.42	2.24	2.08
	60	0.081	3.99	3.54	3.19	2.90	2.66	2.45	2.28
Gray (30)	10	0.050	2.50	2.22	2.00	1.82	1.66	1.54	1.43
	20	0.072	3.55	3.15	2.84	2.58	2.37	2.18	2.03
	30	0.088	4.34	3.85	3.47	3.15	2.89	2.67	2.48
	40	0.101	4.99	4.44	4.00	3.63	3.33	3.07	2.85
	50	0.112	5.56	4.95	4.45	4.05	3.71	3.42	3.18
	60	0.124	6.13	5.45	4.91	4.46	4.09	3.77	3.50
Black (35)	10	0.070	3.46	3.08	2.77	2.52	2.31	2.13	1.98
	20	0.098	4.86	4.32	3.89	3.54	3.24	2.99	2.78
	30	0.120	5.96	5.30	4.77	4.33	3.97	3.67	3.40
	40	0.139	6.88	6.11	5.50	5.00	4.58	4.23	3.93
	50	0.156	7.71	6.85	6.17	5.61	5.14	4.74	4.41
	60	0.170	8.41	7.48	6.73	6.12	5.61	5.18	4.81
Brown (41)	10	0.094	4.64	4.13	3.71	3.38	3.10	2.86	2.65
	20	0.132	6.53	5.80	5.22	4.75	4.35	4.02	3.73
	30	0.162	8.02	7.13	6.41	5.83	5.34	4.93	4.58
	40	0.187	9.24	8.22	7.39	6.72	6.16	5.69	5.28
	50	0.209	10.34	9.19	8.27	7.52	6.89	6.36	5.91
	60	0.228	11.30	10.05	9.04	8.22	7.53	6.95	6.46
Orange (46)	10	0.119	5.91	5.26	4.73	4.30	3.94	3.64	3.38
	20	0.169	8.37	7.44	6.69	6.08	5.58	5.15	4.78
	30	0.207	10.25	9.11	8.20	7.45	6.83	6.31	5.86
	40	0.239	11.83	10.51	9.46	8.60	7.88	7.28	6.76
	50	0.267	13.23	11.76	10.58	9.62	8.82	8.14	7.56
	60	0.293	14.50	12.89	11.60	10.55	9.67	8.92	8.29
Maroon (52)	10	0.149	7.36	6.54	5.89	5.35	4.91	4.53	4.21
	20	0.210	10.38	9.23	8.31	7.55	6.92	6.39	5.93
	30	0.257	12.70	11.29	10.16	9.24	8.47	7.82	7.26
	40	0.296	14.67	13.04	11.74	10.67	9.78	9.03	8.39
	50	0.332	16.43	14.60	13.14	11.95	10.95	10.11	9.39
	60	0.363	17.96	15.96	14.37	13.06	11.97	11.05	10.26
Red (63)	10	0.218	10.78	9.58	8.62	7.84	7.18	6.63	6.16
	20	0.307	15.20	13.51	12.16	11.05	10.13	9.35	8.69
	30	0.376	18.62	16.55	14.89	13.54	12.41	11.46	10.64
	40	0.435	21.51	19.12	17.21	15.64	14.34	13.24	12.29
	50	0.486	24.05	21.38	19.24	17.49	16.03	14.80	13.74
	60	0.532	26.33	23.40	21.06	19.15	17.55	16.20	15.04
Blue (80)	10	0.351	17.39	15.46	13.91	12.65	11.59	10.70	9.94
	20	0.496	24.57	21.84	19.66	17.87	16.38	15.12	14.04
	30	0.608	30.09	26.75	24.08	21.89	20.06	18.52	17.20
	40	0.702	34.74	30.88	27.79	25.26	23.16	21.38	19.85
	50	0.785	38.86	34.54	31.08	28.26	25.90	23.91	22.20
	60	0.859	42.53	37.81	34.03	30.93	28.36	26.18	24.31
Yellow (95)	10	0.506	25.06	22.27	20.05	18.22	16.70	15.42	14.32
	20	0.715	35.39	31.46	28.32	25.74	23.60	21.78	20.23
	30	0.876	43.37	38.55	34.69	31.54	28.91	26.69	24.78
	40	1.009	49.94	44.39	39.95	36.32	33.29	30.73	28.54
	50	1.133	56.07	49.84	44.86	40.78	37.38	34.51	32.04
	60	1.239	61.33	54.51	49.06	44.60	40.88	37.74	35.04
Green (110)	10	0.686	33.95	30.18	27.16	24.69	22.63	20.89	19.40
	20	0.973	48.19	42.83	38.55	35.04	32.12	29.65	27.53
	30	1.186	58.70	52.18	46.96	42.69	39.13	36.12	33.54
	40	1.372	67.90	60.35	54.32	49.38	45.27	41.78	38.80
	50	1.531	75.78	67.36	60.63	55.12	50.52	46.64	43.30
	60	1.681	83.23	73.98	66.58	60.53	55.49	51.22	47.56

PumpRight Pressure Recommendations (with 10 lb check valves):

- Minimum 20 PSI
- Maximum 80 PSI


Tower Electric Pump Pressure Recommendations (with 4 lb check valves):

- Minimum 10 PSI
- Maximum 30 PSI

Chart is for 28-0-0 Fertilizer @ 70°


- Heavier fertilizers (like 10-34-0) will have 5-15% less flow than chart indicates for a certain pressure
- Cold fertilizers will cause system pressure to increase at a given application rate.
- Tower Electric Pump Systems will have reduced flow and increased electrical current draw due to cold fertilizer increasing operating pressure. **Use the largest orifice possible for cold weather operation.**

Colored Disc Orifice assemblies under the check valve cap in most cases. (Drop the orifice with the hole down into the cap, then put the gasket on top of it.) The orifice can also be installed in a manifold (common on grain drills).

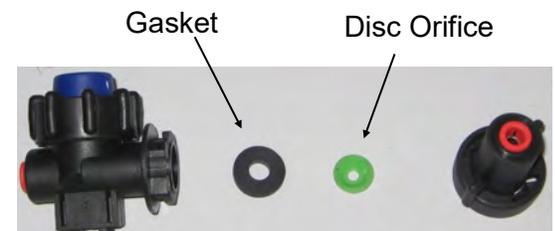

FLOW → 1/4 Turn Cap is Outlet

Colored Disc Orifice Chart Common Grain Drill Row Spacings

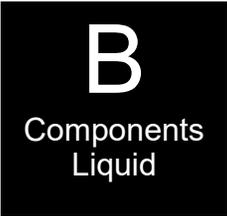

7.5" Spacing

Orifice Color (Approx Size)	PSI	Gal/Min 28-0-0	MPH						
			4.0	4.5	5.0	5.5	6.0	6.5	7.0
Pink (24)	10	0.033	6.5	5.8	5.2	4.7	4.3	4.0	3.7
	20	0.046	9.1	8.1	7.3	6.6	6.1	5.6	5.2
	30	0.057	11.2	10.0	9.0	8.2	7.5	6.9	6.4
	40	0.065	13.0	11.5	10.4	9.4	8.6	8.0	7.4
	50	0.073	14.5	12.9	11.6	10.6	9.7	8.9	8.3
	60	0.081	15.9	14.2	12.8	11.6	10.6	9.8	9.1
Gray (30)	10	0.050	10.0	8.9	8.0	7.3	6.7	6.1	5.7
	20	0.072	14.2	12.6	11.4	10.3	9.5	8.7	8.1
	30	0.088	17.3	15.4	13.9	12.6	11.6	10.7	9.9
	40	0.101	20.0	17.8	16.0	14.5	13.3	12.3	11.4
	50	0.112	22.3	19.8	17.8	16.2	14.8	13.7	12.7
	60	0.124	24.5	21.8	19.6	17.8	16.4	15.1	14.0
Black (35)	10	0.070	13.8	12.3	11.1	10.1	9.2	8.5	7.9
	20	0.098	19.4	17.3	15.6	14.1	13.0	12.0	11.1
	30	0.120	23.8	21.2	19.1	17.3	15.9	14.7	13.6
	40	0.139	27.5	24.5	22.0	20.0	18.3	16.9	15.7
	50	0.156	30.8	27.4	24.7	22.4	20.6	19.0	17.6
	60	0.170	33.6	29.9	26.9	24.5	22.4	20.7	19.2
Brown (41)	10	0.094	19	17	15	14	12	11	11
	20	0.132	26	23	21	19	17	16	15
	30	0.162	32	29	26	23	21	20	18
	40	0.187	37	33	30	27	25	23	21
	50	0.209	41	37	33	30	28	25	24
	60	0.228	45	40	36	33	30	28	26
Orange (46)	10	0.119	24	21	19	17	16	15	14
	20	0.169	33	30	27	24	22	21	19
	30	0.207	41	36	33	30	27	25	23
	40	0.239	47	42	38	34	32	29	27
	50	0.267	53	47	42	38	35	33	30
	60	0.293	58	52	46	42	39	36	33
Maroon (52)	10	0.149	29	26	24	21	20	18	17
	20	0.210	42	37	33	30	28	26	24
	30	0.257	51	45	41	37	34	31	29
	40	0.296	59	52	47	43	39	36	34
	50	0.332	66	58	53	48	44	40	38
	60	0.363	72	64	57	52	48	44	41
Red (63)	10	0.218	43	38	34	31	29	27	25
	20	0.307	61	54	49	44	41	37	35
	30	0.376	74	66	60	54	50	46	43
	40	0.435	86	76	69	63	57	53	49
	50	0.486	96	86	77	70	64	59	55
	60	0.532	105	94	84	77	70	65	60
Blue (80)	10	0.351	70	62	56	51	46	43	40
	20	0.496	98	87	79	71	66	60	56
	30	0.608	120	107	96	88	80	74	69
	40	0.702	139	124	111	101	93	86	79
	50	0.785	155	138	124	113	104	96	89
	60	0.859	170	151	136	124	113	105	97
Yellow (95)	10	0.506	100	89	80	73	67	62	57
	20	0.715	142	126	113	103	94	87	81
	30	0.876	173	154	139	126	116	107	99
	40	1.009	200	178	160	145	133	123	114
	50	1.133	224	199	179	163	150	138	128
	60	1.239	245	218	196	178	164	151	140

All application rates (gallons/acres) are estimates based on 0-28-0 (10.65 lbs/gallon) at 70 degrees F

10" Spacing

Orifice Color (Approx Size)	PSI	Gal/Min 28-0-0	MPH						
			4.0	4.5	5.0	5.5	6.0	6.5	7.0
Pink (24)	10	0.033	4.9	4.3	3.9	3.5	3.2	3.0	2.8
	20	0.046	6.8	6.1	5.5	5.0	4.6	4.2	3.9
	30	0.057	8.4	7.5	6.7	6.1	5.6	5.2	4.8
	40	0.065	9.7	8.6	7.8	7.1	6.5	6.0	5.6
	50	0.073	10.9	9.7	8.7	7.9	7.3	6.7	6.2
	60	0.081	12.0	10.6	9.6	8.7	8.0	7.4	6.8
Gray (30)	10	0.050	7.5	6.7	6.0	5.4	5.0	4.6	4.3
	20	0.072	10.6	9.5	8.5	7.7	7.1	6.6	6.1
	30	0.088	13.0	11.6	10.4	9.5	8.7	8.0	7.4
	40	0.101	15.0	13.3	12.0	10.9	10.0	9.2	8.6
	50	0.112	16.7	14.8	13.4	12.1	11.1	10.3	9.5
	60	0.124	18.4	16.4	14.7	13.4	12.3	11.3	10.5
Black (35)	10	0.070	10.4	9.2	8.3	7.6	6.9	6.4	5.9
	20	0.098	14.6	13.0	11.7	10.6	9.7	9.0	8.3
	30	0.120	17.9	15.9	14.3	13.0	11.9	11.0	10.2
	40	0.139	20.6	18.3	16.5	15.0	13.8	12.7	11.8
	50	0.156	23.1	20.6	18.5	16.8	15.4	14.2	13.2
	60	0.170	25.2	22.4	20.2	18.4	16.8	15.5	14.4
Brown (41)	10	0.094	14	12	11	10	9	9	8
	20	0.132	20	17	16	14	13	12	11
	30	0.162	24	21	19	17	16	15	14
	40	0.187	28	25	22	20	18	17	16
	50	0.209	31	28	25	23	21	19	18
	60	0.228	34	30	27	25	23	21	19
Orange (46)	10	0.119	18	16	14	13	12	11	10
	20	0.169	25	22	20	18	17	15	14
	30	0.207	31	27	25	22	21	19	18
	40	0.239	35	32	28	26	24	22	20
	50	0.267	40	35	32	29	26	24	23
	60	0.293	43	39	35	32	29	27	25
Maroon (52)	10	0.149	22	20	18	16	15	14	13
	20	0.210	31	28	25	23	21	19	18
	30	0.257	38	34	30	28	25	23	22
	40	0.296	44	39	35	32	29	27	25
	50	0.332	49	44	39	36	33	30	28
	60	0.363	54	48	43	39	36	33	31
Red (63)	10	0.218	32	29	26	24	22	20	18
	20	0.307	46	41	36	33	30	28	26
	30	0.376	56	50	45	41	37	34	32
	40	0.435	65	57	52	47	43	40	37
	50	0.486	72	64	58	52	48	44	41
	60	0.532	79	70	63	57	53	49	45
Blue (80)	10	0.351	52	46	42	38	35	32	30
	20	0.496	74	66	59	54	49	45	42
	30	0.608	90	80	72	66	60	56	52
	40	0.702	104	93	83	76	69	64	60
	50	0.785	117	104	93	85	78	72	67
	60	0.859	128	113	102	93	85	79	73
Yellow (95)	10	0.506	75	67	60	55	50	46	43
	20	0.715	106	94	85	77	71	65	61
	30	0.876	130	116	104	95	87	80	74
	40	1.009	150	133	120	109	100	92	86
	50	1.133	168	150	135	122	112	104	96
	60	1.239	184	164	147	134	123	113	105

All application rates (gallons/acres) are estimates based on 0-28-0 (10.65 lbs/gallon) at 70 degrees F



Colored Disc Orifice Chart

15" Spacing

15" Spacing

15" Spacing

Orifice Color (Approx Size)	PSI	Gal/Min 28-0-0	MPH						
			4.0	4.5	5.0	5.5	6.0	6.5	7.0
Pink (24)	10	0.033	3.2	2.9	2.6	2.4	2.2	2.0	1.9
	20	0.046	4.6	4.0	3.6	3.3	3.0	2.8	2.6
	30	0.057	5.6	5.0	4.5	4.1	3.7	3.5	3.2
	40	0.065	6.5	5.8	5.2	4.7	4.3	4.0	3.7
	50	0.073	7.3	6.5	5.8	5.3	4.8	4.5	4.2
	60	0.081	8.0	7.1	6.4	5.8	5.3	4.9	4.6
Gray (30)	10	0.050	5.0	4.4	4.0	3.6	3.3	3.1	2.9
	20	0.072	7.1	6.3	5.7	5.2	4.7	4.4	4.1
	30	0.088	8.7	7.7	6.9	6.3	5.8	5.3	5.0
	40	0.101	10.0	8.9	8.0	7.3	6.7	6.1	5.7
	50	0.112	11.1	9.9	8.9	8.1	7.4	6.8	6.4
	60	0.124	12.3	10.9	9.8	8.9	8.2	7.5	7.0
Black (35)	10	0.070	6.9	6.2	5.5	5.0	4.6	4.3	4.0
	20	0.098	9.7	8.6	7.8	7.1	6.5	6.0	5.6
	30	0.120	11.9	10.6	9.5	8.7	7.9	7.3	6.8
	40	0.139	13.8	12.2	11.0	10.0	9.2	8.5	7.9
	50	0.156	15.4	13.7	12.3	11.2	10.3	9.5	8.8
	60	0.170	16.8	15.0	13.5	12.2	11.2	10.4	9.6
Brown (41)	10	0.094	9.3	8.3	7.4	6.8	6.2	5.7	5.3
	20	0.132	13.1	11.6	10.4	9.5	8.7	8.0	7.5
	30	0.162	16.0	14.3	12.8	11.7	10.7	9.9	9.2
	40	0.187	18.5	16.4	14.8	13.4	12.3	11.4	10.6
	50	0.209	20.7	18.4	16.5	15.0	13.8	12.7	11.8
	60	0.228	22.6	20.1	18.1	16.4	15.1	13.9	12.9
Orange (46)	10	0.119	11.8	10.5	9.5	8.6	7.9	7.3	6.8
	20	0.169	16.7	14.9	13.4	12.2	11.2	10.3	9.6
	30	0.207	20.5	18.2	16.4	14.9	13.7	12.6	11.7
	40	0.239	23.7	21.0	18.9	17.2	15.8	14.6	13.5
	50	0.267	26.5	23.5	21.2	19.2	17.6	16.3	15.1
	60	0.293	29.0	25.8	23.2	21.1	19.3	17.8	16.6
Maroon (52)	10	0.149	15	13	12	11	10	9	8
	20	0.210	21	18	17	15	14	13	12
	30	0.257	25	23	20	18	17	16	15
	40	0.296	29	26	23	21	20	18	17
	50	0.332	33	29	26	24	22	20	19
	60	0.363	36	32	29	26	24	22	21
Red (63)	10	0.218	22	19	17	16	14	13	12
	20	0.307	30	27	24	22	20	19	17
	30	0.376	37	33	30	27	25	23	21
	40	0.435	43	38	34	31	29	26	25
	50	0.486	48	43	38	35	32	30	27
	60	0.532	53	47	42	38	35	32	30
Blue (80)	10	0.351	35	31	28	25	23	21	20
	20	0.496	49	44	39	36	33	30	28
	30	0.608	60	54	48	44	40	37	34
	40	0.702	69	62	56	51	46	43	40
	50	0.785	78	69	62	57	52	48	44
	60	0.859	85	76	68	62	57	52	49
Yellow (95)	10	0.506	50	45	40	36	33	31	29
	20	0.715	71	63	57	51	47	44	40
	30	0.876	87	77	69	63	58	53	50
	40	1.009	100	89	80	73	67	61	57
	50	1.133	112	100	90	82	75	69	64
	60	1.239	123	109	98	89	82	75	70
Green (110)	10	0.686	68	60	54	49	45	42	39
	20	0.973	96	86	77	70	64	59	55
	30	1.186	117	104	94	85	78	72	67
	40	1.372	136	121	109	99	91	84	78
	50	1.531	152	135	121	110	101	93	87
	60	1.681	166	148	133	121	111	102	95
White (125)	10	0.867	86	76	69	62	57	53	49
	20	1.230	122	108	97	89	81	75	70
	30	1.504	149	132	119	108	99	92	85
	40	1.735	172	153	137	125	114	106	98
	50	1.938	192	171	153	140	128	118	110
	60	2.124	210	187	168	153	140	129	120
Lime Green (156)	10	1.372	136	121	109	99	91	84	78
	20	1.947	193	171	154	140	128	119	110
	30	2.381	236	209	189	171	157	145	135
	40	2.752	272	242	218	198	182	168	156
	50	3.071	304	270	243	221	203	187	174
	60	3.363	333	296	266	242	222	205	190

All application rates (gallons/acre) are estimates based on 0-28-0 (10.65 lbs/gallon) at 70 degrees F.

20" Spacing

20" Spacing

20" Spacing

Orifice Color (Approx Size)	PSI	Gal/Min 28-0-0	MPH						
			4.0	4.5	5.0	5.5	6.0	6.5	7.0
Pink (24)	10	0.033	2.4	2.2	1.9	1.8	1.6	1.5	1.4
	20	0.046	3.4	3.0	2.7	2.5	2.3	2.1	2.0
	30	0.057	4.2	3.7	3.4	3.1	2.8	2.6	2.4
	40	0.065	4.9	4.3	3.9	3.5	3.2	3.0	2.8
	50	0.073	5.5	4.8	4.4	4.0	3.6	3.4	3.1
	60	0.081	6.0	5.3	4.8	4.3	4.0	3.7	3.4
Gray (30)	10	0.050	3.7	3.3	3.0	2.7	2.5	2.3	2.1
	20	0.072	5.3	4.7	4.3	3.9	3.5	3.3	3.0
	30	0.088	6.5	5.8	5.2	4.7	4.3	4.0	3.7
	40	0.101	7.5	6.7	6.0	5.4	5.0	4.6	4.3
	50	0.112	8.3	7.4	6.7	6.1	5.6	5.1	4.8
	60	0.124	9.2	8.2	7.4	6.7	6.1	5.7	5.3
Black (35)	10	0.070	5.2	4.6	4.2	3.8	3.5	3.2	3.0
	20	0.098	7.3	6.5	5.8	5.3	4.9	4.5	4.2
	30	0.120	8.9	7.9	7.1	6.5	6.0	5.5	5.1
	40	0.139	10.3	9.2	8.3	7.5	6.9	6.3	5.9
	50	0.156	11.6	10.3	9.3	8.4	7.7	7.1	6.6
	60	0.170	12.6	11.2	10.1	9.2	8.4	7.8	7.2
Brown (41)	10	0.094	7.0	6.2	5.6	5.1	4.6	4.3	4.0
	20	0.132	9.8	8.7	7.8	7.1	6.5	6.0	5.6
	30	0.162	12.0	10.7	9.6	8.7	8.0	7.4	6.9
	40	0.187	13.9	12.3	11.1	10.1	9.2	8.5	7.9
	50	0.209	15.5	13.8	12.4	11.3	10.3	9.5	8.9
	60	0.228	17.0	15.1	13.6	12.3	11.3	10.4	9.7
Orange (46)	10	0.119	8.9	7.9	7.1	6.5	5.9	5.5	5.1
	20	0.169	12.6	11.2	10.0	9.1	8.4	7.7	7.2
	30	0.207	15.4	13.7	12.3	11.2	10.3	9.5	8.8
	40	0.239	17.7	15.8	14.2	12.9	11.8	10.9	10.1
	50	0.267	19.8	17.6	15.9	14.4	13.2	12.2	11.3
	60	0.293	21.7	19.3	17.4	15.8	14.5	13.4	12.4
Maroon (52)	10	0.149	11	10	9	8	7	7	6
	20	0.210	16	14	12	11	10	10	9
	30	0.257	19	17	15	14	13	12	11
	40	0.296	22	20	18	16	15	14	13
	50	0.332	25	22	20	18	16	15	14
	60	0.363	27	24	22	20	18	17	15
Red (63)	10	0.218	16	14	13	12	11	10	9
	20	0.307	23	20	18	17	15	14	13
	30	0.376	28	25	22	20	19	17	16
	40	0.435	32	29	26	23	22	20	18
	50	0.486	36	32	29	26	24	22	21
	60	0.532	39	35	32	29	26	24	23
Blue (80)	10	0.351	26	23	21	19	17	16	15
	20	0.496	37	33	29	27	25	23	21
	30	0.608	45	40	36	33	30	28	26
	40	0.702	52	46	42	38	35	32	30
	50	0.785	58	52	47	42	39	36	33
	60	0.859	64	57	51	46	43	39	36
Yellow (95)	10	0.506	38	33	30	27	25	23	21
	20	0.715	53	47	42	39	35	33	30
	30	0.876	65	58	52	47	43	40	37
	40	1.009	75	67	60	54	50	46	43
	50	1.133	84	75	67	61	56	52	48
	60	1.239	92	82	74	67	61	57	53
Green (110)	10	0.686	51	45	41	37	34	31	29
	20	0.973	72	64	58	53	48	44	41
	30	1.186	88	78	70	64	59	54	50
	40	1.372	102	91	81	74	68	63	58
	50	1.531	114	101	91	83	76	70	65
	60	1.681	125	111	100	91	83	77	71
White (125)	10	0.867	64	57	52	47	43	40	37
	20	1.230	91	81	73	66	61	56	52
	30	1.504	112	99	89	81	74	69	64
	40	1.735	129	114	103	94	86	79	74
	50	1.938	144	128	115	105	96	89	82
	60	2.124	158	140	126	115	105	97	90
Lime Green (156)	10	1.372	102	91	81	74	68	63	58
	20	1.947	145	128	116	105	96	89	83
	30	2.381	177	157	141	129	118	109	101
	40	2.752	204	182	163	149	136	126	117
	50	3.071	228	203	182	166	152	140	130
	60	3.363	250	222	200	182	166	154	143

All application rates (gallons/acre) are estimates based on 0-28-0 (10.65 lbs/gallon) at 70 degrees F.

Colored Disc Orifice Chart

B
Components
Liquid

22" Spacing

Orifice Color (Approx Size)	PSI	Gal/Min 28-0-0		MPH						
		4.0	4.5	5.0	5.5	6.0	6.5	7.0		
		10	0.033	2.2	2.0	1.8	1.6	1.5	1.4	1.3
Pink (24)	20	0.046	3.1	2.8	2.5	2.3	2.1	1.9	1.8	
	30	0.057	3.8	3.4	3.1	2.8	2.5	2.4	2.2	
	40	0.065	4.4	3.9	3.5	3.2	2.9	2.7	2.5	
	50	0.073	5.0	4.4	4.0	3.6	3.3	3.1	2.8	
	60	0.081	5.4	4.8	4.3	4.0	3.6	3.3	3.1	
Gray (30)	10	0.050	3.4	3.0	2.7	2.5	2.3	2.1	1.9	
	20	0.072	4.8	4.3	3.9	3.5	3.2	3.0	2.8	
	30	0.088	5.9	5.3	4.7	4.3	3.9	3.6	3.4	
	40	0.101	6.8	6.1	5.4	5.0	4.5	4.2	3.9	
	50	0.112	7.6	6.7	6.1	5.5	5.1	4.7	4.3	
Black (35)	10	0.070	4.7	4.2	3.8	3.4	3.1	2.9	2.7	
	20	0.098	6.6	5.9	5.3	4.8	4.4	4.1	3.8	
	30	0.120	8.1	7.2	6.5	5.9	5.4	5.0	4.6	
	40	0.139	9.4	8.3	7.5	6.8	6.3	5.8	5.4	
	50	0.156	10.5	9.3	8.4	7.6	7.0	6.5	6.0	
Brown (41)	10	0.094	6.3	5.6	5.1	4.6	4.2	3.9	3.6	
	20	0.132	8.9	7.9	7.1	6.5	5.9	5.5	5.1	
	30	0.162	10.9	9.7	8.7	8.0	7.3	6.7	6.2	
	40	0.187	12.6	11.2	10.1	9.2	8.4	7.8	7.2	
	50	0.209	14.1	12.5	11.3	10.3	9.4	8.7	8.1	
Orange (46)	10	0.119	8.1	7.2	6.5	5.9	5.4	5.0	4.6	
	20	0.169	11.4	10.1	9.1	8.3	7.6	7.0	6.5	
	30	0.207	14.0	12.4	11.2	10.2	9.3	8.6	8.0	
	40	0.239	16.1	14.3	12.9	11.7	10.8	9.9	9.2	
	50	0.267	18.0	16.0	14.4	13.1	12.0	11.1	10.3	
Maroon (52)	10	0.149	10	9	8	7	7	6	6	
	20	0.210	14	13	11	10	9	9	8	
	30	0.257	17	15	14	13	12	11	10	
	40	0.296	20	18	16	15	13	12	11	
	50	0.332	22	20	18	16	15	14	13	
Red (63)	10	0.218	15	13	12	11	10	9	8	
	20	0.307	21	18	17	15	14	13	12	
	30	0.376	25	23	20	18	17	16	15	
	40	0.435	29	26	23	21	20	18	17	
	50	0.486	33	29	26	24	22	20	19	
Blue (80)	10	0.351	24	21	19	17	16	15	14	
	20	0.496	34	30	27	24	22	21	19	
	30	0.608	41	36	33	30	27	25	23	
	40	0.702	47	42	38	34	32	29	27	
	50	0.785	53	47	42	39	35	33	30	
Yellow (95)	10	0.506	34	30	27	25	23	21	20	
	20	0.715	48	43	39	35	32	30	28	
	30	0.876	59	53	47	43	39	36	34	
	40	1.009	68	61	54	50	45	42	39	
	50	1.133	76	68	61	56	51	47	44	
Green (110)	10	0.686	46	41	37	34	31	28	26	
	20	0.973	66	58	53	48	44	40	38	
	30	1.186	80	71	64	58	53	49	46	
	40	1.372	93	82	74	67	62	57	53	
	50	1.531	103	92	83	75	69	64	59	
White (125)	10	0.867	59	52	47	43	39	36	33	
	20	1.230	83	74	66	60	55	51	47	
	30	1.504	102	90	81	74	68	62	58	
	40	1.735	117	104	94	85	78	72	67	
	50	1.938	131	116	105	95	87	81	75	
Lime Green (156)	10	1.372	93	82	74	67	62	57	53	
	20	1.947	131	117	105	96	88	81	75	
	30	2.381	161	143	129	117	107	99	92	
	40	2.752	186	165	149	135	124	114	106	
	50	3.071	207	184	166	151	138	128	118	
60	3.363	227	202	182	165	151	140	130		

All application rates (gallons/acres) are estimates based on 0-28-0 (10.65 lbs/gallon) at 70 degrees F.

36" Spacing

Orifice Color (Approx Size)	PSI	Gal/Min 28-0-0		MPH						
		4.0	4.5	5.0	5.5	6.0	6.5	7.0		
		10	0.033	1.4	1.2	1.1	1.0	0.9	0.8	0.8
Pink (24)	20	0.046	1.9	1.7	1.5	1.4	1.3	1.2	1.1	
	30	0.057	2.3	2.1	1.9	1.7	1.6	1.4	1.3	
	40	0.065	2.7	2.4	2.2	2.0	1.8	1.7	1.5	
	50	0.073	3.0	2.7	2.4	2.2	2.0	1.9	1.7	
	60	0.081	3.3	3.0	2.7	2.4	2.2	2.0	1.9	
Gray (30)	10	0.050	2.1	1.8	1.7	1.5	1.4	1.3	1.2	
	20	0.072	3.0	2.6	2.4	2.2	2.0	1.8	1.7	
	30	0.088	3.6	3.2	2.9	2.6	2.4	2.2	2.1	
	40	0.101	4.2	3.7	3.3	3.0	2.8	2.6	2.4	
	50	0.112	4.6	4.1	3.7	3.4	3.1	2.9	2.6	
Black (35)	10	0.070	2.9	2.6	2.3	2.1	1.9	1.8	1.6	
	20	0.098	4.1	3.6	3.2	2.9	2.7	2.5	2.3	
	30	0.120	5.0	4.4	4.0	3.6	3.3	3.1	2.8	
	40	0.139	5.7	5.1	4.6	4.2	3.8	3.5	3.3	
	50	0.156	6.4	5.7	5.1	4.7	4.3	4.0	3.7	
Brown (41)	10	0.094	3.9	3.4	3.1	2.8	2.6	2.4	2.2	
	20	0.132	5.4	4.8	4.4	4.0	3.6	3.3	3.1	
	30	0.162	6.7	5.9	5.3	4.9	4.5	4.1	3.8	
	40	0.187	7.7	6.8	6.2	5.6	5.1	4.7	4.4	
	50	0.209	8.6	7.7	6.9	6.3	5.7	5.3	4.9	
Orange (46)	10	0.119	4.9	4.4	3.9	3.6	3.3	3.0	2.8	
	20	0.169	7.0	6.2	5.6	5.1	4.6	4.3	4.0	
	30	0.207	8.5	7.6	6.8	6.2	5.7	5.3	4.9	
	40	0.239	9.9	8.8	7.9	7.2	6.6	6.1	5.6	
	50	0.267	11.0	9.8	8.8	8.0	7.3	6.8	6.3	
Maroon (52)	10	0.149	6	5	5	4	4	4	4	
	20	0.210	9	8	7	6	6	5	5	
	30	0.257	11	9	8	8	7	7	6	
	40	0.296	12	11	10	9	8	8	7	
	50	0.332	14	12	11	10	9	8	8	
Red (63)	10	0.218	9	8	7	7	6	6	5	
	20	0.307	13	11	10	9	8	8	7	
	30	0.376	16	14	12	11	10	10	9	
	40	0.435	18	16	14	13	12	11	10	
	50	0.486	20	18	16	15	13	12	11	
Blue (80)	10	0.351	14	13	12	11	10	9	8	
	20	0.496	20	18	16	15	14	13	12	
	30	0.608	25	22	20	18	17	15	14	
	40	0.702	29	26	23	21	19	18	17	
	50	0.785	32	29	26	24	22	20	19	
Yellow (95)	10	0.506	21	19	17	15	14	13	12	
	20	0.715	29	26	24	21	20	18	17	
	30	0.876	36	32	29	26	24	22	21	
	40	1.009	42	37	33	30	28	26	24	
	50	1.133	47	42	37	34	31	29	27	
Green (110)	10	0.686	28	25	23	21	19	17	16	
	20	0.973	40	36	32	29	27	25	23	
	30	1.186	49	43	39	36	33	30	28	
	40	1.372	57	50	45	41	38	35	32	
	50	1.531	63	56	51	46	42	39	36	
White (125)	10	0.867	36	32	29	26	24	22	20	
	20	1.230	51	45	41	37	34	31	29	
	30	1.504	62	55	50	45	41	38	35	
	40	1.735	72	64	57	52	48	44	41	
	50	1.938	80	71	64	58	53	49	46	
Lime Green (156)	10	1.372	57	50	45	41	38	35	32	
	20	1.947	80	71	64	58	54	49	46	
	30	2.381	98	87	79	71	65	60	56	
	40	2.752	114	101	91	83	76	70	65	
	50	3.071	127	113	101	92	84	78	72	
60	3.363	139	123	111	101	92	85	79		

All application rates (gallons/acres) are estimates based on 0-28-0 (10.65 lbs/gallon) at 70 degrees F.



Dual Metering Tube Plumbing Kits with Dual Check Valve

For more information, read [Navigating the Metering Tube Maze](#) or [Metering Tube / LiquiShiftTube Charts](#).

SureFire dual metering tube plumbing kits are a great way to apply fertilizer.

These plumbing kits will contain everything you need to distribute fertilizer from the flowmeter outlet down to the ground application device of your choice (not included).


These instructions will show you where all the pieces go. It will provide guidance on how much metering tube to use. There are some optional fittings included in each plumbing kit. These instructions will show you where and why you'd want to use the optional pieces.

The dual check valve assembly is a key piece in the dual metering tube design. In addition to a check valve to stop fertilizer from draining when the system is shut off, **each check valve has an on/off valve on top of it. These on / off valves allow the operator to turn on only tube 1, only tube 2, or both tube 1 and 2.** This provides for three different application ranges, which is especially helpful when using a fertilizer which has a highly variable viscosity based on temperature changes or when changing rates from field to field.

Dual Advantage of Dual Metering Tube

Metering tube provides a larger passage way diameter than a comparable orifice. For a 5 GPA rate on 30" rows, a size 0.046" orifice would be used. For the same rate a 0.110" meter tube that is 8' long would be used. This 8' tube with more than twice the diameter creates a fertilizer system resistant to plugging while providing excellent row to row distribution.

By using two metering tubes, the fertilizer system can handle a wider range of rates and provide the proper system pressure as the fertilizer properties change due to temperature, mixtures and other factors.

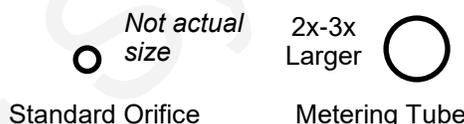


Field Operation of Dual Metering Tube - Dual Check Valve System

The dual metering tube allows for three application rate ranges. Some fertilizers have a widely variable viscosity. Therefore, based on temperature, tank mixing and fertilizer batch, the best tube to use will change.

SureFire recommends you start with the larger tube ON only. This is the middle size and is a good starting point. Conduct a test using the Nozzle Flow Check with fertilizer to determine your system pressure. If pressure is below 15 psi, some check valves may not open and row to row distribution will be uneven.

Start with larger tube ON, smaller tube OFF:

- **Pressure below 15 PSI: Turn larger tube OFF and smaller tube ON.**
- **Pressure over 50 PSI: Turn BOTH tubes ON.**

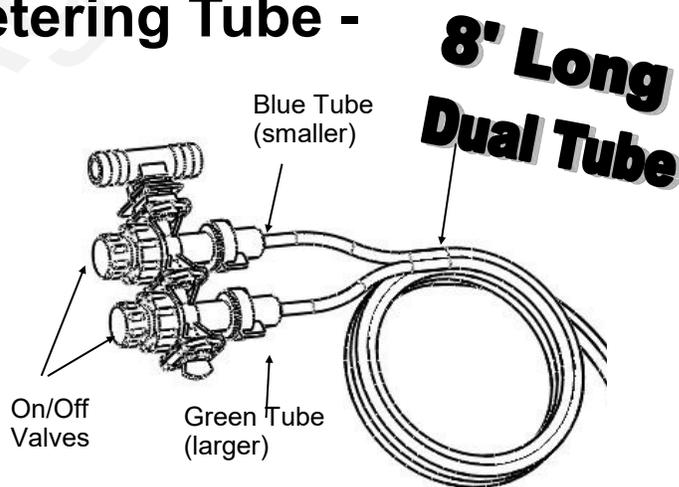

	GPA on 30" rows (approx, will vary)
Blue Tube	1.5 - 3
Green Tube	3 - 6
Blue & Green Tube	6 - 10
Minimum Recommended flow for Blue Tube (8 ft)	4 - 5 oz/min

Other tubes are available if needed for different application rates.

** Ultra Low Rate Application –For rates from 2-5 oz/min/row use a 12 foot length of metering tube. To calculate oz/min/row: $Oz/min/row = (GPA \times MPH \times spacing \text{ (inches)}) \div 46.4$

Dual Check Valve Plumbing Diagram

4 Row Planter Shown, add rows as necessary


136-04-200400, Dual 4 PSI check valve with 1/4" QC caps and 3/8" FPT inlet

101-075075038-HBT-M-W 3/4" HB x 3/4" HB x 3/8" MPT Tee

113-19-025025025 Y Divider - 1/4" QC

Dual Metering Tube - 8 feet long


101-038075-90-W, 3/8" MPT x 3/4" HB - 90 degree

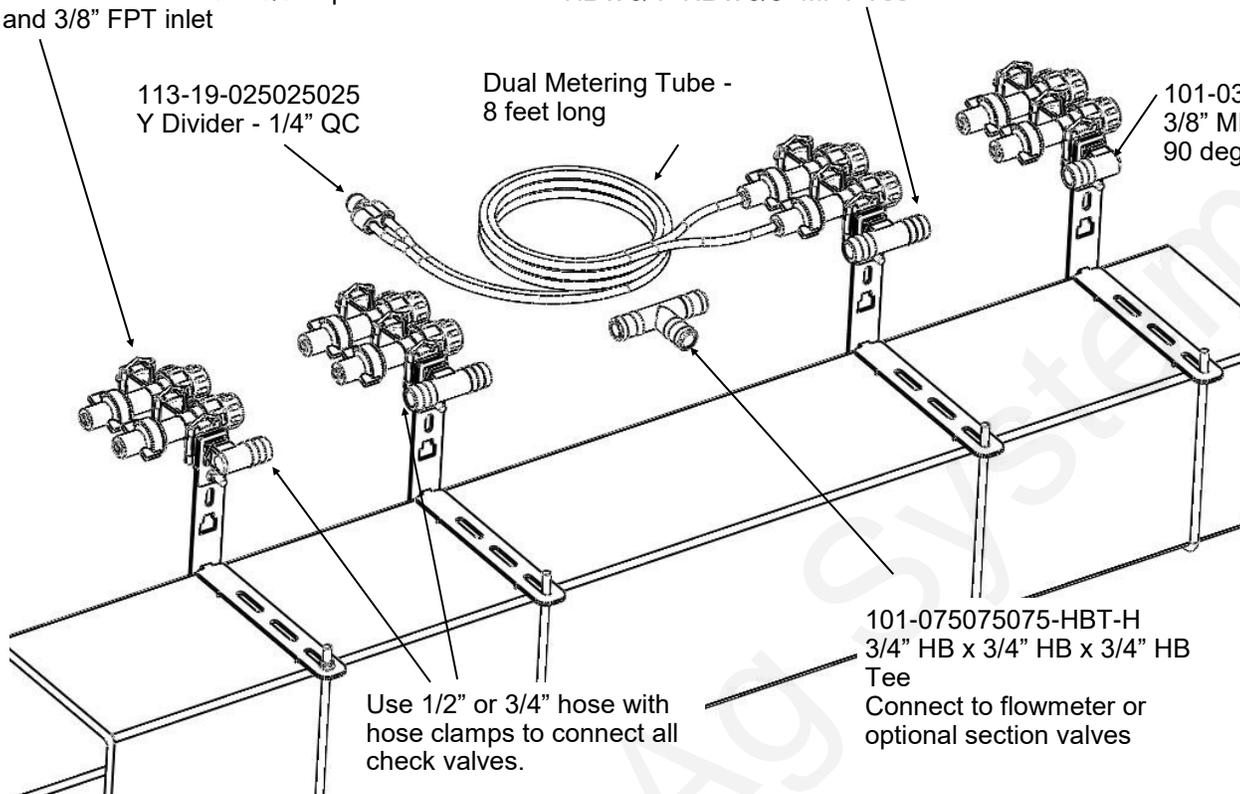

This is a general diagram showing the dual check valve assembly mounted on a planter toolbar. The check valve and bracket are very flexible in their mounting. The check valve can mount behind, directly over, or in front of the toolbar. The check valve can be put in the bracket facing up & down or sideways (shown). In addition, the steel bracket could be rotated 90 degrees and clamp around the bar. The multiple slots in the bracket are used to mount to any tube 7x7 inches or smaller.

Sectional Plumbing Diagram with Dual Check Valves

12 Row Planter Shown

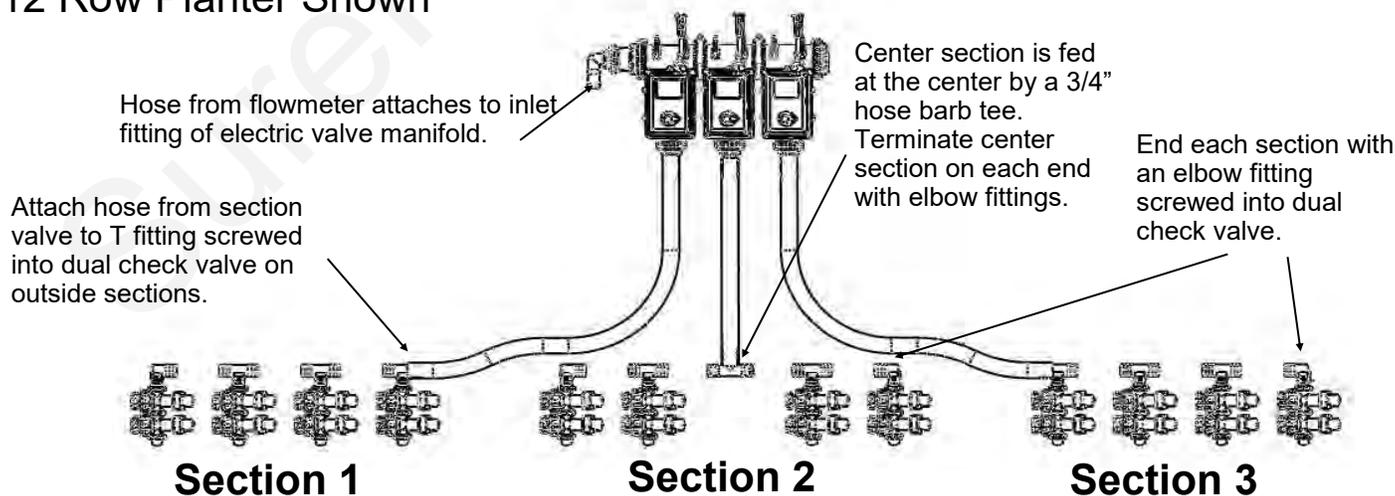

For a **2 section plumbing system**, omit the center section and plumb similar to the outside 2 sections.


Dual Check Valve Assembly Steps

B


Components
Liquid

Follow these steps to mount each check valve to the steel bracket.

1. Screw the 3/8" MPT x 3/4" HB tee or elbow into the check valve using blue thread sealer. Orient the hose barb to run the 3/4" hose down the planter toolbar.
2. Insert the check valve into the "C" notch in the end of the bracket, according to how you want the check valve to be mounted on your planter. Orient the wire clips up or to the side for easiest access.
3. Slide the small "C" clamp bracket around the check valve to lock it in place.
4. Install the 1/4" carriage bolt and flange nut to secure the "C" clamp plate around the check valve.
5. Now, mount the check valve on the bar. Hold the check valve and long bracket assembly on the toolbar. Slide the tab on the front of the short bracket into the upper or lower notch on the long bracket.
6. Slide the L bolt into the appropriate slots on the brackets for your tube size. Tighten the 1/4" flange nuts to hold the bracket in place.

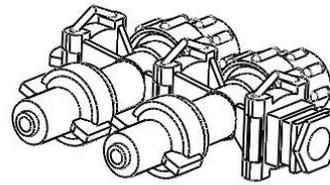


Clamp Bracket

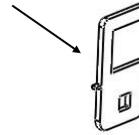

Elbow at end of section, Tee in mid-locations.

400-1966A1 Dual Check Valve Mount Bracket




The long, short & clamp bracket come as one part connected by break-off tabs.


Check Valve Mounting Options

The dual check valve mounting bracket is very flexible to fit many different planter configurations. Three options are shown here to illustrate some of the possibilities.


Example 1. Use the long bracket on the top of a bar. The check valve is mounted vertically. The liquid supply hose is run directly on the front side of the bar. The U-bolt is placed in slots to clamp on a 4x6 inch tube.

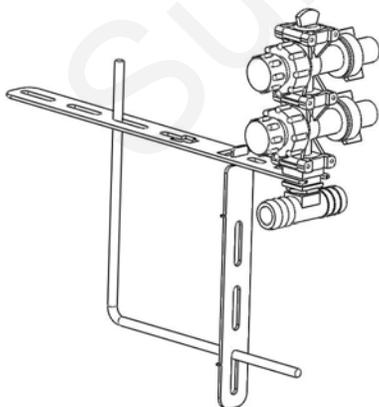

Example 2. Use the long bracket on the rear of a bar. The check valve is mounted over the top of the bar. The supply line would run above and behind the bar. The short bracket is placed in the notch to mount the check valve closer to the bar.

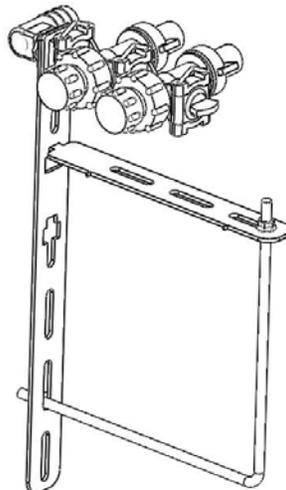

Example 3. Use the long bracket on the front of a 3x7 bar (vacuum tube on some planters). Mount the check valve hanging forward of the bar. The supply line will run directly over the bar. The excess bolt and bracket length can be cut off.

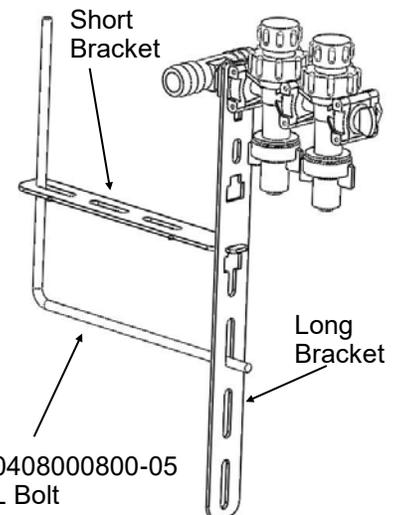

311-0408000800-05
1/4" L Bolt


Connection to Keeton Seed Firmer, Rebounder Seed Covers or through thin wall stainless steel tubes

B

Components
Liquid

1. Mount the Keeton Seed Firmer or Rebounder Seed Cover.
2. Route the tube included in the above kit as instructed.
3. Attach the 1/4" tube to the 1/4" QC Y divider fitting.
4. Zip all tubing to the planter and row unit in as many locations as possible.

For thin wall stainless steel tubes, you can push the 1/4" black tubing all the way through the stainless steel tube so fertilizer will run directly from the tubing onto the ground.

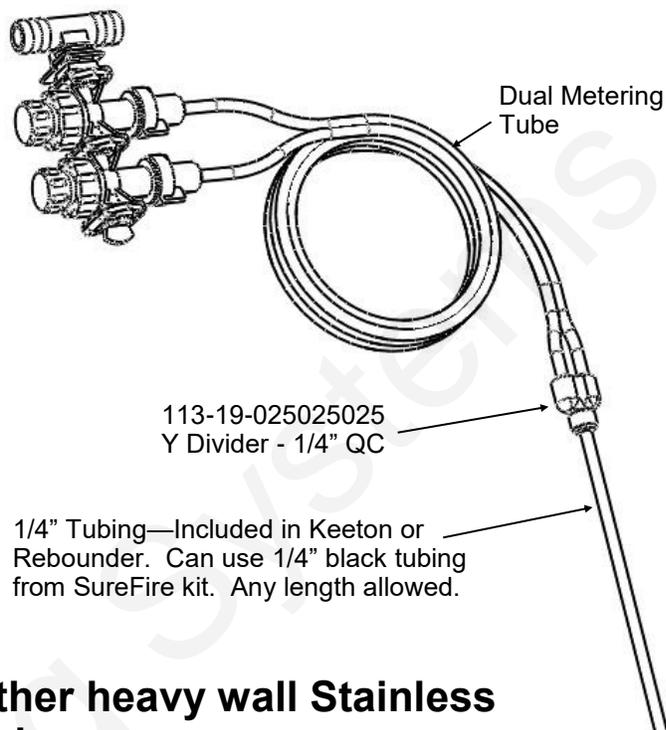


Connection to Totally Tubular or other heavy wall Stainless Steel Tube Ground Application Devices


When using a 3/8" OD stainless steel tube to apply fertilizer to the ground, there are two options for the delivery tube plumbing. If the tube ID is less than 1/4" (tubing will not fit inside tube) this attachment method must be used. The description following is for Option 1. See bottom right picture for Option 2.

1. Use the 1/4" x 3/8" QC fitting shown. Push the 3/8" end onto the stainless steel tube. (Hint: if the fitting slips off the stainless steel tube, use sandpaper or a file to roughen the end of the tube slightly)
2. Use a short piece of 1/4" black tubing to connect the Y fitting to the reducer fitting on the stainless steel tube.
3. Zip all tubing to the planter and row unit in as many locations as possible.

Option 1: QC Fitting attaches to SS Tube

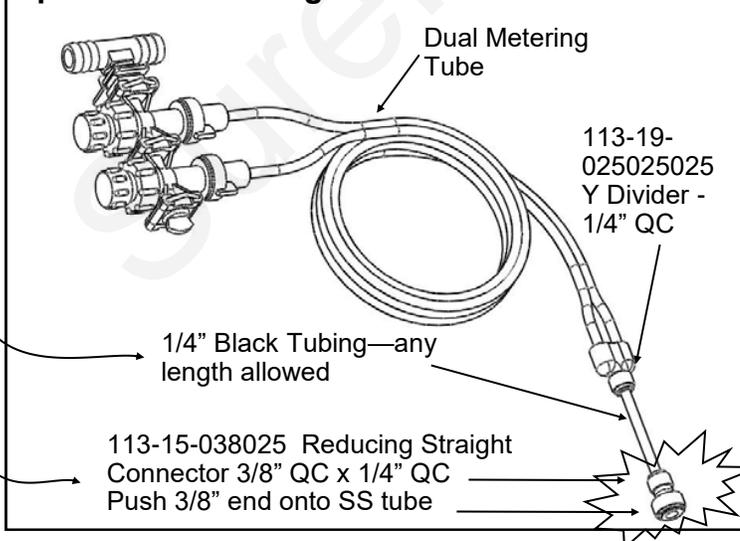

Option 2: 3/8" Hose attaches to SS Tube

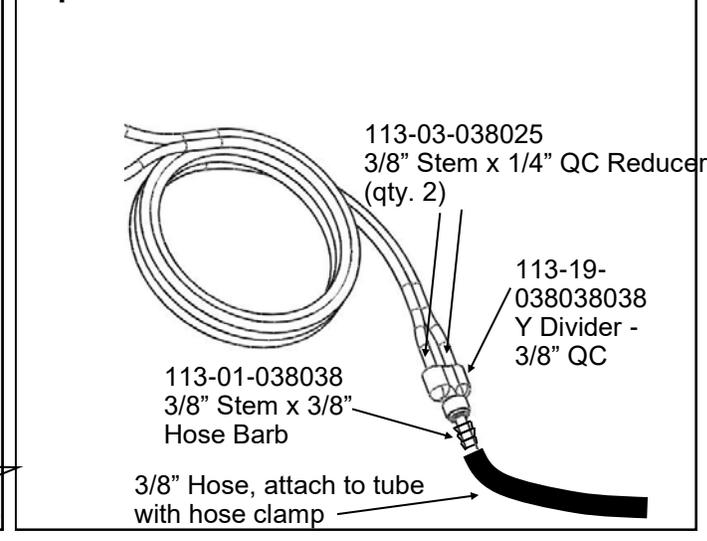

Ag Leader Liquid Product Control Module

D

Wiring & Elec.


The Liquid Product Control Module is the legacy Ag Leader control module. It is still a very good control module.

Ag Leader also has an ISO Liquid Control module. The following pages show how to connect to both of these.

SureFire Fertilizer Systems begin at the Ag Leader Liquid Product Control Module. The picture below shows this control module. You will need to purchase this module from your Ag Leader dealer.

The rate controller has four harness connections. The function of each connection is labeled in the picture below and on the next page. The following pages show system diagrams for single section, 2-6 section and 7-12 (maximum of 10 sections on LPCM) section configurations. Detailed harness drawings follow for information and troubleshooting.

Instructions for setting up the Ag Leader in cab display are in Section F. Detailed screen shots of the display are included showing exactly what settings are required and recommended for SureFire Fertilizer Systems.

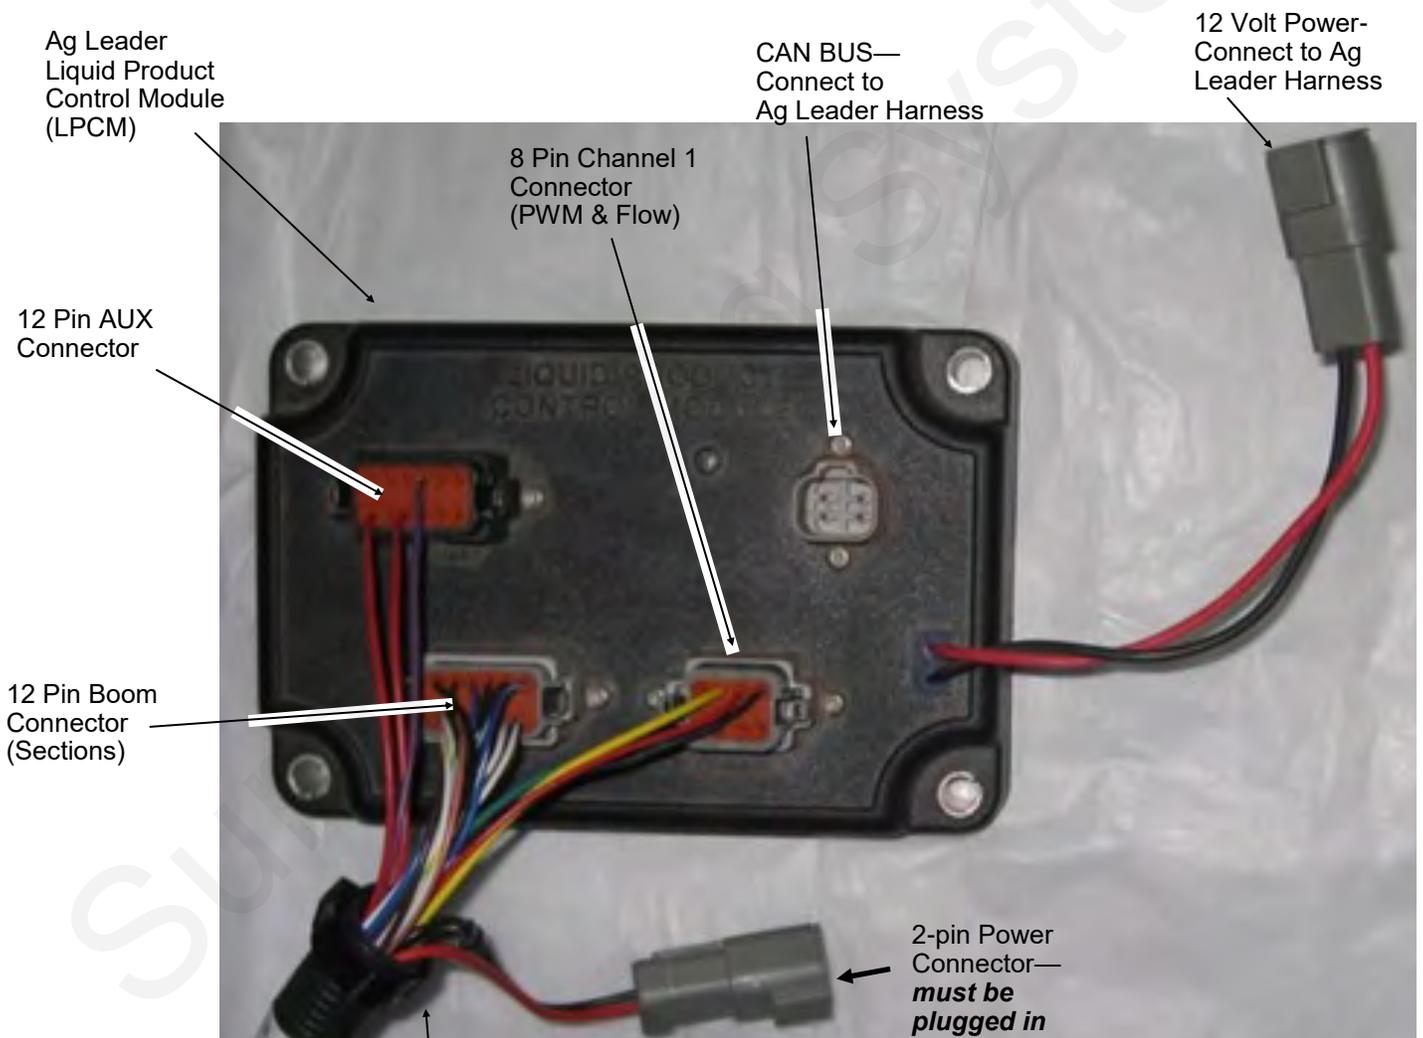

SureFire adapter for Ag Leader LPCM to pump and sections.
SureFire PN **201-215468Y*** or **213-01-3768Y***.


Implement Lift Switch Jumper (included)
MUST be installed if no implement lift switch installed

Ag Leader Liquid Product Control Module

D

Wiring & Elec.


This chart shows you the output functions by pin location on the Ag Leader Liquid Product Control Module. Use this information to verify if the Ag Leader system is providing the correct output. If the module is not providing the correct output, contact your Ag Leader dealer to repair the problem. Also review any applicable settings on the display to verify the system is properly set up.

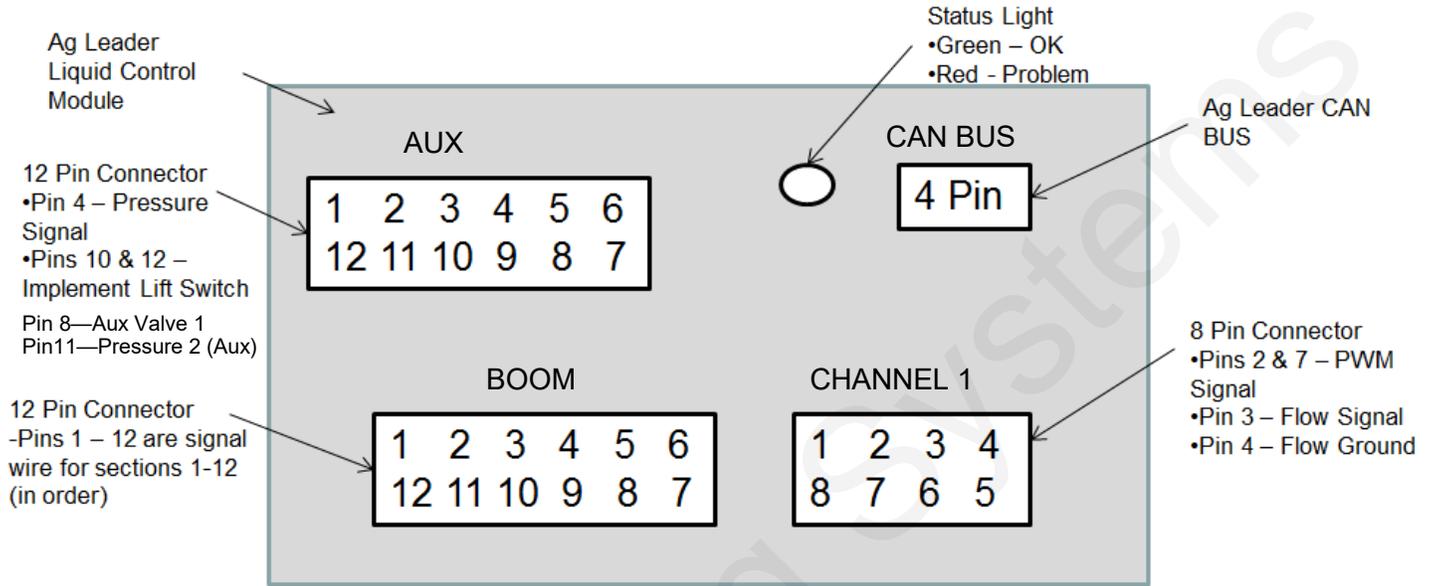

Common Troubleshooting:

PWM Signal to Pump: Pin 2 to 7 should have 0-12 volts to turn pump on. Use manual mode to increase signal. Should get up to 12 volts after holding increase button.

Flow meter Tap Test: Pins 4 and 3 are Flow Ground and Signal. If no flow is registering on the display, you can tap between these two pins with a short wire. This produces a pulse. The display should indicate a flow when this is done rapidly.


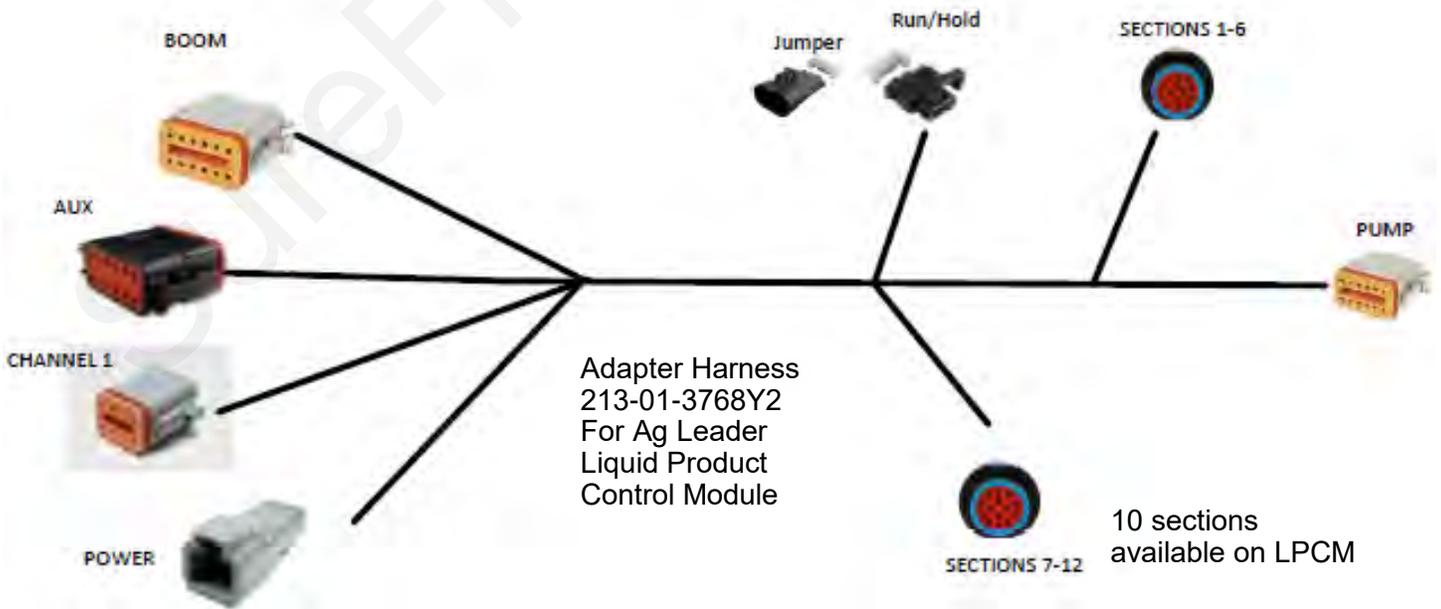


Connecting Liquid Product Control Module

D

Wiring & Elec.

Plug in Adapter Har-
ness
213-01-3768Y*
Or previous Sure Fire
systems used
201-215468Y*

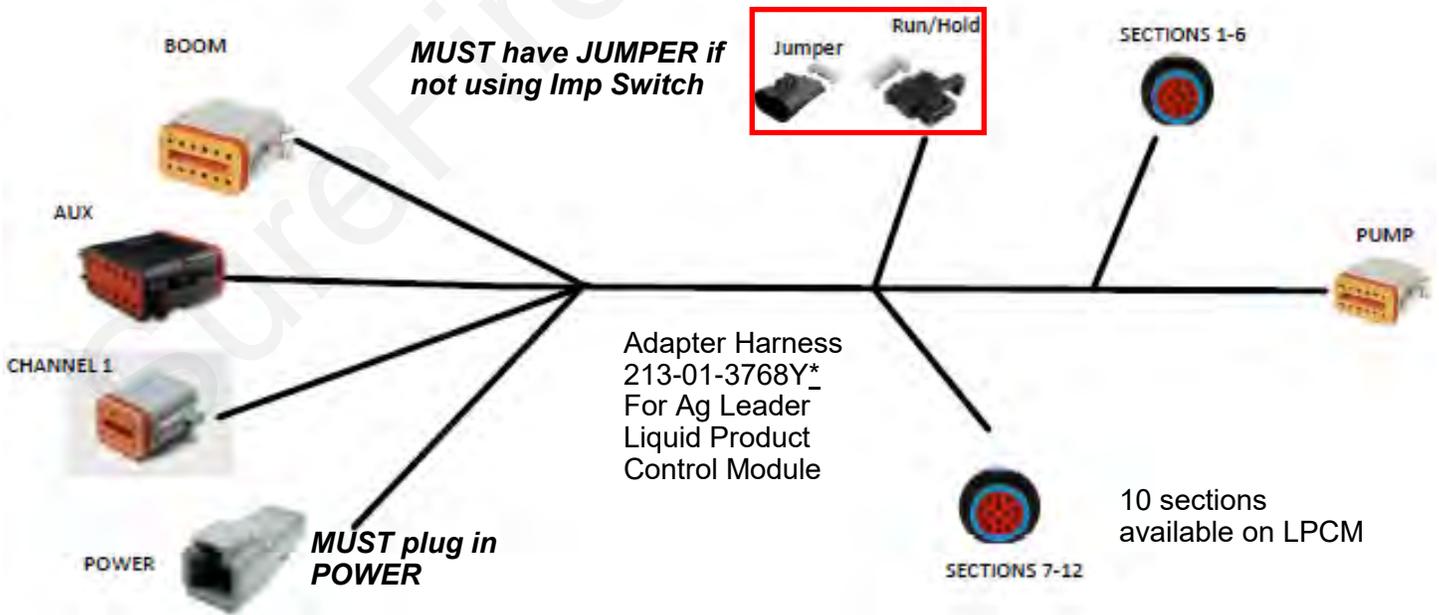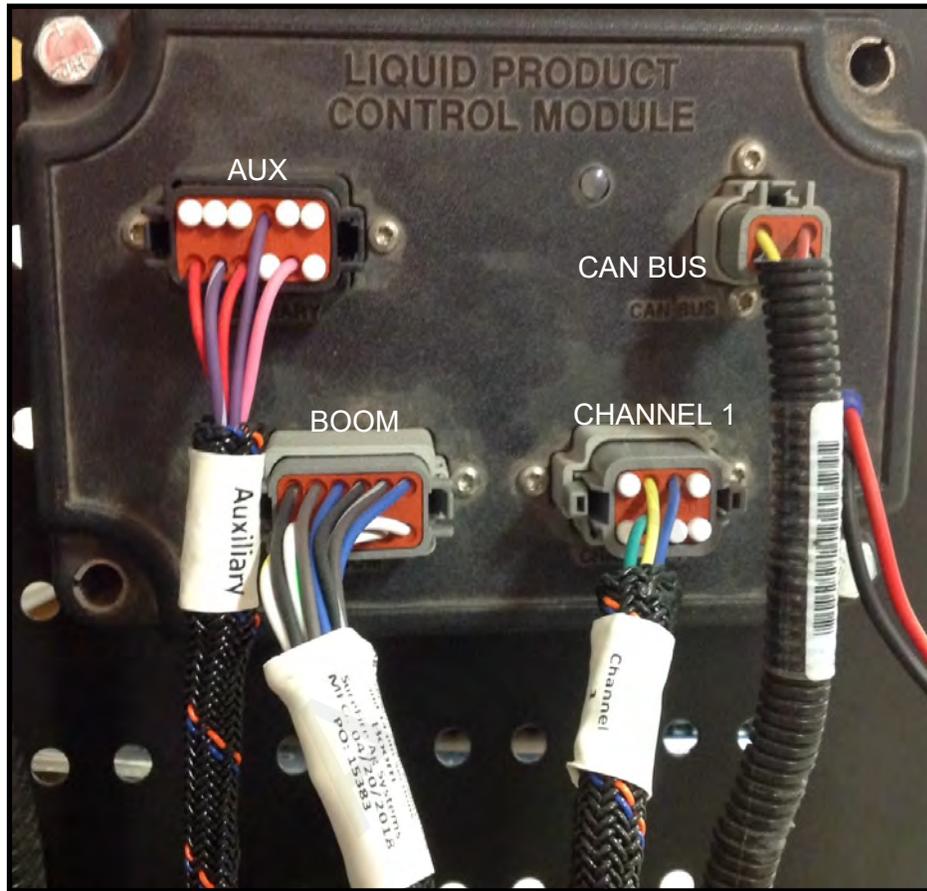


Auxiliary Input Module

Connects to Ag Leader Display with Ag Leader harnessing



D

Wiring & Elec.

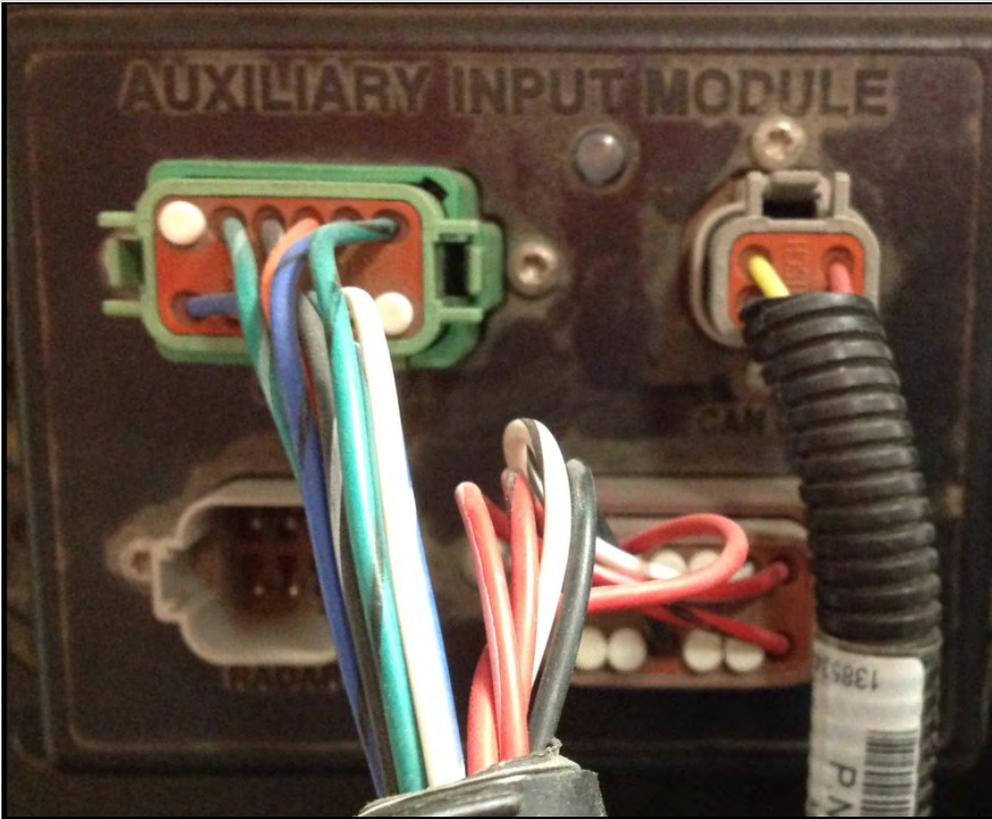


Ag Leader ISO Liquid Rate and Liquid Swath Control

D
Wiring & Elec.

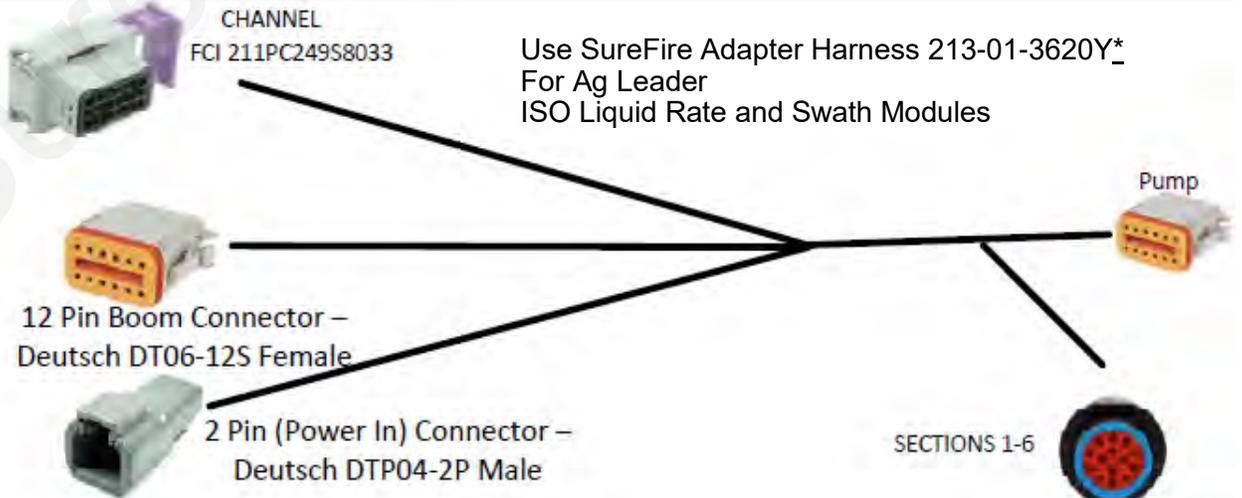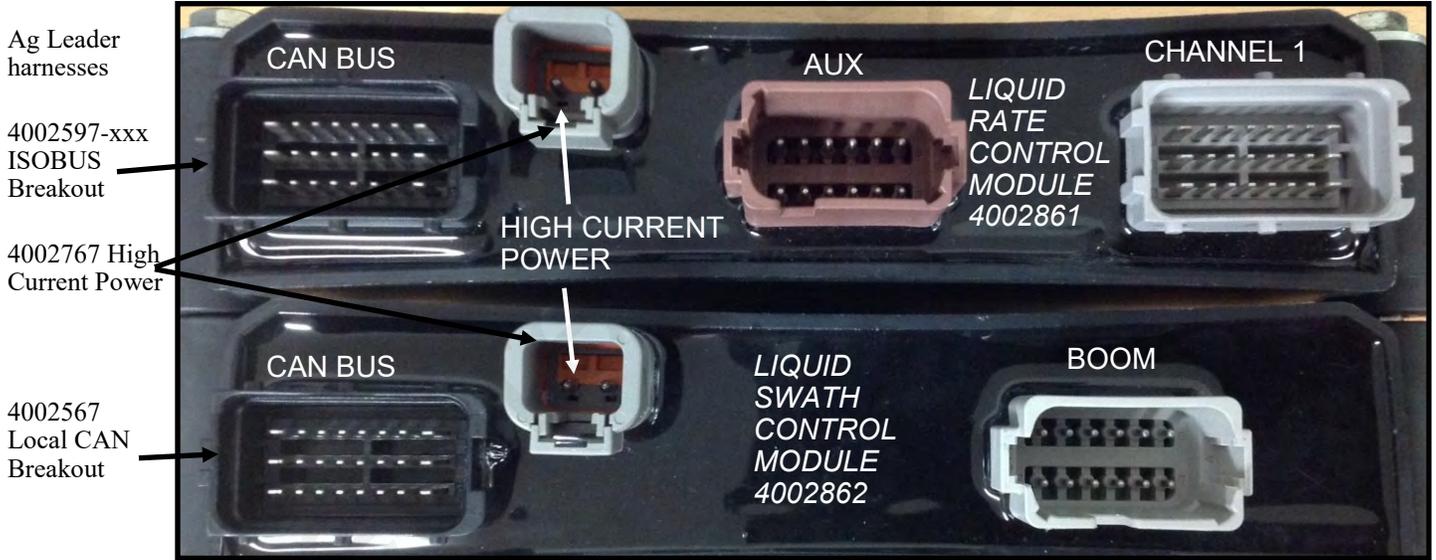

Ag Leader ISO Aux Input and Implement Switch Module

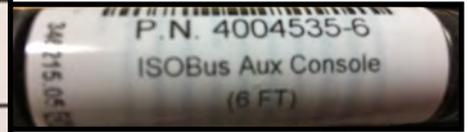


Master
 Boom Sections (1-7)
 Rate 1, Rate 2,
 Manual
 Target Increment,
 Increase/Decrease

Items needed for Implement Switch (Optional)

CAN Implement Switch Module	4002911
CAN Implement Switch Cable	4002658

Some kind of Implement Switch (available from SureFire)

Ag Leader Gen 2 to Gen 1 Liquid Adapter

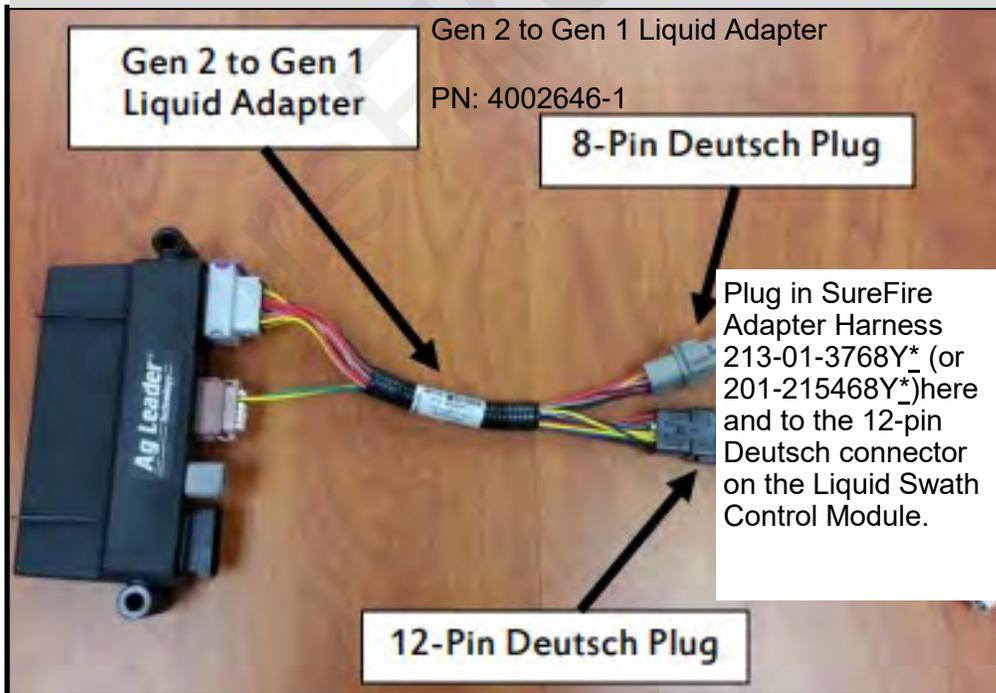

If the ISO Liquid Module is replacing an Ag Leader Liquid Product Control Module, start with the Gen 2 to Gen 1 Adapter and then use the same harnessing that was used before.

This adapter can also be used on a new setup if you will be using the Gen 1 harnessing from SureFire.



The adapter is not necessary if using SureFire 213-01-3620Y* adapter harness.

PumpRight & Ag Leader Control Layout


Control: PWM Hydraulic Valve
 Sections: 3

D
 Wiring & Elec.

Both Connect to 12 Volt Power Connection on Ag Leader Harness

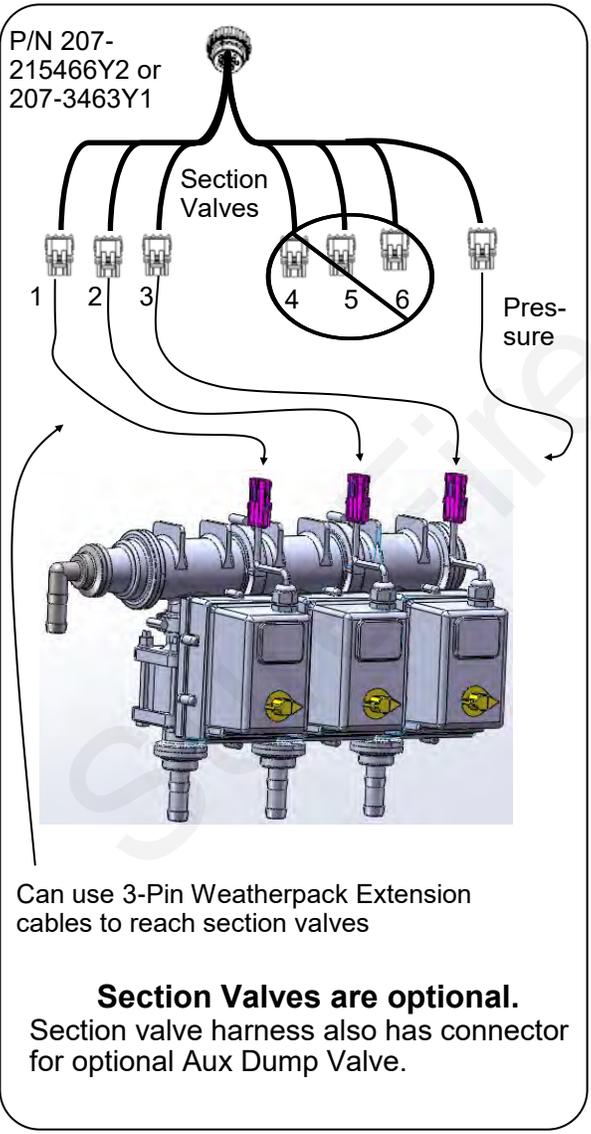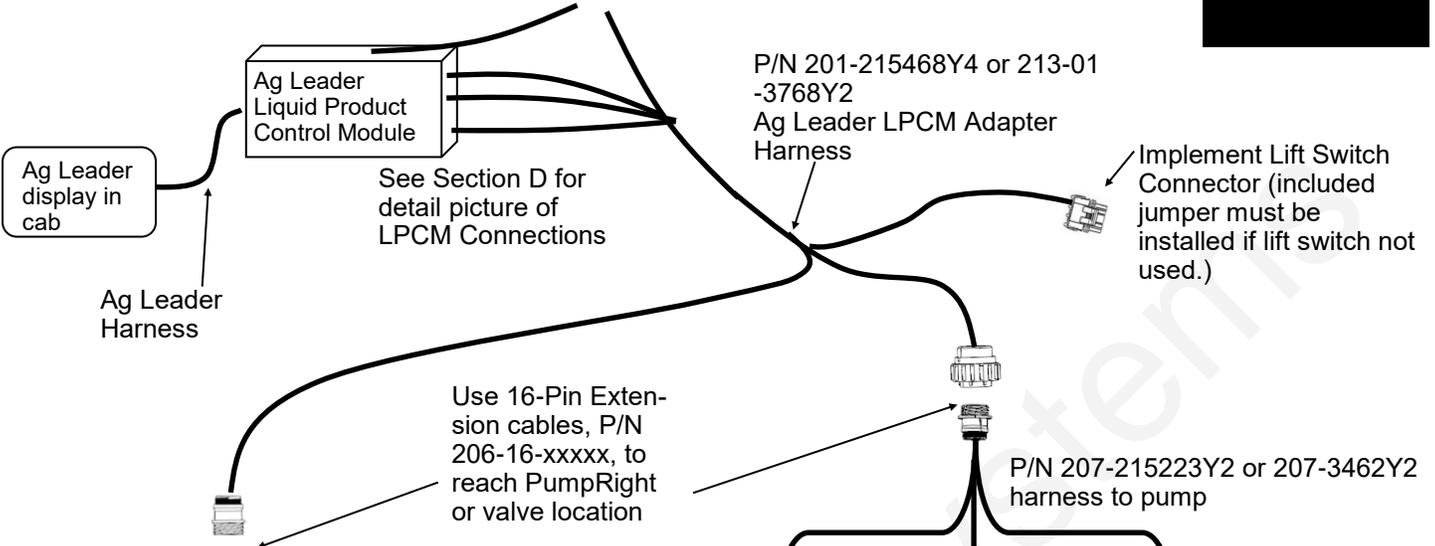

Each harness has connectors for Pressure 1 (Main) and Pressure 2 (Aux).

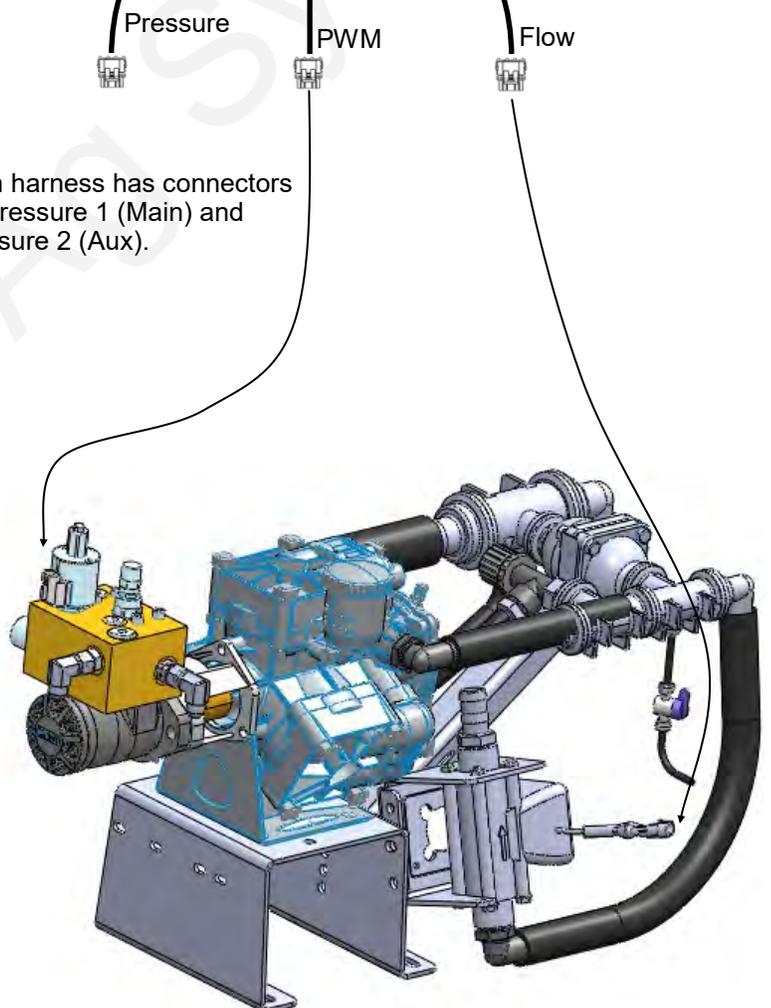

 Means connector not used in this configuration.

Ag Leader Harness Wiring Diagrams



Your Ag Leader system may have one of the following sets of harnesses. The first set is being introduced for the 2018 season. The second set is the legacy set that has been used for several years.

New Ag Leader harnesses for the 2018 season for Liquid Product Control Module:

Adapter Harness

213-01-3768Y2 Ag Leader LPCM Adapter harness with 12-pin Product and 14-pin Section connectors

Pump Harness

207-3461Y2 12-pin Final Cable for Tower with 1 or 2 Section Valves (PWM, Flow, Pressure, Sections 1 and 2)

Or
207-3462Y2 **12-pin Final Cable for SureFire Liquid System (PWM, Flow, Pressure, Pump RPM)**

Section Harness (if needed)

207-3463Y1 14-pin 6-section Final Cable

Ag Leader Legacy Harnesses for Liquid Product Control Module

Adapter Harness

201-215468Y4 Ag Leader Liquid Module to twin 16-pin AMP connectors

Pump Harness

207-215223Y2 PWM Pump Cable

Section Harness

207-215466Y2 16-pin 6-Section Harness

Harnesses for Ag Leader ISO Liquid Rate Control Module

Adapter Harness

213-01-3620Y1 Ag Leader Liquid ISO Module Adapter Harness with 6 sections

Pump Harness

207-3461Y2 12-pin Final Cable for Tower with 1 or 2 Section Valves (PWM, Flow, Pressure, Sections 1 and 2)

Or
207-3462Y2 12-pin Final Cable for SureFire Liquid System (PWM, Flow, Pressure)

Section Harness (if needed)

207-3463Y1 14-pin 6-section Final Cable


Gen3 LiquiShift

Gen3 LiquiShift systems will use different harnesses.

213-01-3768Y2

Ag Leader Adapter Cable LPCM to 12-pin Product and 14-pin Sections

**Wire 18AWG
unless otherwise
specified**

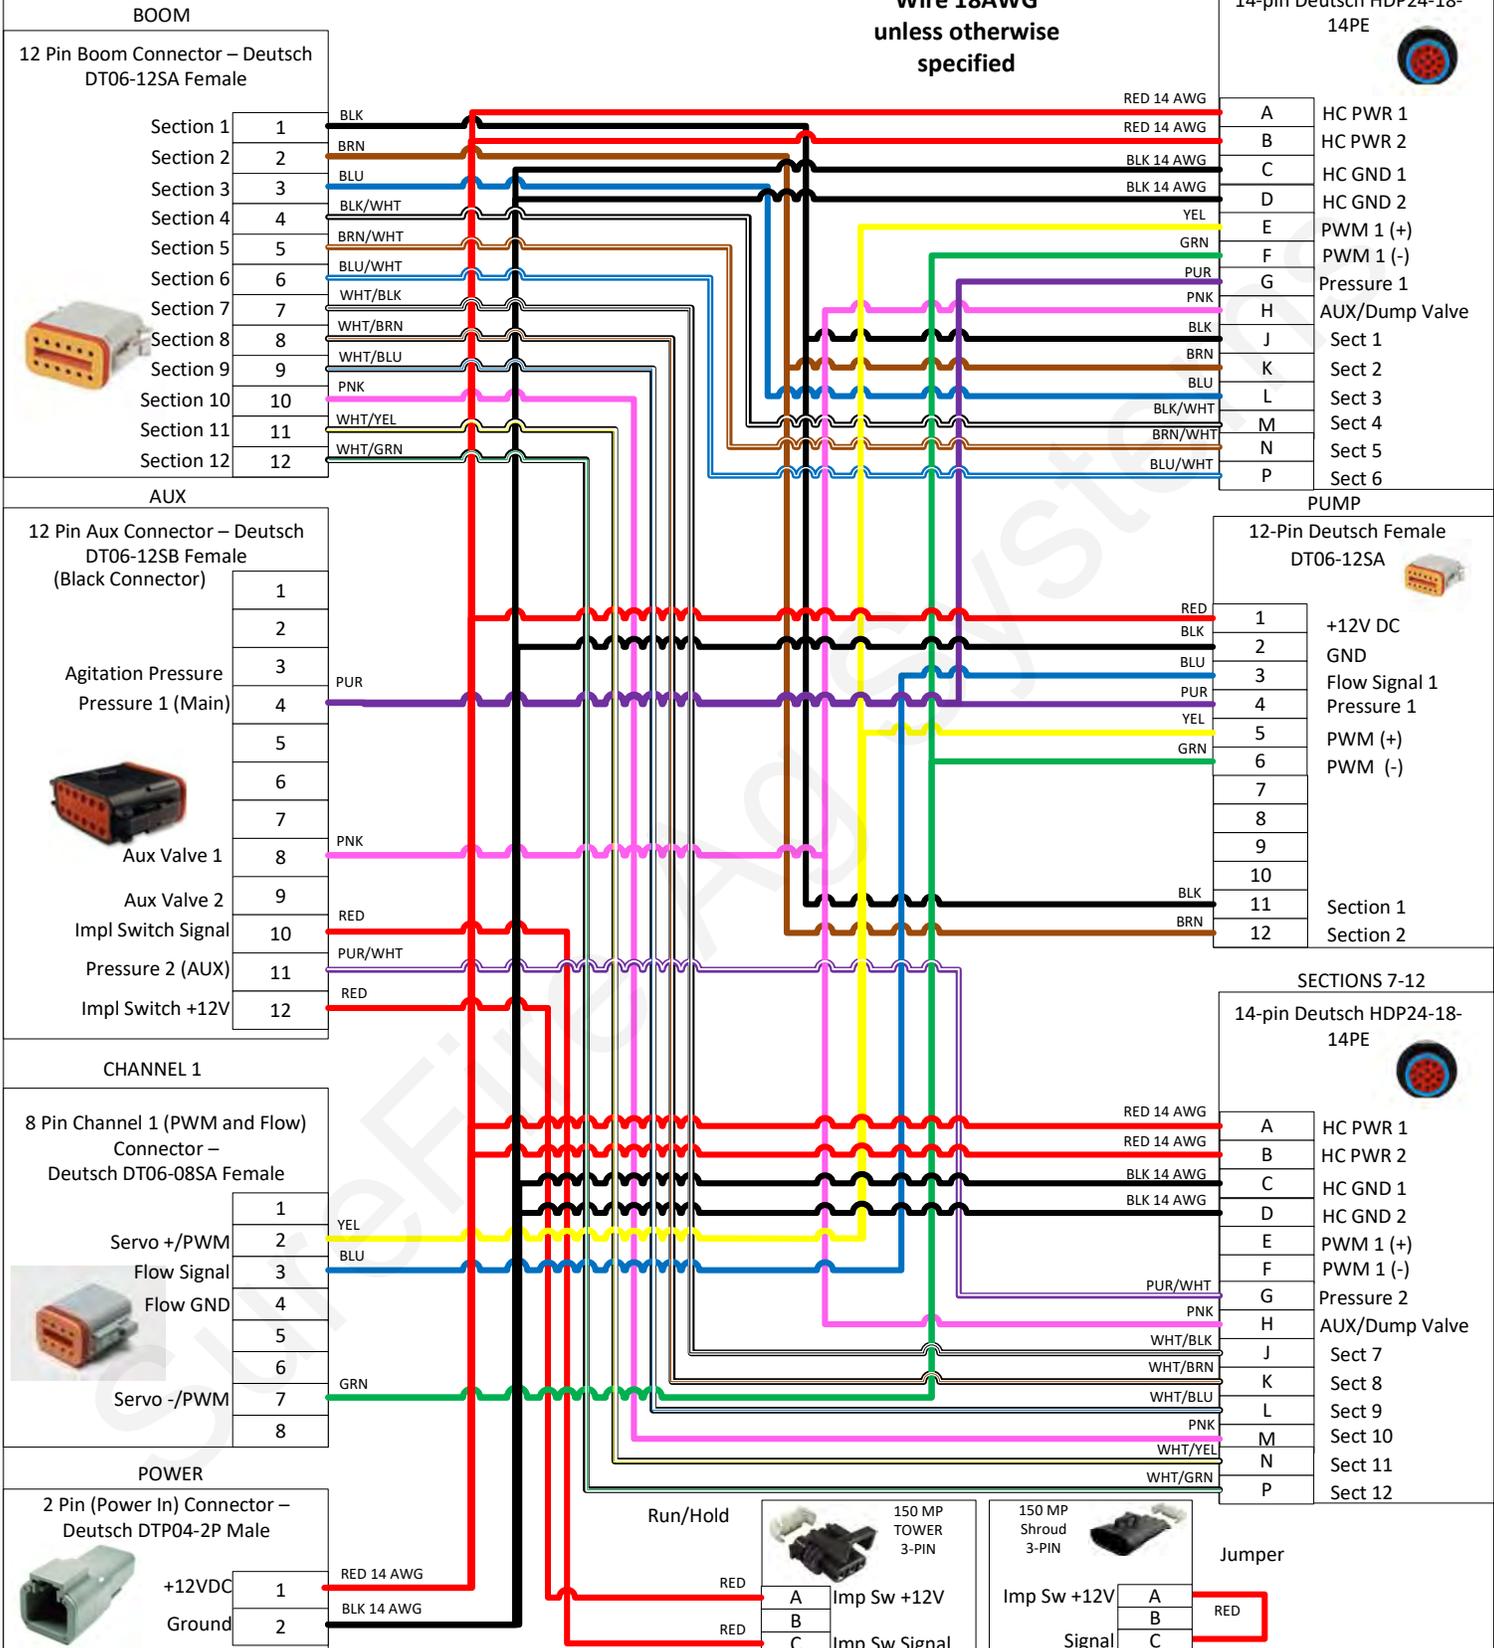


Part No:	213-01-3768Y2	Drawn By:	Mark Wolters		
Description:	Ag Leader Adapter Cable LPCM to 12-pin Product and 14-pin Sections	Last Edit Date:	7/8/2019	Revision	A-03
Copyright 2017 SureFire Ag Systems, Reproduction or other use of drawing without express written permission from SureFire Ag Systems is forbidden		30			

207-3462Y2

Final Cable for SureFire Liquid Pump System (pwm, flow, pres., pump rpm, fill flow)

**Wire 18AWG
unless otherwise
specified**

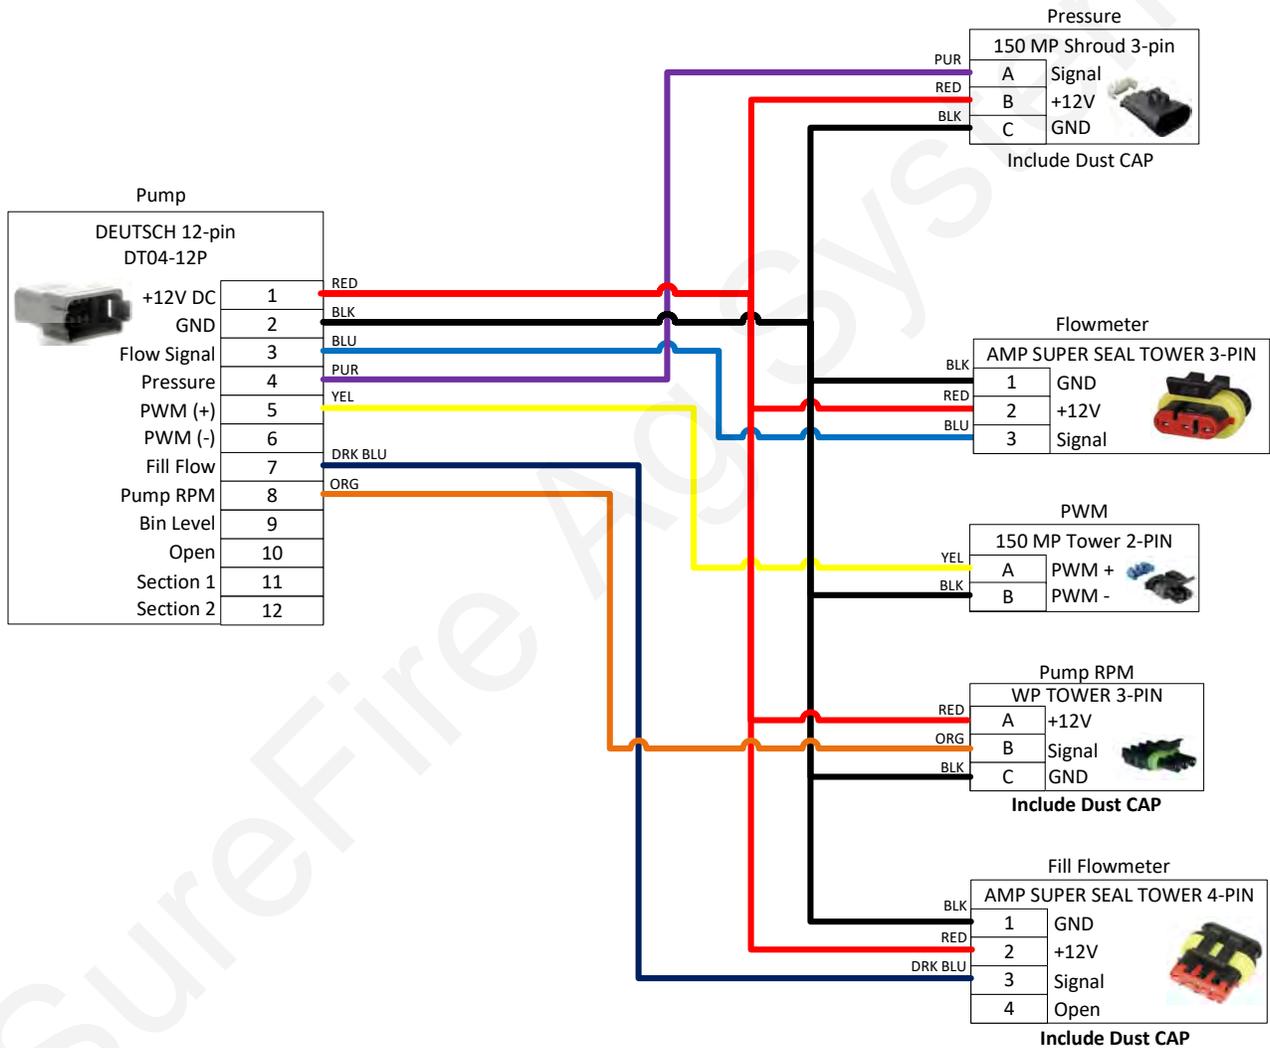

Part No:

207-3462Y2

Drawn By:

Brandon Cavenee

Description:

Final Cable for SureFire Liquid Pump System (pwm, flow, pres., pump rpm, fill flow)

Last Edit Date:

9/4/2018

Revision

A-02


Copyright 2018 SureFire Ag Systems, Reproduction or other use of drawing without express written permission from SureFire Ag Systems is forbidden

207-3463Y1

14-Pin 6-Section Final Cable (6 sections, flow return, pressure)

**Wire 18AWG
unless otherwise
specified**

Provide dust caps for WP and MP connectors

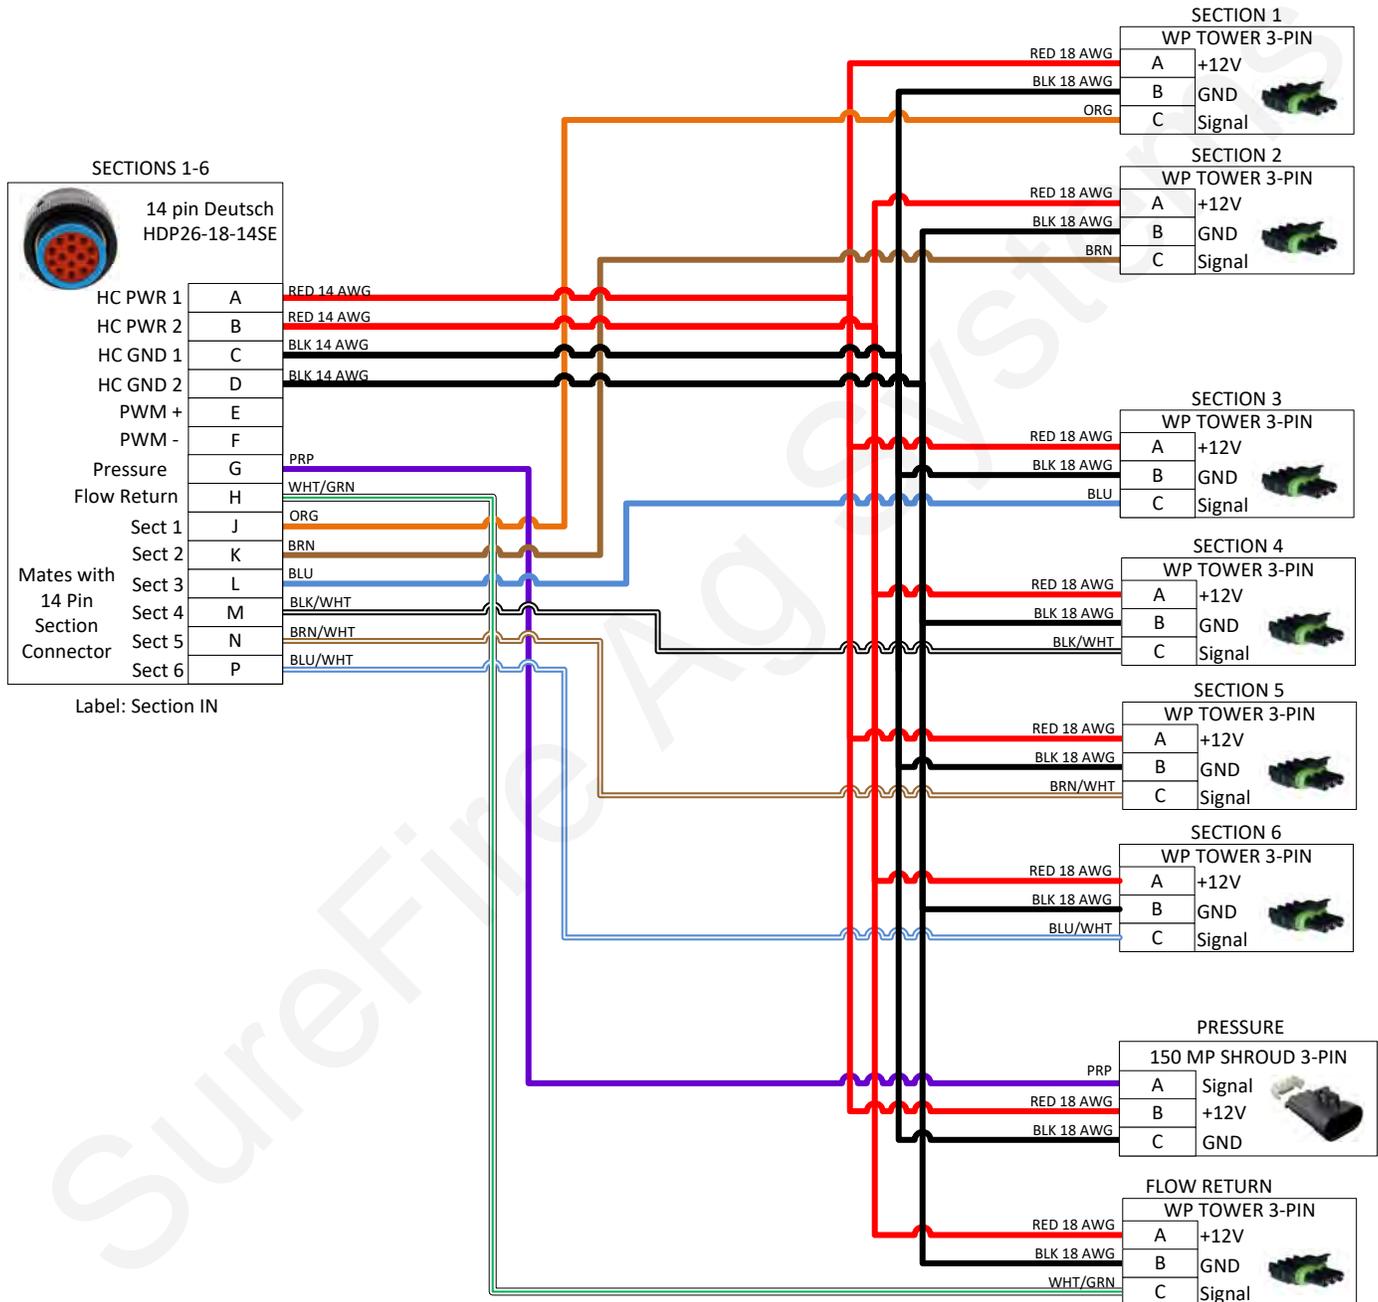

	Part No:	207-3463Y1	Drawn By:	Brandon Cavenee		
	Description:	14-Pin 6-Section Final Cable (6 sections, flow return, pressure)	Last Edit Date:	11/2/2016	Revision	A-01
	Copyright 2016 SureFire Ag Systems, Reproduction or other use of drawing without express written permission from SureFire Ag Systems is forbidden			32		


Floating Ball Flow Indicators

E Installation Overview

Flow Indicators are extremely flexible and can be mounted in hundreds of different configurations on various types of liquid application equipment. This page is to give you some ideas and let you customize the installation for what works best on your equipment.

16-Row Split 6 - 4 - 6


This configuration works well on a 16-row front fold planter. Each flow indicator manifold is shown fed by a cross in a single section installation. Each manifold could be fed by a section valve if desired.

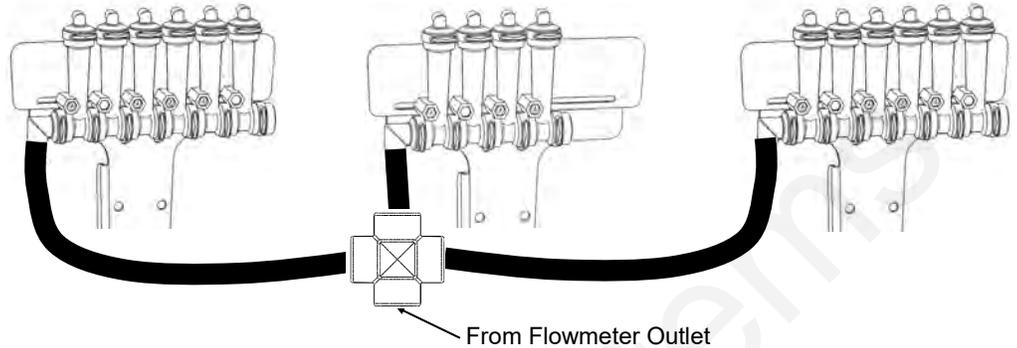

12-Row Split 3 - 3 - 3 - 3

Shown here is a 12-row with four 3-row sections controlled by four section valves. Note each 6-row T-Bracket can hold two separate 3-row manifolds.

A 4-section 24-row could be similar with four 6-row manifolds on two large T-Brackets.

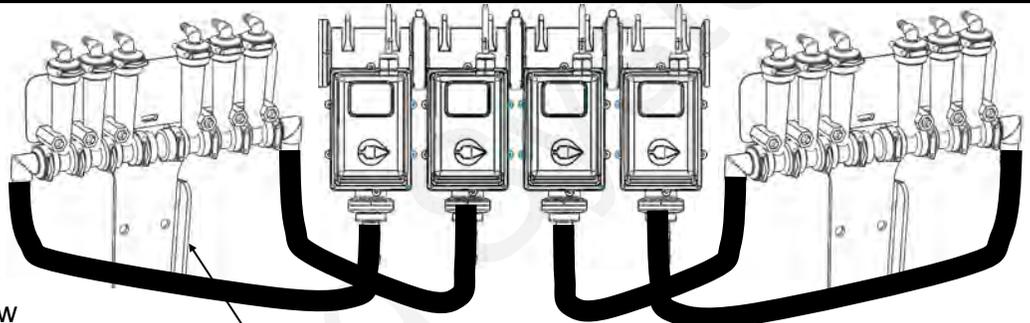


NOTE: Another option is the flange can face forward so the T-Bracket could be mounted on the front side of a bar.


12-Row Dual Product

Product 1 Split 4 - 4 - 4 / Product 2 Split 4 - 4 - 4

In this case each manifold would be fed by a section valve. There would be 6 total section valves (3 sections X 2 products). Most often one set (top) of flow indicators would be Full Flow for high rate fertilizer and 2nd set (bottom) would be Low Flow for starter.

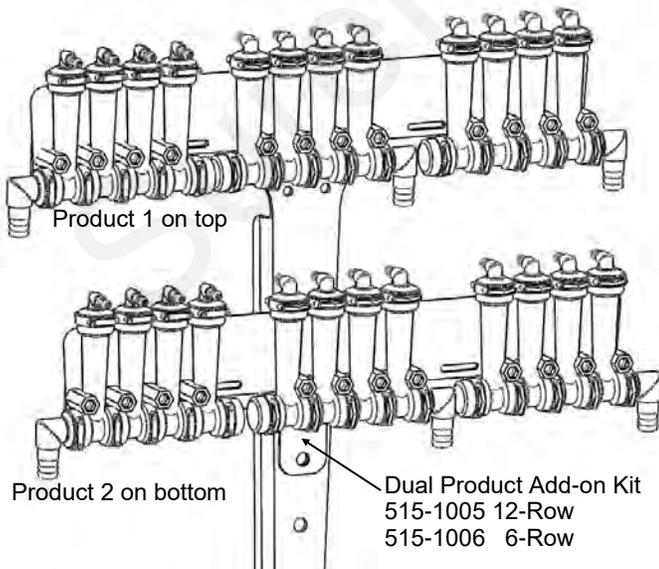

General Plumbing Guidelines

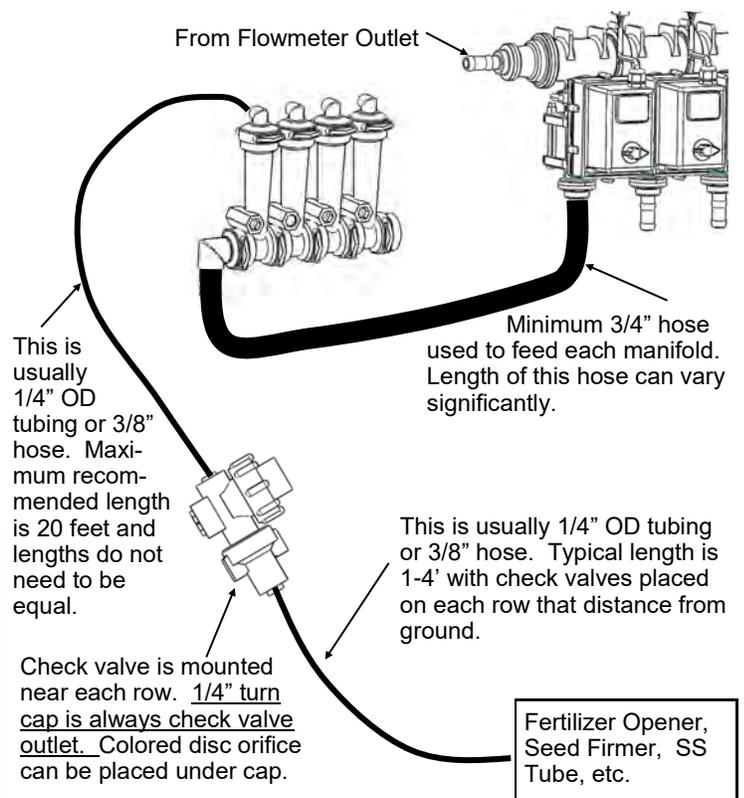


PumpRight Pump Installation

Mounting

1. Mount pump in your preferred location. The PumpRight pump has excellent suction and priming ability, so it can be mounted away from or above fertilizer tanks.
2. SureFire has U-Bolts available to mount the pump directly to multiple bar sizes shown below. Each U-bolt kit includes 1 bolt and 2 flange nuts.
3. If the U-Bolts will not work, order the universal backer plate kit, number 515-203000 which will clamp to any size tube from 4" - 8" wide.

E

Installation
Overview

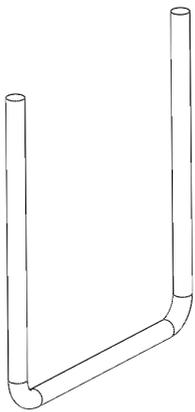

Mounting Bar
Size

Item Number

Item Description

3" x 3"	380-1022	1/2" U-bolt Kit - 1/2", fits 3" x 3" tube - (3" opening)
4" x 4"	380-1023	1/2" U-bolt Kit - 1/2", fits 4" x 4" tube - (4" opening)
4" x 6"	380-1015	1/2" U-bolt Kit - 1/2", fits 4" x 6" tube - (4" opening)
	380-1017	1/2" U-bolt Kit - 1/2", fits 6" x 4" tube - (6" opening)
5" x 7"	380-1014	1/2" U-bolt Kit - 1/2", fits 5" x 7" tube - (5" opening)
	380-1016	1/2" U-bolt Kit - 1/2", fits 7" x 5" tube - (7" opening)
6" x 7"	380-1018	1/2" U-bolt Kit - 1/2", fits 7" x 6" tube - (7" opening)
7" x 7"	380-1001	1/2" U-bolt Kit - 1/2", fits 7" x 7" tube - (7" opening)
6" x 10"	380-1021	1/2" U-bolt Kit - 1/2", fits 6" x 10" tube - (6" opening)
8" x 12"	380-1019	1/2" U-bolt Kit - 1/2", fits 8" x 12" tube - (8" opening)
8" x 16"	380-1020	1/2" U-bolt Kit - 1/2", fits 8" x 16" tube - (8" opening)



PumpRight Hydraulic Connections PWM Valve

E

Installation Overview

Manual Override - Push down and turn 1/2 turn CCW to lift the valve for manual override to check for proper hydraulic operation. **Override will completely open valve, so limit tractor hydraulic flow to valve.**

(May need to clean packed dirt to allow movement of override knob.)

Push down and turn 1/2 turn CW to return to operating position.

PWM Valve Connector -2 Pin MP Shroud

Troubleshooting Tip:

To check coil, an ohmmeter placed on the two pins should show 7-9 ohms.

Pressure line from Tractor


Load Sense Port—For power beyond hydraulic use only.

Bypass Valve—Remove the cap to access a bypass needle valve. This valve is shipped from the factory closed. **The only case when valve should be open is when running in series with other hydraulic motors.**

Depending on your tractor and exact hydraulic plumbing scenario your pump may turn very slowly when it should stop. To stop the pump completely, open the bypass valve slightly.

To adjust the Bypass Needle Valve, first loosen the lock nut. Do not overtighten the needle valve.

Return oil to Tank - Check valve included on return port

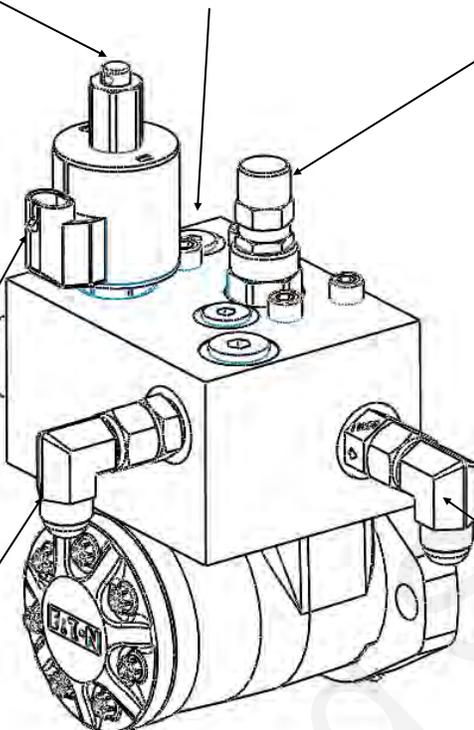

▲ DANGER

Hydraulic oil under extremely high pressure. Do not use hand or any other skin to check for or to stop hydraulic leaks. Be sure pressure is relieved before loosening hydraulic fittings. Replace worn hoses immediately. Seek medical care immediately if hydraulic oil is shot into the eye or the skin.

Pump Rotation Check Valve

A check valve is included on the outlet port of the hydraulic valve. This prevents the pump from running in the wrong direction. If ran in the wrong direction, liquid will be pumped, however the hydraulic valve will not be able to control the flow. The check valve can be identified by the Part Number 1108R stamped on it and a flow direction arrow.

How it Works with Power Beyond Hydraulics

This valve is designed to work with power beyond hydraulics. This configuration will not require a standard tractor remote hydraulic valve. The load sense port and hose described next will typically not be needed if other hydraulic ports are in use. If the load sense is needed, do this: First, remove the load sense plug and install a #6 male boss x #6 JIC adapter fitting, SureFire PN 161-01-6MB-6MJ. Then run a 3/8" or 1/4" hydraulic hose back to the tractor. This hose will connect to the load sense port on the tractor. The load sense line will signal the tractor hydraulic system to supply the flow needed by the pump to meet your application rate. The SureFire valve has an internal load sense check valve, which is required for power beyond hydraulics.. The bypass valve (see above) must be closed to use power beyond hydraulics or else an unlimited amount of oil will be continuously circulated.

PumpRight Hydraulic Connections

E

Installation
Overview

Hydraulic Hose

SureFire recommends 1/2" hydraulic hose for both pump inlet and outlet. The hoses will need #8 JIC female swivel fittings.

Where do I get hydraulic flow for my PumpRight?

This question is often asked as many implements use up all the hydraulic connections on a tractor. SureFire has some recommendations as to what works best.

Best Option - Dedicated PumpRight Circuit

If you have a tractor remote available, attach the tractor remote valve directly to the PumpRight pressure and return ports. **DO NOT** try to avoid this method simply to save another set of hydraulic hoses running to the tractor. Operating the PumpRight on it's own circuit is the simplest for installation and operation. It guarantees the PumpRight won't negatively affect any other hydraulic components on your equipment.

Preferred

Alternate Option - In Series with John Deere CCS Fan or Bulk Fill Seed Fan

If you do not have a tractor remote valve available, this may be your best method. You can plumb the PumpRight after the seed distribution fan. If using this method, the SureFire PWM bypass valve must be open (see previous page for instruction & picture). If bypass is left closed, the SureFire valve will limit the speed of the seed distribution fan.

For example, the John Deere CCS fan uses around 7 GPM of oil. This will limit the PumpRight maximum flow (approximately 8.5-9 GPM oil necessary for maximum flow). See the charts on the next page for adjusted maximum pump flow. See section G for flow charts to determine your necessary flow rate. If you absolutely need the maximum flow in this case, SureFire has an alternate motor (smaller displacement) to increase pump speed at 7 GPM oil flow.

DO NOT plumb the PumpRight in series with a vacuum fan. The vacuum fan uses just a few GPM of oil. Also, problems will be caused by excessive pressure at the vacuum fan motor

Two PumpRights

The preferred method is to plumb the two pumps in series. **DO NOT** plumb two pumps after the CCS fan. Excessive pressures may damage the CCS fan motor. Run the pressure line from tractor to first pump inlet. Plumb from the outlet of Pump 1 to the Inlet of Pump 2, then from Pump 2 outlet back to the tractor. Open the bypass needle valve on both pumps so each valve controls motor speed independently. Run the flow setting procedure on the next page to minimize the hydraulic flow based on the pump that requires more hydraulic motor flow.



! DANGER

Hydraulic oil under extremely high pressure. Do not use hand or any other skin to check for or to stop hydraulic leaks. Be sure pressure is relieved before loosening hydraulic fittings. Replace worn hoses immediately. Seek medical care immediately if hydraulic oil is shot into the eye or the skin.

PumpRight Hydraulic Oil Flow Requirements

(Requirements for 4.0 CID Motor—standard SureFire motor beginning in 2016—
Earlier motor was 4.9 CID which uses 20% more oil)

E

Installation
Overview

Setting Tractor Hydraulic Remote Speed

PumpRight pumps require a constant hydraulic oil flow from the tractor. The amount of oil needed varies with pump size and speed. The chart at right shows the necessary oil flow for each pump model at varying fertilizer flows.

Use this procedure to determine the correct setting on your tractor hydraulic flow.

1. Run the fertilizer system in the field at the maximum rate and ground speed.
2. Turn down the hydraulic flow slowly while watching the pump flow (Volume / Minute).
3. Observe when the Volume / Minute begins to drop.
4. Turn the hydraulic flow back up slightly.

This setting will provide the Pump Right pump just enough oil for your application rate.

If running with the bypass open (only recommended when 2 motors are operated in series) this process will minimize the oil circulated in the bypass loop, leaving more oil flow for other hydraulic functions.



The pump is rated at a maximum of 550 RPM. Spinning the pump over 550 RPM may cause pump failure.

The system will spin the pump faster than that if precautions are not taken to limit the speed. This could happen if the strainer becomes plugged or blocked and the controller attempts to speed the pump up to achieve the desired Rate. It could also happen if a high pressure situation occurs that opens the Pressure Relief Valve (PRV) and the pump speeds up to try to achieve the Rate.

A way to limit the maximum pump speed is to set the High PWM Limit just above what is needed for regular operation. If the pump tries to speed up above that, check for blocked strainer or other issue.

Model PR17 - 3 Diaphragms		
Fertilizer Flow (GPM)	Pump Speed (RPM)	Hydraulic Oil Flow (GPM)
5	137	2.4
10	275	4.8
15	412	7.1
17	467	8.1

Model PR30 - 3 Diaphragms		
Fertilizer Flow (GPM)	Pump Speed (RPM)	Hydraulic Oil Flow (GPM)
5	85	1.5
10	170	2.9
15	255	4.4
20	340	5.9
25	425	7.4
30	510	8.8

Model PR40 - 4 Diaphragms		
Fertilizer Flow (GPM)	Pump Speed (RPM)	Hydraulic Oil Flow (GPM)
10	115	2.0
20	229	4.0
30	344	6.0
40	458	7.9


Model D250 - 6 Diaphragms		
Fertilizer Flow (GPM)	Pump Speed (RPM)	Hydraulic Oil Flow (GPM)
10	86	1.6
20	172	3.2
30	258	4.8
40	343	6.4
50	429	8.0
55	472	8.6



PR17 & PR30 Liquid Plumbing Connections

E

Installation
Overview

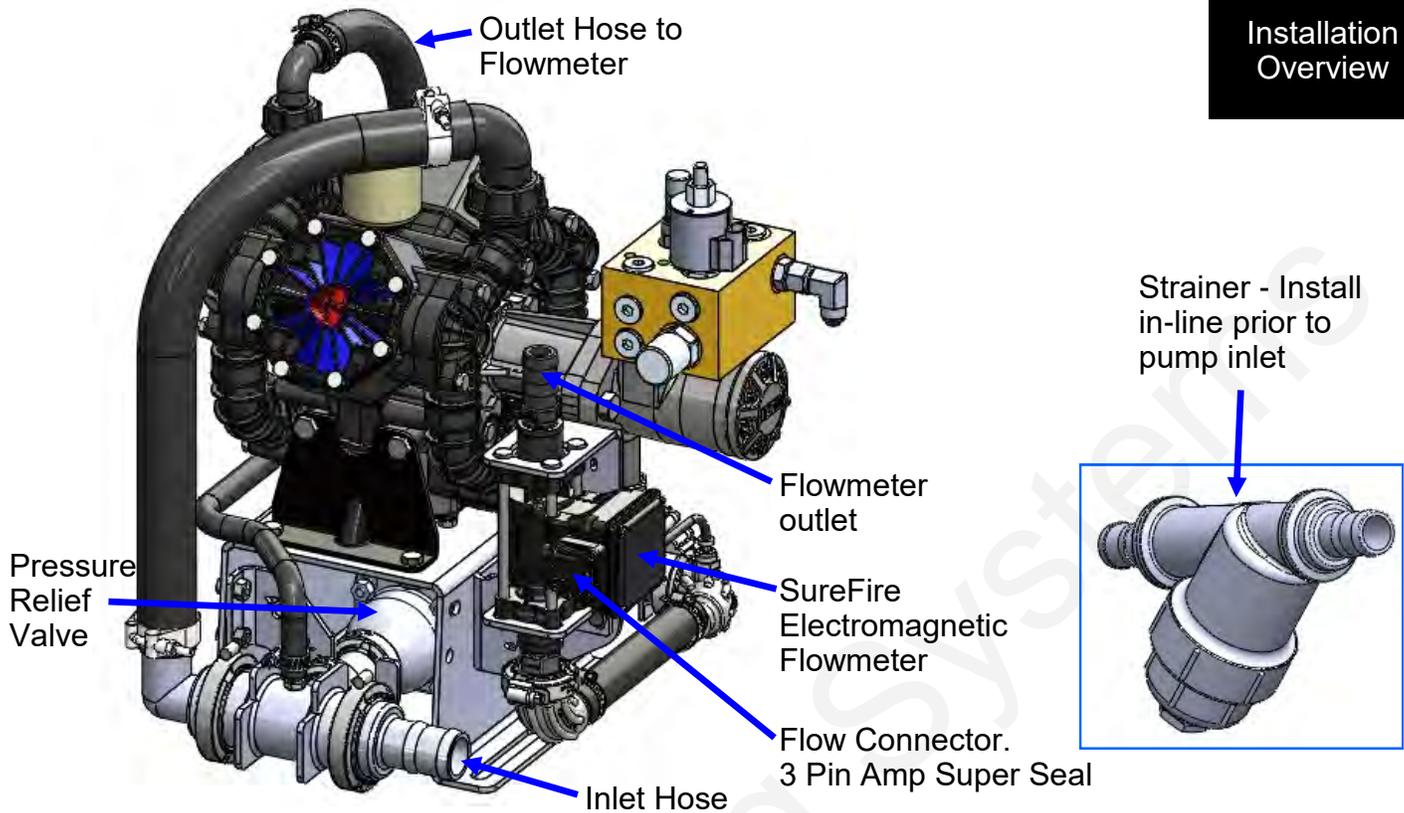


Inlet: The PR17 and PR30 PumpRight are shipped with a 1 1/2" inlet hose barb. Attach this to the hose from your supply tank and strainer. A 1 1/2" 90 degree hose barb is included and can be substituted.

Inlet Strainer: A 20 mesh strainer is included in the pump kit. The manifold strainer includes two hose barbs so it can be mounted anywhere in the inlet line. If space allows, the strainer can be mounted directly to the inlet plumbing assembly as shown below.

Outlet: The outlet is plumbed directly to the flowmeter with 1" hose. As shown above, the flowmeter may be mounted directly to the PumpRight pump. The flowmeter outlet is a 1" hose barb. The outlet hose should be a minimum of 24" long with a gentle curve prior to any fittings for optimum flowmeter performance. The flowmeter outlet will attach to your manifold(s) or section valves. A 3/4" hose barb is included in the bag of parts and can be substituted on the flowmeter outlet.

Pressure Relief Valve (PRV): The PRV is a 100 psi relief. If there is a restriction that creates over 100 psi in the system, the PRV will open allowing the excess flow to pass back to the inlet side of the pump. This protects the pump and fertilizer system from damage.

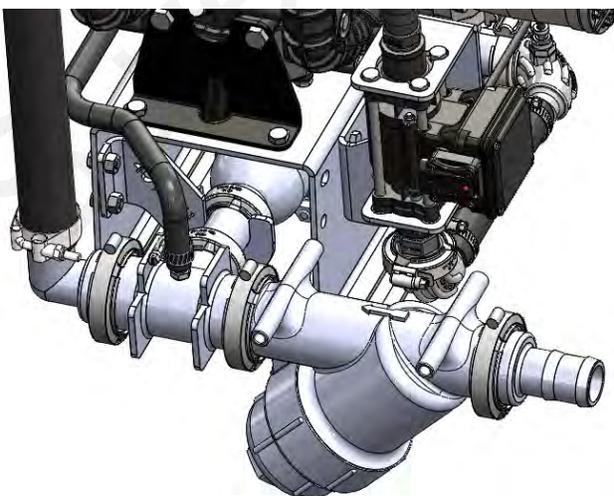




CAUTION

These pumps can deliver liquid at high pressure (290 PSI). Be sure the 100 PSI Pressure Relief Valve (PRV) is installed and functioning so system pressure will be kept under 100 PSI. Check hoses, hose clamps, and liquid fittings regularly and repair or replace loose connections.

PR40 & D250 Liquid Plumbing Connections

E

Installation Overview

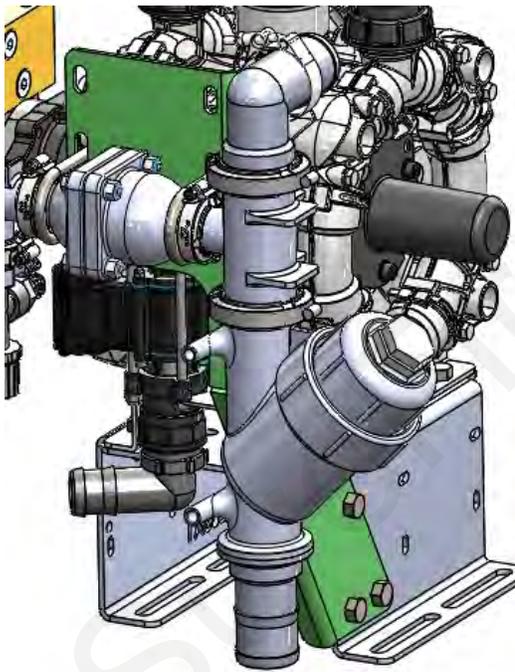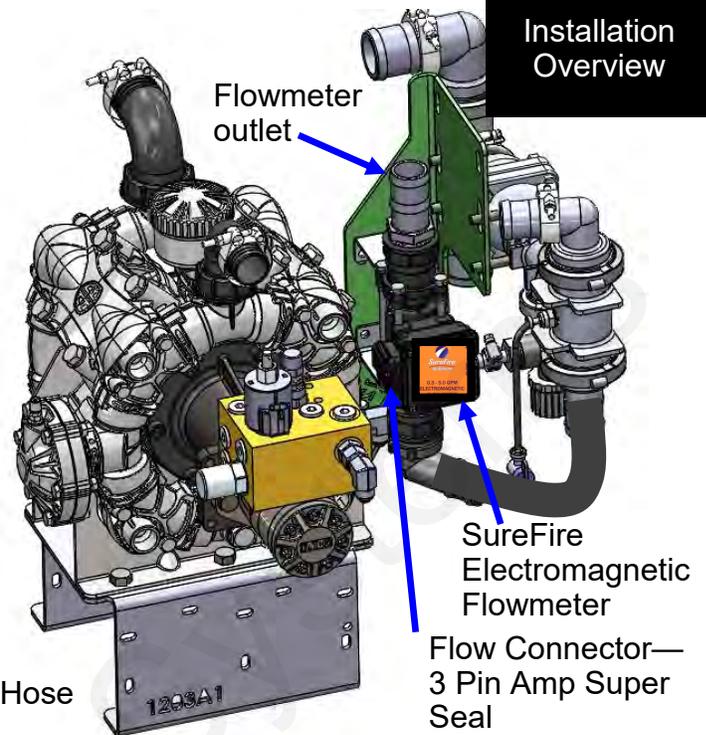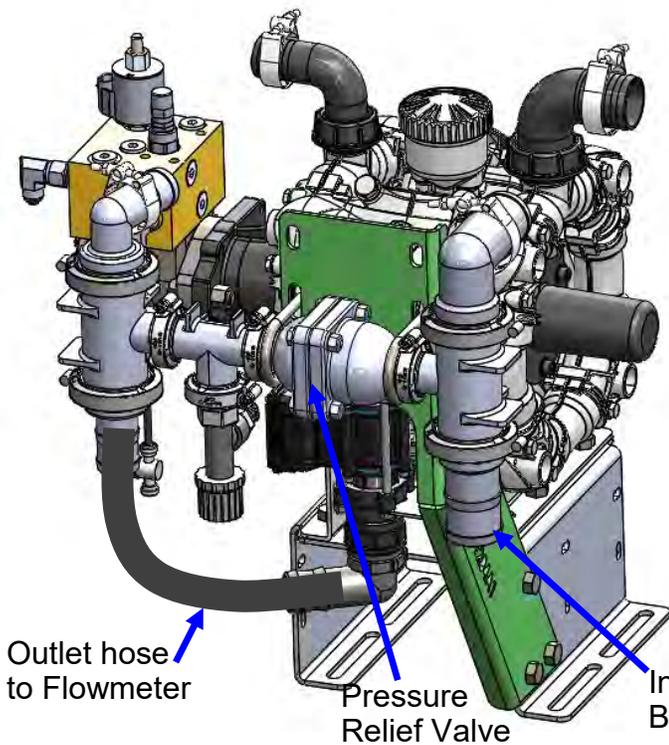

Inlet: The PR40 and D250 PumpRight are shipped with a 2" inlet hose barb. Attach this to the hose from your supply tank and strainer. A 2" 90 degree hose barb is included and can be substituted.

Inlet Strainer: A 20 mesh strainer is included in the pump kit. The manifold strainer includes two hose barbs so it can be mounted anywhere in the inlet line. If space allows, the strainer can be mounted directly to the inlet plumbing assembly as shown in image to the left.

Outlet: The outlet is plumbed directly to the flowmeter with 1 1/2" hose. As shown above, the flowmeter may be mounted directly to the PumpRight pump. The flowmeter outlet is a 1 1/2" hose barb. The outlet hose should be a minimum of 24" long with a gentle curve prior to any fittings for optimum flowmeter performance. The flowmeter outlet will attach to your manifold(s) or section valves.

Pressure Relief Valve (PRV): The PRV is a 100 psi relief. If there is a restriction that creates over 100 psi in the system, the PRV will open allowing the excess flow to pass back to the inlet side of the pump. This protects the pump and fertilizer system from damage.

These pumps can deliver liquid at high pressure (290 PSI). Be sure the 100 PSI Pressure Relief Valve (PRV) is installed and functioning so system pressure will be kept under 100 PSI. Check hoses, hose clamps, and liquid fittings regularly and repair or replace loose connections.


Ag Leader Integra Display Setup w/ LPCM

F



Setup & Operation

The following pages have some of the screens used in setting up the Integra display for the Liquid Product Control Module (LPCM). Screens and navigation will be similar on the InCommand display. **Not all screens are shown. Your screens will be set up differently than what is shown for many of the screens. These are shown as examples of the navigation that you will go through in doing the setup. If your system is on a planter, there will be additional setup for that.**

Configuration Setup





(Top Right of screen)

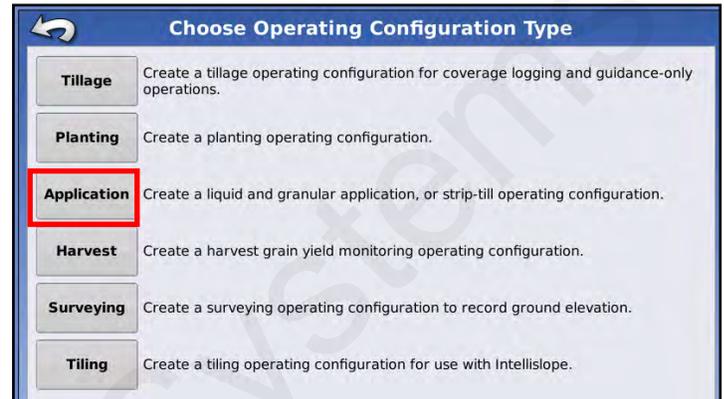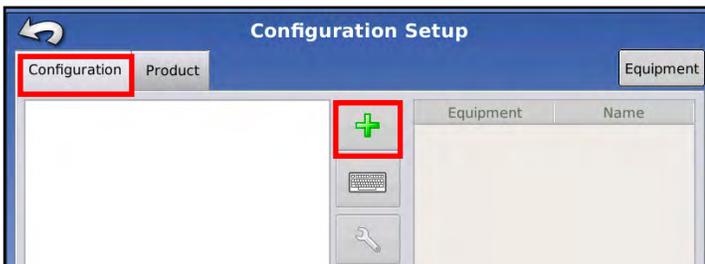

Select or Add a Tractor and enter the information.

Select or Add an Implement

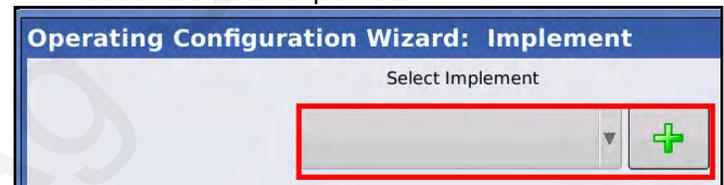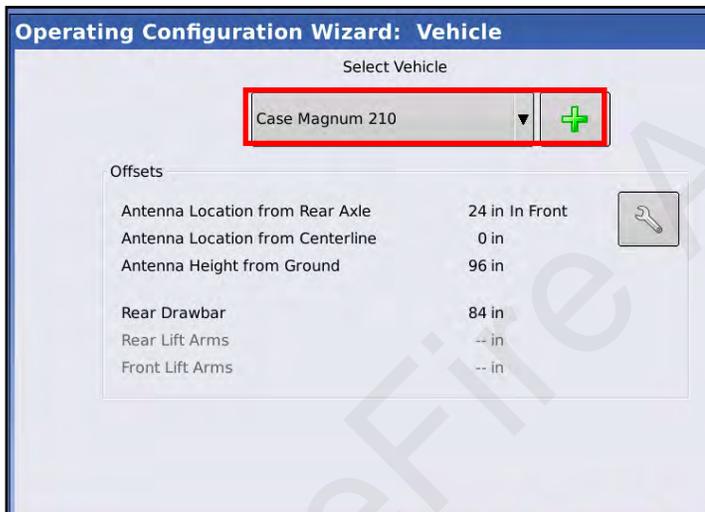

Enter the Implement Information



Ag Leader Integra Display Setup w/ LPCM



Not all screens are shown. Your setup may be different than what is shown. These are shown for navigational assistance.

Liquid Application Channel Setup

Implement Wizard: Application Channels

Type	Controller	Channel	Container

Equipment Setup Wizard: Rate Controller

Select Application Rate Controller

DirectLiquid

Equipment Setup Wizard: Container

Container Name: Main Tank

Capacity: 600

Units: gallons

Equipment Setup Wizard: Swath Width

Enter Full Swath Width

60 ft

Maximum of 10 Sections on LPCM

Equipment Setup Wizard: Section Count

Enter Number of Boom Sections

8

TIP: DO NOT enter the number of individual rows. For most implements, enter the number of swath sections that can be independently turned on and off.

Equipment Setup Wizard: Section Configuration

Enter Boom Section Widths from Left to Right

Section	Swath Width (ft)
1	7.5000
2	7.5000
3	7.5000
4	7.5000
5	7.5000
6	7.5000
7	7.5000
8	7.5000

TIP: The implement is divided into equal section sizes by default. To modify the sections, press the keypad button for each section that needs to be changed.

Equipment Setup Wizard: Application Point Offset

Enter Distance from Hitch to Application Point (front to back)

22 ft

Implement Wizard: Application Channels



Type	Controller	Channel	Container
Liquid	DirectLiquid		Main Tank

Ag Leader Integra Display Setup w/ LPCM



Not all screens are shown. Your setup may be different than what is shown. These are shown for navigational assistance.

Controller Setup



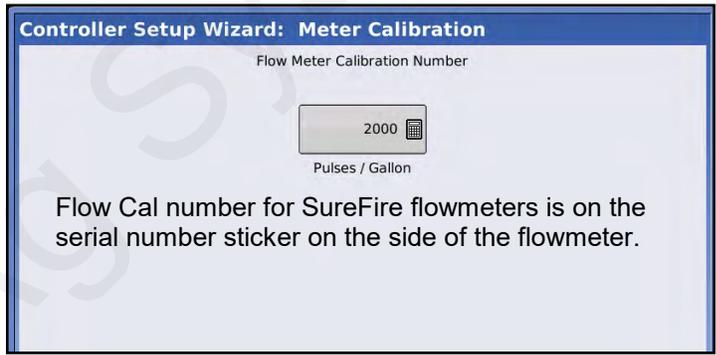
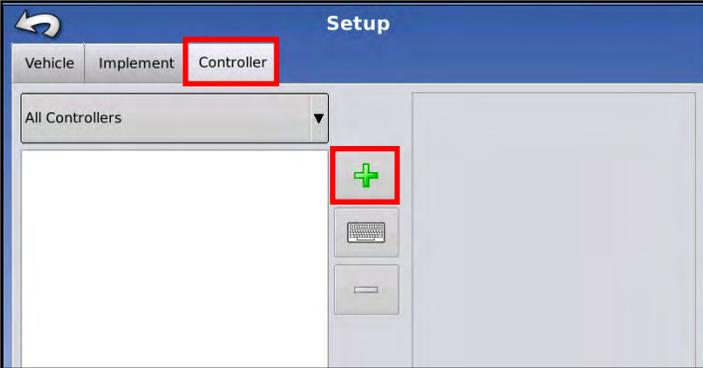


Ag Leader Integra Display Setup w/ LPCM



Not all screens are shown. Your setup may be different than what is shown. These are shown for navigational assistance. Use these numbers / settings.



Configuration Setup - Controller / Control Valve Settings - Manual Speed Entry

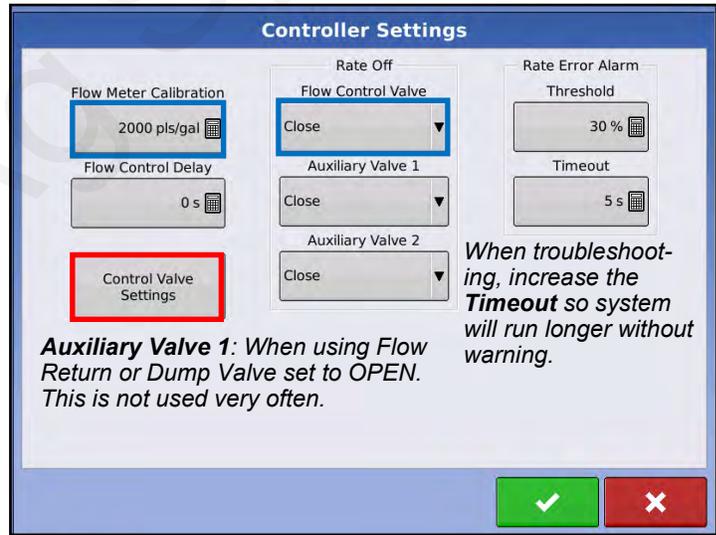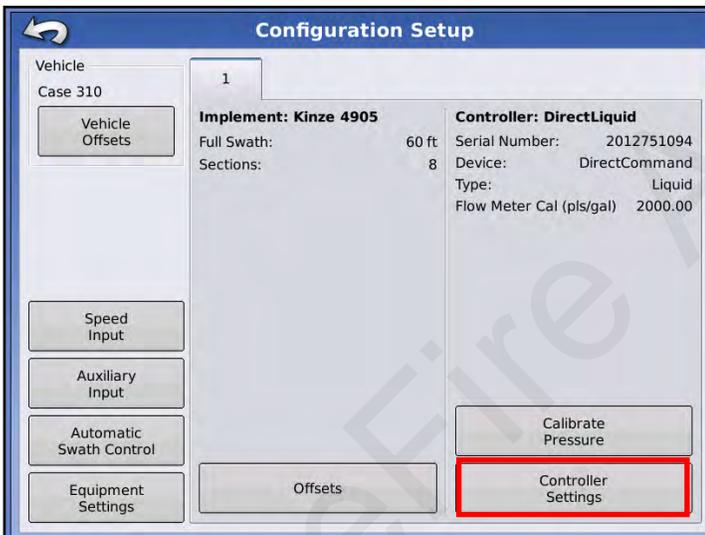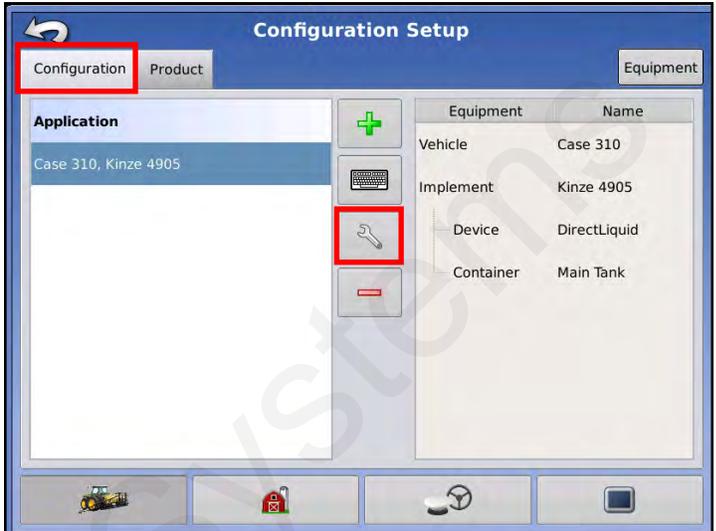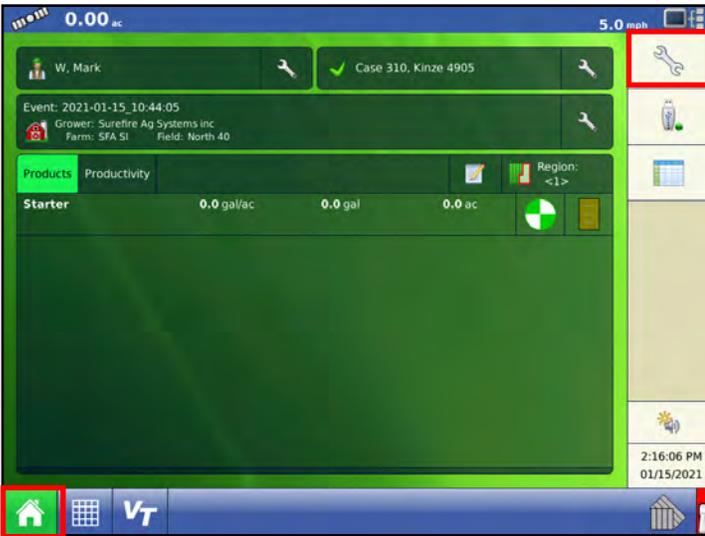

Adjust PWM Gain as needed in the field (decrease if rate is bouncing around; increase to adjust quicker)



To enter a Manual Speed so you can run a test while sitting still.

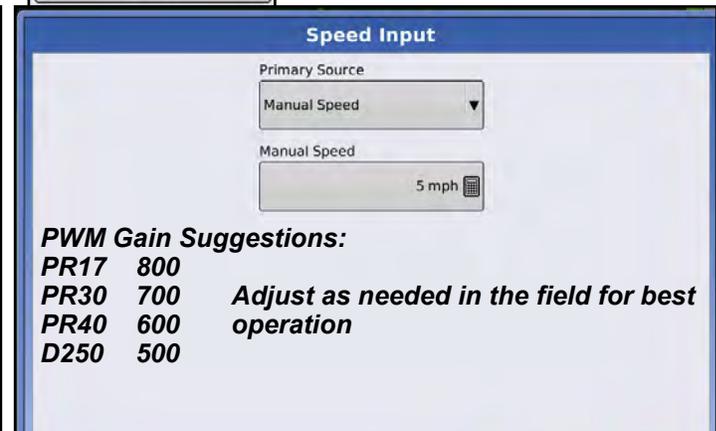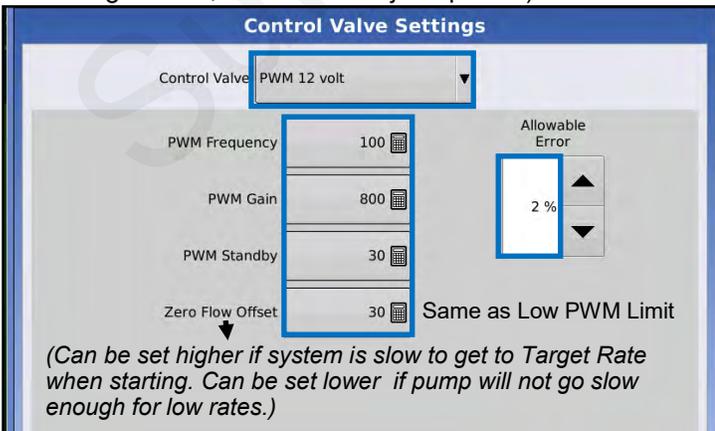

PWM Gain Suggestions:

- PR17 800
- PR30 700
- PR40 600
- D250 500

Adjust as needed in the field for best operation



Ag Leader Integra Display Setup w/ LPCM



Not all screens are shown. Your setup may be different than what is shown. These are shown for navigational assistance.

Calibrate Pressure Sensor, Swath Control, Auxiliary Input, Rate Smoothing

Calibrate Pressure

Pressure Sensor Calibration: Step 1 of 3

Select Pressure to Calibrate

Main

Pressure Sensor Calibration: Step 2 of 3

Enter a Pressure value as a Set Point

0 PSI

Enter Voltage / Pressure Ratio

50.0 mV/PSI

50 mV/PSI for standard Sure-Fire 100 PSI, 0 to 5 volt sensor.

Reset to Default

Automatic Swath Control

Automatic Swath Control

Application

Outside Boundary Option

- Keep Unchanged
- Turn Section Off

Coverage Option

- Minimize Skip
- Minimize Overlap
- User Defined 100 %

Look-Ahead Settings

Look Ahead Settings

DirectLiquid

Turn-On: 1.0 s

Turn-Off: 0.5 s

Turn On / Turn Off: Set this as needed to get product to hit the ground and then to stop at the right time. Will only work if the operator starts the pass and ends the pass at the same speed each time.

Auxiliary Input

Auxiliary Input

	DirectLiquid
F1 (Master)	Channel On/Off
F2 (Switch 1)	1
F3 (Switch 2)	2
F4 (Switch 3)	3
F5 (Switch 4)	4
F6 (Switch 5)	5
F7 (Switch 6)	6
F8 (Switch 7)	7
F9 (Switch 8)	8
F10 (Switch 9)	
F11 (Switch 10)	
External 1	
External 2	

Assign

Master Source

Switch

Equipment Settings

Equipment Configuration Settings

Rate Outside of Field

Zero

Rate Change Look-Ahead

0 sec

Rate Display Smoothing





Rate Change Look Ahead: Set this if needed when using a prescription. Typically, leave at 0.

Ag Leader Integra Display Setup w/ LPCM



Not all screens are shown. Your setup may be different than what is shown. These are shown for navigational assistance.

Configuration Setup / Product Setup / Equipment Setup

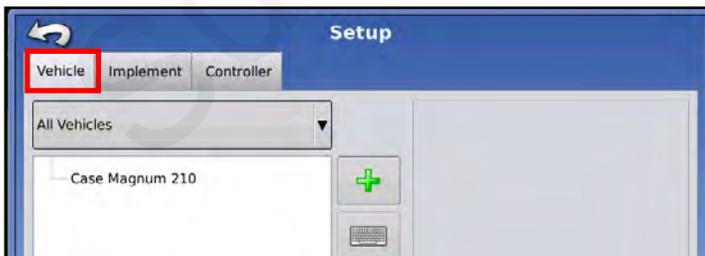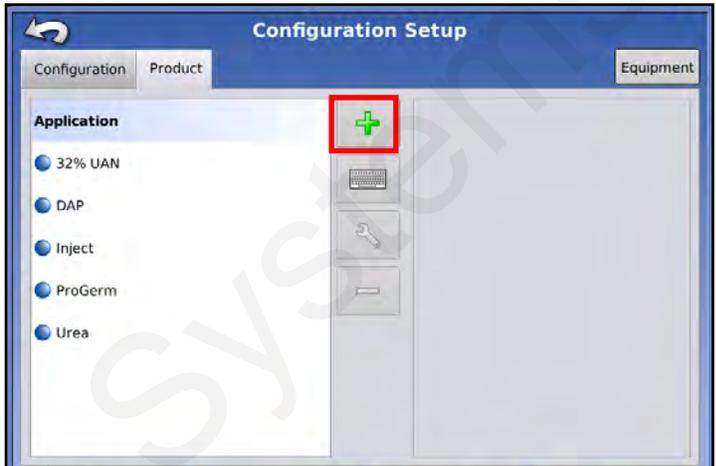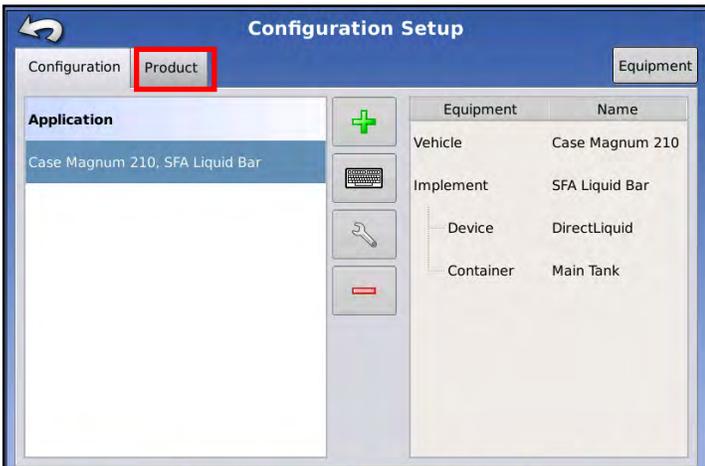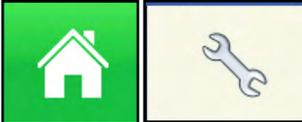

LPCM Run Screen

Your screen will look different than this, depending on the systems you are operating. This page shows the basic elements of a liquid system.



The Grid button in the lower left corner of the screen brings up the Map screen for Run Time Operations.

Ground Speed Device Information (Diagnostic) Button

To test the system, enter a Manual Speed. Turn Auto Swath OFF. Select a Rate, turn on the Master Switch and section switches. System should begin running and lock on to the Target Rate. You can turn individual sections ON and OFF. Press on the **Diagnostic** button to see system parameters, especially PWM Duty Cycle and Flow Meter Frequency and Pulse Count.

Pressure (PSI)	
Main:	34
Agitation:	0
Auxiliary:	0

When testing with water, the pressure will be much less than it will be with fertilizer. This may mean that some rows may not flow because there is not enough pressure to keep all the check valves open. Increase the Rate to build more pressure.

Ag Leader Integra Display Setup w/ LPCM

F

Setup & Operation

Not all screens are shown. Your setup may be different than what is shown. These are shown for navigational assistance.

Diagnostics - Device Information

Devices

CAN A CAN B

DISPLAY

- 128 Liquid Product Module
- 233 Auxiliary Input Module

Firmware: 1.19.0
Firmware ID: DC LIQUID
Hardware ID: 4000405
Product ID: DC LIQUID
Serial Number: 2012751094
Revision: 4.2.0.0
Run Time: 1035976:05:12
Boot Counter: 399
CAN Name: A00C81010C21D906

Diagnostics

Liquid Diagnostics

Controller Name	DirectLiquid
Serial Number	2012751094
Main Pressure (kPa)	234
Agitation Pressure (kPa)	N/A
Auxiliary Pressure (kPa)	0
PWM Duty Cycle (%)	39.78
Flow Meter Signal Frequency (Hz)	83
Flow Meter Pulse Count	30301

PWM Duty Cycle is an indication of how fast the controller is telling the pump to run. The controller adjusts the PWM Duty Cycle to speed the pump up or to slow it down.

A hydraulic pump will generally run between 30% and 50%.

Check this during field operation to get an idea of what is normal.

This should be fairly stable ($\pm 2\%$) when travelling at a steady speed through the field.

The Flow Meter Signal Frequency should be stable (± 2 or 3).

Initial Operation - LPCM--Manual Mode

F

Setup &
Operation

SureFire recommends you perform these exact steps with water to verify system is correctly installed and ready for field use.

0.71 ac

Ground Speed → 5.0 mph

MANUAL

Product Tab 32% UAN gal/ac

Target Rate OFF

Actual Rate 9.00

1 15 Increase

2 9 Decrease

M

Flow: 1.6 gal/min

Container: 345 gal

If this bar is not showing, press the Product Tab (above).

Section Indicator - will be green in Run mode.

20 ft 0 in 100 %

Pressure (PSI)

Main: 34

Agitation: 0

Auxiliary: 0

VT

Diagnostics

1. Enter manual mode by pushing the “M” button in the upper right corner of the screen. You can tell you are in manual mode when the “Target” Rate says “OFF”. Turn AutoSwath OFF.
2. If using implement lift switch, move implement switch to lowered position. If not using implement switch, jumper must be installed (see wiring diagram in section D).
3. On the Switch Box, turn the master switch On. Turn section switches On and Off to check proper section valve operation. Leave all section valves On.
4. Use up arrow on right side of screen to increase flow. Does “Flow Rate” display a flow rate? Is it stable after the system is primed? Do increase & decrease buttons increase & decrease flow?
5. When you can increase and decrease flow using the arrows, you are ready to move to the next step.
6. Conduct a catch test to verify the flowmeter calibration is correct. It is unusual if the Flow Cal number needs to be changed. (The most accurate method to measure the volume of water run is to place a container under every nozzle and add together the amount from each nozzle. This assures that 100% of the water is collected and that all rows are equal. At a minimum, collect water from 4-6 rows. **NEVER base a calibration on a single row catch.** It is important to perform this procedure at a flow rate similar to that which will be used in the field.)
7. Press the **Diagnostic** button (upper right corner) to see more system information while it is running.

Setup and Operation – InCommand / ISO Liquid

F Setup & Operation

Go to support.agleader.com or use the InCommand manual or Quick Reference Guide to help with setup.

The screenshot shows the InCommand software interface. At the top, there is a main menu with icons for Setup, Summary, Universal Terminal, Camera, Tillage, Planting, Application, Harvest, Water Management, and Guidance. Below this is the 'Configuration Setup' screen, which has tabs for Configuration, Product, and Equipment. The 'Equipment' tab is active, showing a list of equipment items: Vehicle (SFA), Implement (Green 123), Device (ISO Liquid), and Container (Main Tank). A red box highlights the 'Setup' icon in the main menu. Another red box highlights the 'Equipment' tab. A third red box highlights the 'Application' list, and a fourth red box highlights the 'Setup' icon in the 'Application' list. Below the equipment list, there are several buttons: Vehicle Offsets, Speed Input, Auxiliary Input, Automatic Swath Control, Equipment Settings, and Offsets. A red box highlights the 'Vehicle Offsets' button. Another red box highlights the 'Automatic Swath Control' button. A third red box highlights the 'Equipment Settings' button. A fourth red box highlights the 'Offsets' button. The 'Vehicle' section shows 'SFA' and '1'. The 'Implement' section shows 'Green 123', 'Full Swath: 20 ft', and 'Sections: 2'. The 'Controller' section shows 'ISO Liquid', 'Device: ISOBUS', 'Make: Ag Leader Technology, Inc.', and 'Model: ISO Liquid Control'.


Sample screens are shown here. Your setup will probably be different. Not all the setup screens are shown here. The screens shown should help you navigate through the system.



You may not use all these screens.

You may use other screens not shown here.

Product Setup


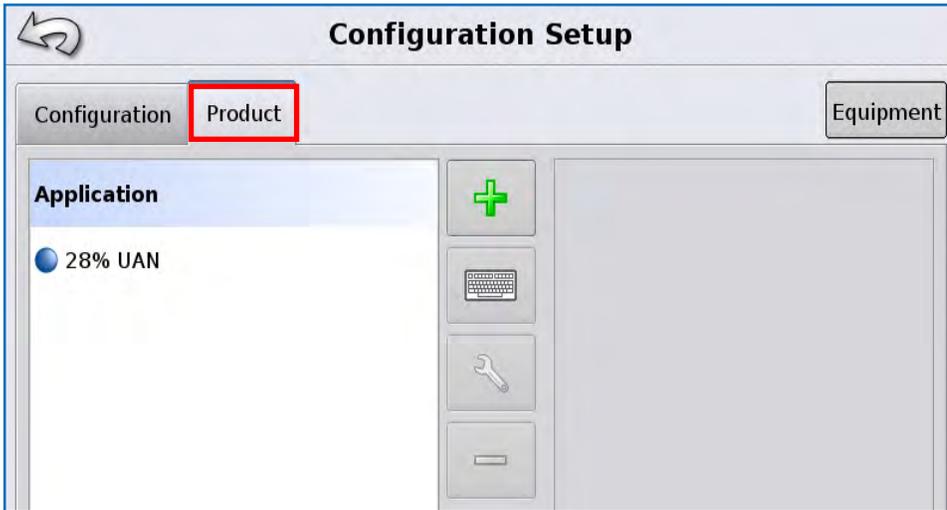


Add a product.

Edit a product.

Set up units and other product information.

Set up the Rate Legend as desired.

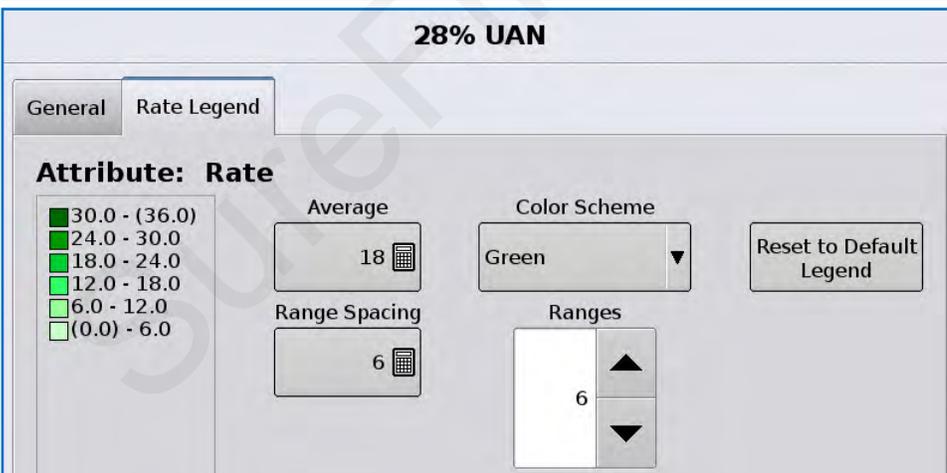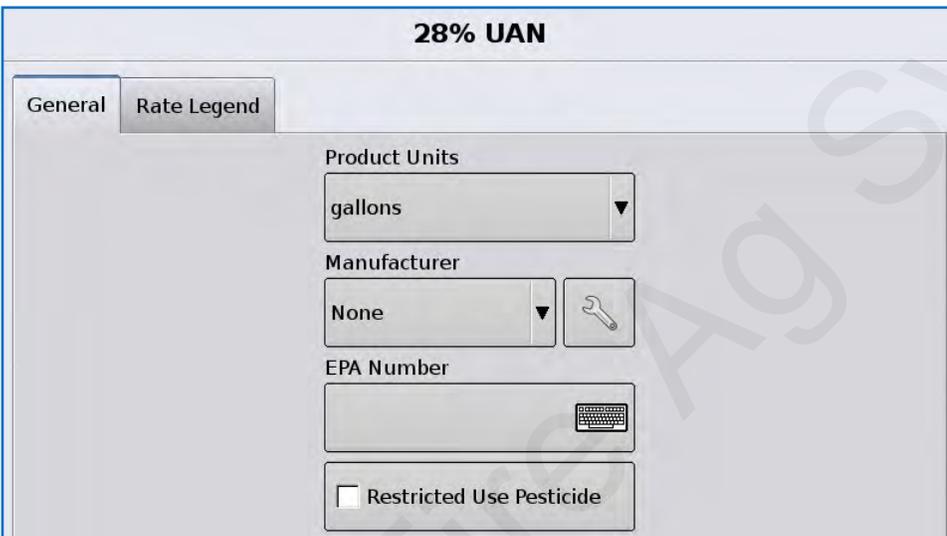

Configuration Setup

Speed Input

Automatic Swath Control

Equipment Configuration Settings



Speed Input

Primary Source

Backup Source

Auxiliary Device Channel

Auxiliary Channel Calibration

Pulses / 100 ft

Speed Input

Primary Source

Manual Speed

Set a **Manual Speed** to run the system while standing still.

Automatic Swath Control

Application

Outside Boundary Option

Keep Unchanged

Turn Section Off

Coverage Option

Minimize Skip

Minimize Overlap

User Defined

Look-Ahead Settings

ISO Liquid, Boom (2) Turn-On: Turn-Off:

Set the **Look-Ahead Settings** so liquid application starts and stops at the correct time.

Equipment Configuration Settings

Rate Outside of Field

Rate Display Smoothing

Rate Change Look-Ahead

0 sec

When using an Implement Switch, set **Implement Switch Polarity** for proper operation.

Implement Switch Polarity

None

Implement Switch Polarity

Standard

Implement Switch Polarity

Reversed


When using a variable rate prescription, set **Rate Change Look-Ahead** as desired.

Equipment Setup


Vehicle Implement Controller



Vehicle

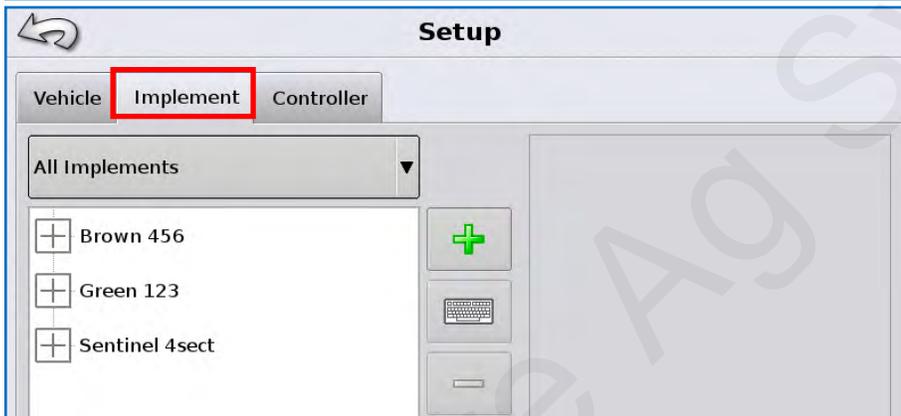

Implement

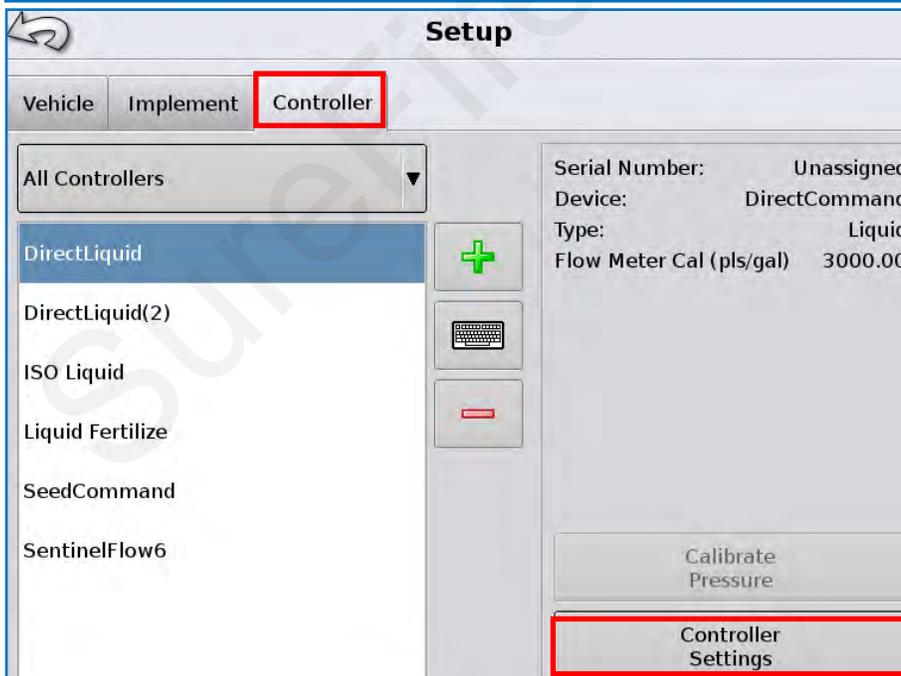

Controller

If **Direct Command** is selected, there will be a button in the bottom right corner—**Controller Settings**- which will take you to the screens on the next page.

Controller Settings



Controller Settings

Flow Meter Calibration <input type="text" value="3000 pls/gal"/>	Rate Off Flow Control Valve <input type="text" value="Close"/>	Rate Error Alarm Threshold <input type="text" value="30 %"/>
Flow Control Delay <input type="text" value="0 s"/>	Auxiliary Valve 1 <input type="text" value="Close"/>	Timeout <input type="text" value="30 s"/>
<input type="button" value="Control Valve Settings"/>	Auxiliary Valve 2 <input type="text" value="Close"/>	

Control Valve Settings

Control Valve:

PWM Frequency	<input type="text" value="100"/>	Allowable Error <input type="text" value="2 %"/>
PWM Gain	<input type="text"/>	
PWM Standby	<input type="text" value="10"/>	
Zero Flow Offset	<input type="text" value="10"/>	

Control Valve Settings

Zero Flow Offset (PWM Low Limit) may be lowered if pump needs to run slower to get down to rate. Zero Flow Offset may be raised to help system get to rate quicker on startup.

PWM Standby is only used if Flow Control Valve is set to HOLD.

PWM Standby cannot be lower than Zero Flow Offset.

PWM Gain Suggestions:

PR17	800	Adjust as needed in the field for best operation.
PR30	700	
PR40	600	Increase if pump adjusts too slowly.
D250	500	Decrease if pump won't lock on.


Console Setup / ISO Settings / Universal Terminal

<h3>Console Setup</h3> <p>General Display Features AgFiniti Advanced</p> <p>Brightness: Auto Volume: 70 %</p> <p>Time / Date: 12:51:50 PM 01/28/2019</p> <p>Time Zone: America (Chicago)</p> <p>Language / Country: English / US</p> <p>Operating Units: Imperial</p> <p><input checked="" type="checkbox"/> Enable Video</p> <p><input checked="" type="checkbox"/> ISOBUS Settings</p>		<h3>ISOBUS Settings</h3> <p>Universal Terminal</p> <p><input checked="" type="checkbox"/> Enable Universal Terminal</p> <p><input checked="" type="checkbox"/> Broadcast Display Speed (ISO GBSD)</p> <p><input checked="" type="checkbox"/> Broadcast GPS (J1939)</p> <p><input checked="" type="checkbox"/> Auxiliary Module Support</p> <p>Function Instance: <input type="text" value="0"/></p>		<p>Task Controller</p> <p><input checked="" type="checkbox"/> Enable Task Controller</p> <p><input checked="" type="checkbox"/> Section/Rate Compatibility</p> <p><input checked="" type="checkbox"/> ECU Section Delays</p> <p>Function Instance: <input type="text" value="0"/></p> <p>File Server</p> <p><input type="checkbox"/> Enable File Server</p>	
--	--	--	--	---	--

Ag Leader Liquid ISO & Universal Terminal

F

Setup &
Operation

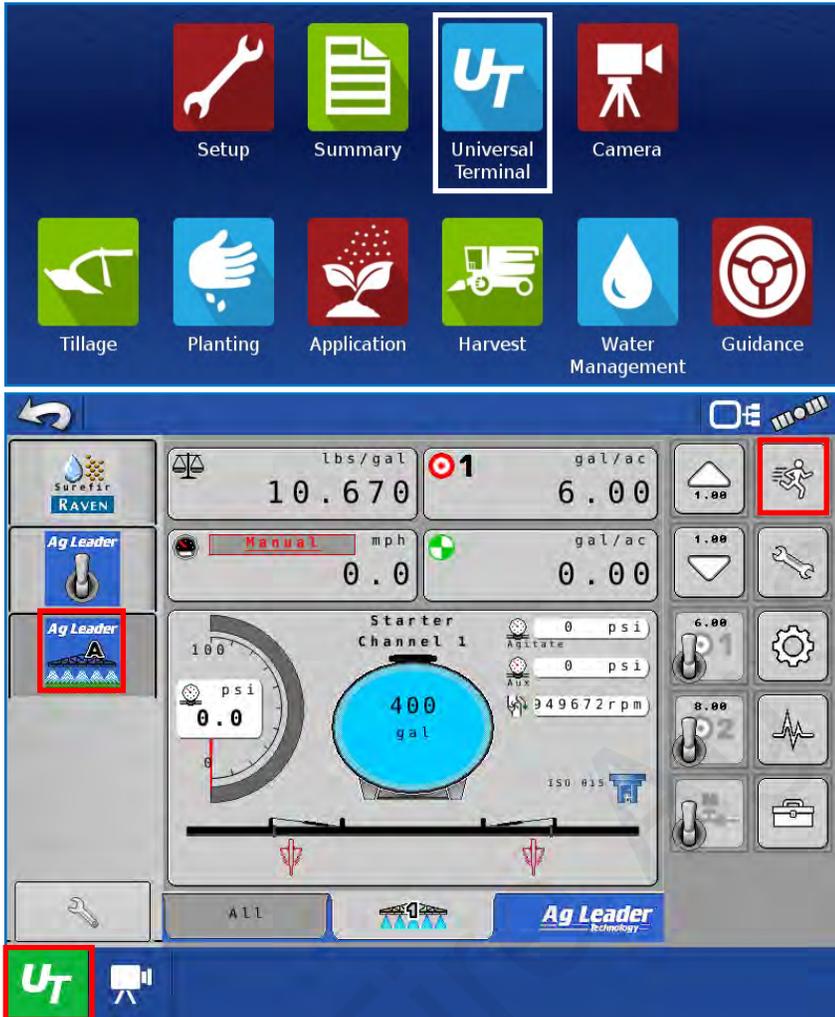

Universal Terminal

Ag Leader Liquid ISO


Run Screen

Settings

Calibration

Diagnostics


Toolbox

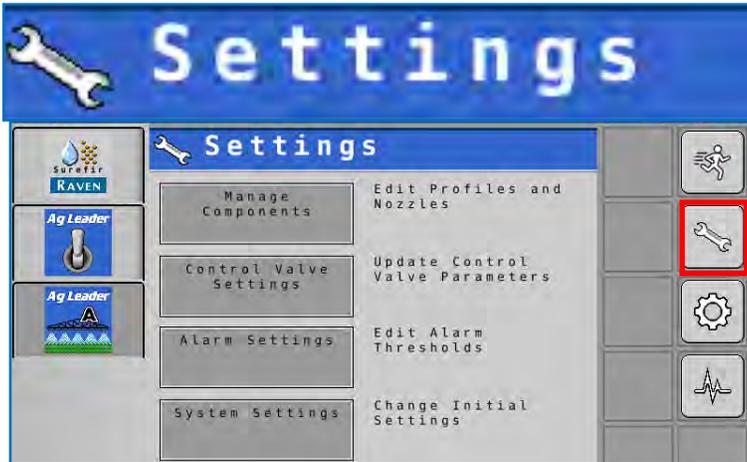

Manage Components



Control Valve Settings

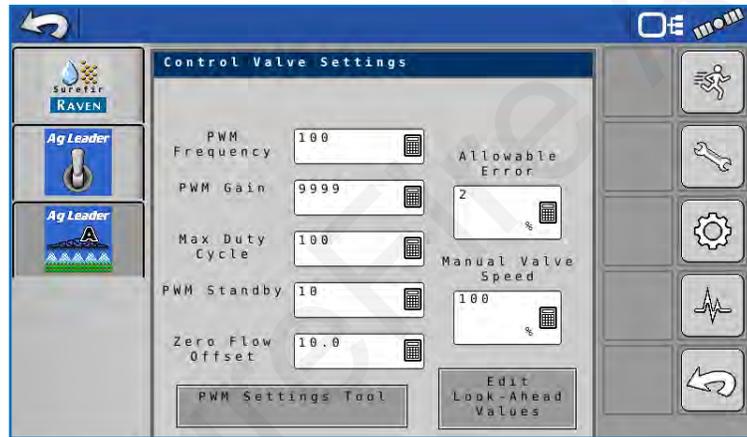


PWM Frequency	100
PWM Gain	800
<i>Increase PWM Gain if pump is slow to adjust. Decrease PWM Gain is pump will not lock onto rate going across the field.</i>	
Max Duty Cycle	100
PWM Standby	30
Zero Flow Offset	30
<i>Zero Flow Offset is Low PWM Limit. Lower this if pump will not go low enough. Raise this to get to rate quicker on startup.</i>	

PWM Gain Suggestions:


PR17	800	<i>Adjust as needed in the field.</i>
PR30	700	
PR40	600	
D250	500	

Look-Ahead Settings

Adjust as needed in the field.

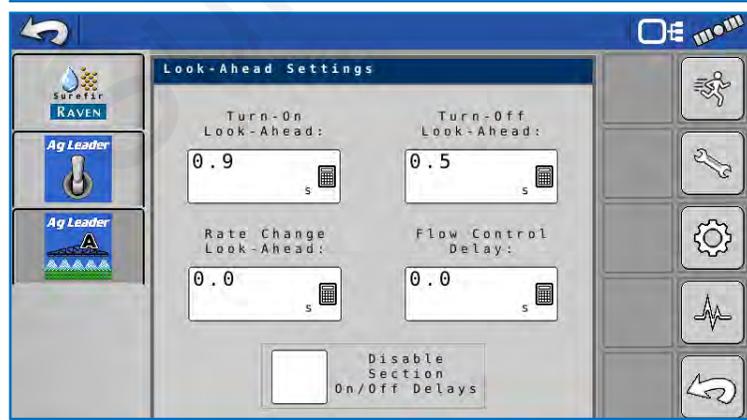

Pressure Sensor

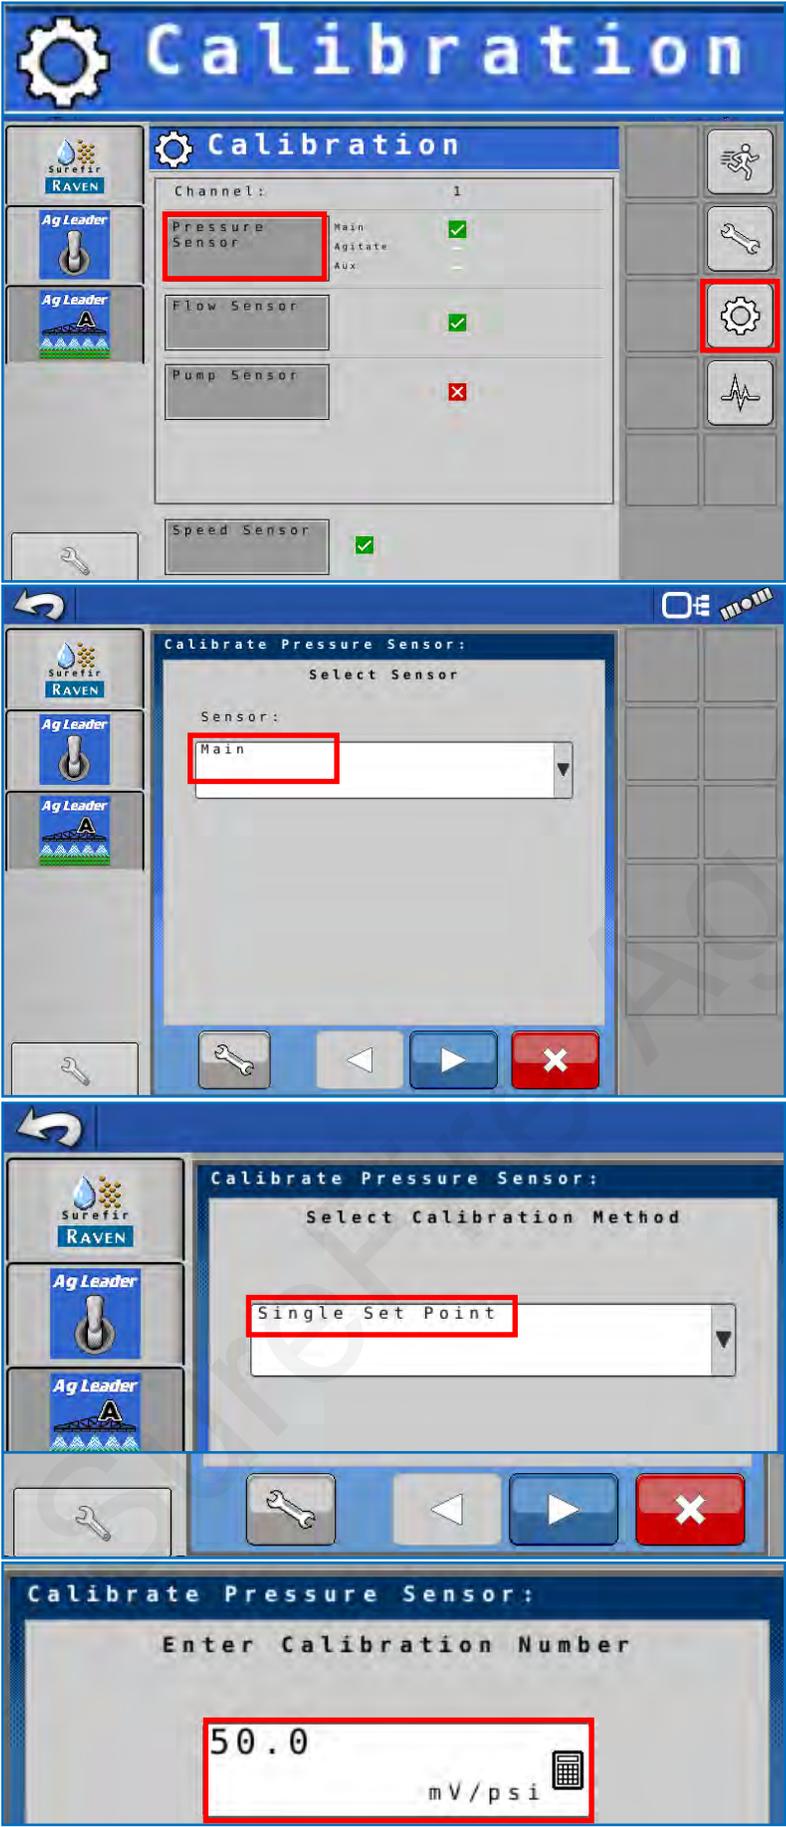

Calibration

F Setup & Operation

Flow Sensor

Calibrate Flow Sensor:

Please enter a flow calibration number below

Calibration Number:

2000 pulses/gal

Navigation: Back, Forward, Cancel

Pump Sensor

Calibrate Pump Sensor:

Enter Calibration Number

Calibration Number:

15.00 pulses/rev

Navigation: Back, Confirm, Cancel

Diagnostics

Channel 1 CAN BATT: A0BC80080C2029FB
 SN: 215RR1B744 CAN ADDR: 8x81






Pressure Sensor	Type	Count
Main	Voltage	44130
Agitate	None	100
AUX	None	100
Flow Sensor	Pulses	COUNT
Main	0	0
Aux	0	0
Valve	State	
Control	Duty Cycle	
Aux 1	Off	
Aux 2	Off	

Buttons: Decrease Flow, Increase Flow, Toggle Aux 1, Toggle Aux 2, Status, Control

Navigation: Home, Back, Forward, Cancel, Refresh

Run Screen Settings

Press on the box on the Run Screen to:
 Enter a Manual Speed
 Set up Rate 1 and Rate 2
 Turn on Rate Smoothing
 Set the amount of liquid in the Tank
 Set up the Pressure Dial on the Run Screen

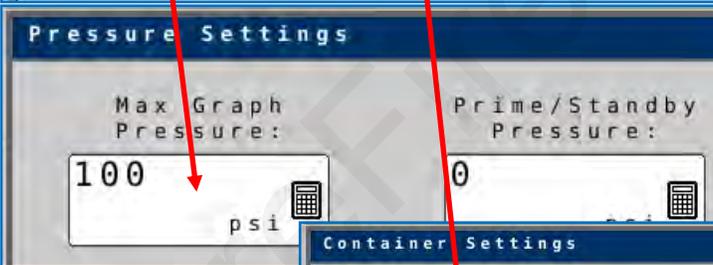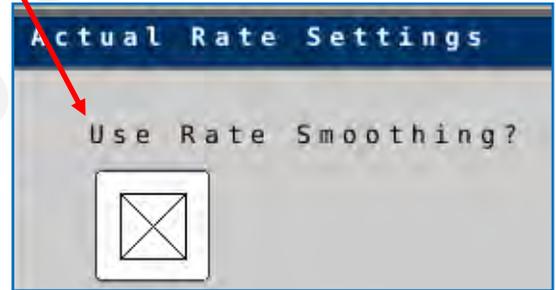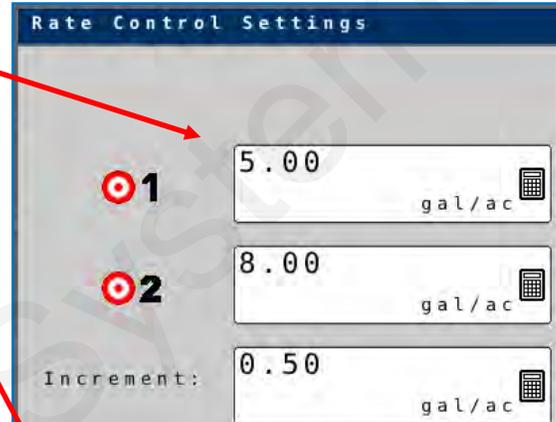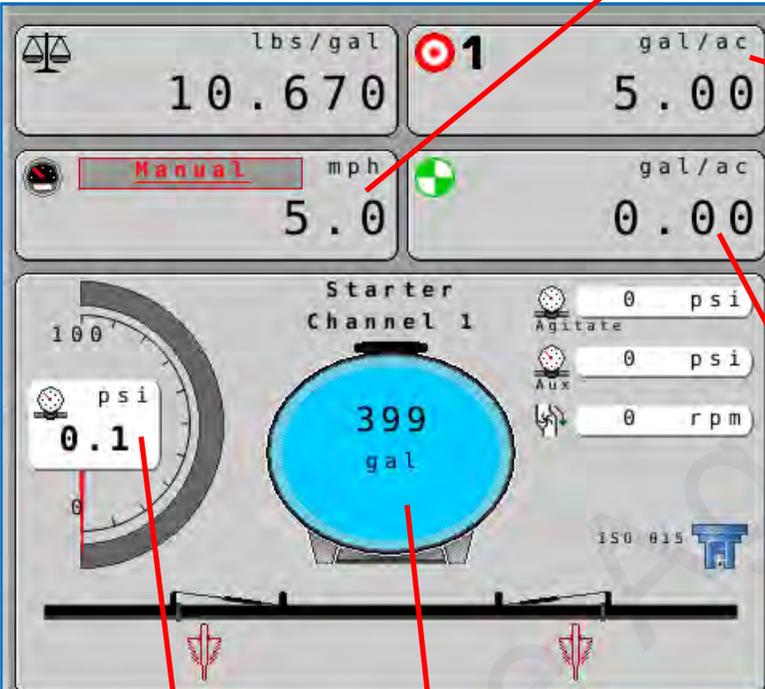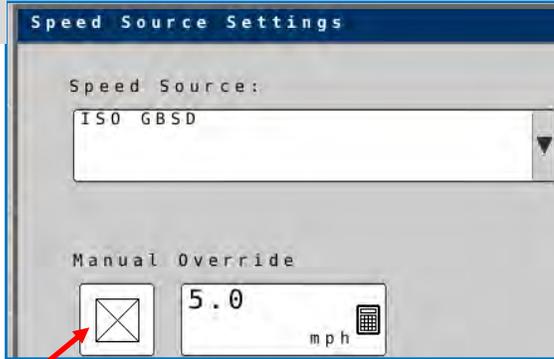

Ag Leader Run Screen for ISO Liquid

F

Setup & Operation



Select **Application** to go through the screens that will take you to the traditional “Ag Leader run screen” for the Liquid ISO Module.

The Run Screen is shown on the next page.

The liquid may be run from this screen or from the UT screen.

Operating Configuration

✓ SFA, Green 123(2)

Equipment	Name
Vehicle	SFA
Implement	Green 123
Device	ISO Liquid
	<ul style="list-style-type: none"> ✓ Generic ISOBUS
Container	Main Tank

Event Selection

Start New Event
 Event: 2019-01-29_12:31:26

Product Selection

ISO Liquid, Boom (2) Active 28% UAN

Options

Region

Controlling Product

28% UAN (gal)

Management

Growing Season

2019 Crop

Grower

SureFire Ag Systems

Farm

North 40

Field

South 20

Enable Management

Ag Leader Run Screen for ISO Liquid

F

Setup & Operation

The liquid may be run from this screen with the traditional Ag Leader look or from the UT screen.

5.80 ac | 5.0 mph

28% UAN gal/ac

8.00

8.00

Flow: 1.6 gal/min

Container: 110 gal

20 ft 0 in 100 %

16 PSI

ECU MANUAL SPEED

Agitation: 0 PSI

Auxiliary: 0 PSI

Pump Speed: 0 rpm

UT

Rate Control Settings

Rate Control Containers

28% UAN (gal)

Rate 1: 6.00

Rate 2: 8.00

Increment: 0.50

Minimum Flow: 0.00 gal/min

Rx

Troubleshooting

G

Trouble-
shooting

Is there a jumper in the Implement Lift Switch connector on the main harness connected to the Liquid Product Control Module (harness 213-01-3768Y2)? If there is not an implement lift switch plugged in, there must be a jumper between Pins A & C of this connector. If this is not done, the system will not run.

Also, to test the system Swath Control must be turned off.

Pump Will Not Turn

Turn hydraulics off, go to the SureFire PWM valve and use the manual override (red knob) on top of the electric coil to manually open the valve (Manual Override UP = valve fully open). (You may have to clean dirt out to move the manual override knob.) Start a Manual test to open the section valves. Turn hydraulics on **at a low flow only** as the valve is 100% open. If the pump does not turn, try hydraulic lever in opposite direction. Gradually increase the hydraulic flow. Does the pump turn? If it turns, your problem is electric / electronic. If the pump still does not turn, you have a hydraulic problem.

Electric / Electronic Problem

1. Close manual override (lock down)
2. Go to Run Screen, then Rate Control Detail screen. Turn AutoSwath OFF.
3. Verify hydraulics are on.
4. In manual mode, hold down “+” button for a few seconds. A single tap of this button produces a very small change in signal to the valve, so you must hold it.
5. Look at the PWM Duty Cycle on the Diagnostic screen. Hold (+) to get Duty Cycle between 40 and 50%.
6. Take a metal object and hold it next to the coil. If the coil is working, you will feel the magnetic pull.
7. If no magnetic force is felt, disconnect the PWM valve connector and check voltage. You will need 6-12 volts to get hydraulic valve to open.
8. If 6-12 volts is not present, check harnesses and review control valve type setup.
9. Go back to the 8-pin connector at the Liquid Product Control Module. Check voltage between pins 2 & 7, should be between 6-12 volts while in manual mode after holding “+” button.
10. If you cannot get voltage at pins 2 & 7, contact your Ag Leader dealer for further assistance.


Hydraulics Problem

1. Leave the manual override open on the SureFire valve.
2. Check the hose routings. The “P” port on the SureFire valve should hook to pressure. The “T” port is the return that should flow back to the tractor.
3. Try hoses in a different hydraulic remote. Inspect hydraulic connectors for damage or restrictions.

Hydraulic Manual Override

Down - Normal Operation

Up - Override, valve 100% open

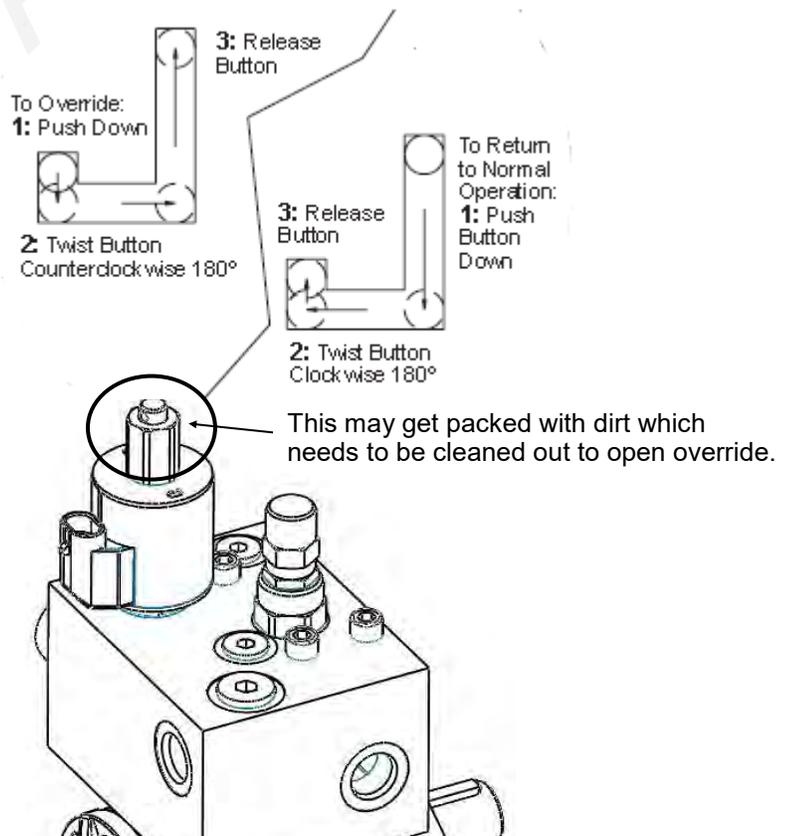

Section Valve(s) will not move

G

Troubleshooting

1. Be sure the 2-pin Power connector on the SureFire LPCM Adapter harness (3768) is plugged in and that it is getting 12 volts. Also, there must be an Implement Switch plugged in and working correctly or a jumper in the connector for that.
2. Go to the Run screen to run a Manual test to investigate this issue. (Enter a Manual speed)
3. Be sure AutoSwath is OFF.
4. Turn on Master switch and section switches.

Pin	Function
A	+ 12 V Constant
B	Ground
C	+ 12 V Signal

5. If none of the valves are working, or if half of the valves are working, it may be a Power (or Ground) issue. The odd-numbered sections have one power source, the even-numbered sections have another power source. (See harness diagrams). Verify voltage with a voltmeter.

6. If a valve does not open, switch the connector that is plugged into that valve with a connector that is plugged into a working valve. Also, plug in the connector to the non-working valve to a valve that is working.

7. Check the harness connection to the non-working valve. It is a 3-Pin Weather Pack connector. Check voltage pin A to Pin B. Must be 12 volts, if not, go back to the next harness connection and check the voltage there. (See harness diagrams for pins)
8. If voltage is present on pins A&B of 3 pin connection to valve, then check Pin C to Pin B. This should be 12 volts when the valve is commanded on or open; this should be zero volts when valve is off or closed.
9. If signal voltage is not present to open valve, use diagrams to check at the 14- (or 16-) pin connector, then the 37-pin for voltage on the proper pin for that section.
10. If harnesses and voltages are good, but valve still will not open, remove the actuator from the valve and see if the actuator will work when it is not connected to the valve. Use a wrench to turn the valve to be sure it is moving freely. Be sure actuator and valve are oriented correctly when you put them back together.
11. If constant voltage (Pins A&B) and switched voltage (Pins C&B) are present, inspect, repair or replace the valve.

<p>If valve indicator stays GREEN all the time or if valve indicator is not in full ON or full OFF position, replace actuator. Pull gray pin to remove actuator from valve.</p>		 <p>Replacement Valve Actuator 104-KZ1169—KZ Electric TX2 Series Actuator</p>	<p>This is a 3-way valve. If product will not flow when valve is ON, either move the outlet hose to the other port, or remove actuator and rotate valve ball 180°, and replace actuator.</p>
---	---	--	---

Pressure Sensor is not reading

1. Be sure Pressure Sensor Calibration has been completed on the display setup.
2. Be sure Pressure Sensor is plugged into Pressure Sensor 1 connector.
3. Make sure the pins where the harness screws on to the end of the sensor have not been bent.
4. There should be a green LED light on the end of the pressure sensor. This may be difficult to see in daylight. The sensor needs 12 v. Check between pins B&C on the Pressure 1 connector on the harness. If there is no voltage here, check the voltage between pins 1 (power) and 2 (ground) if you have a 12-pin pump connector.
5. **Testing Pressure Sensor Harnessing:** If the pressure sensor is not reading, you can use a AA or AAA battery to test the harnessing. Connect the (-) end of the battery to pin C and the (+) end to pin A of the pressure connector. The 1.5 v should show up as 30 psi on the screen.

Troubleshooting

G

Trouble-
shooting

Application Rate Fluctuates

First, you need to determine if the fluctuation is caused by the controller sending fluctuating signals to the valve.

1. **Inspect & clean pump inlet strainer.** Strange flow rate fluctuations are very often due to an obstruction to the pump inlet. Inspect plumbing from tank to pump.

OR

1. Go to the liquid Run screen.
2. Turn the system on in Manual mode and watch the flow in GPM.
3. Is the flow steady within a very small range? For example a fluctuation from 12.3 to 12.6 GPM would be considered normal. A fluctuation from 12-16 GPM is a problem. If only a small normal fluctuation is seen, skip steps 4-7 and proceed to "Application Rate Fluctuates in Field " below.
4. If there is a large fluctuation, observe the system flow. Is the discharge a steady stream; are the flow indicator balls floating steady?
5. If visually the flow is steady, but the display reports a fluctuation in GPM, inspect the flowmeter. See section B for flowmeter information.
6. If visually the flow is unsteady, the flowmeter is working correctly reporting a flow problem. Is the pump turning steady or surging? If the pump is surging reduce the PWM gain in controller settings.
7. Look for any type of obstruction in the pump inlet. Clean the strainer. If continually plugging the strainer investigate fertilizer quality and necessary strainer size.

Application Rate fluctuates in field, but flow in manual mode is stable.

This problem indicates the PWM gain needs changed. The system is surging because the Liquid Product Control Module is adjusting the PWM signal too aggressively, causing overshooting.

1. Go to Controller Settings.
2. Change the settings by reducing the PWM gain (start with incremental changes of 200).

Application Rate is slow to get to the Target Rate

1. You may need to increase the PWM Gain. Go to Controller Settings.
2. Change the settings by increasing the PWM gain (start with incremental changes of 200).
3. If the system is slow to get to Target Rate when starting, increase the Zero Flow Offset (see page 47). If Zero Flow Offset is too high, the pump will not slow down enough when some sections are closed.

No Flow shown on Ag Leader but liquid is being pumped


1. Unplug flowmeter. With voltmeter, check for 12 volts between pins 1 and 2 of flowmeter connector (on main pump harness PN 207-3462Y2). If 12 volts not present, inspect wiring harness and troubleshoot all connections per schematic (see Section D). There should be 4-5 v between Ground and Signal (pins 1 and 3).
2. If 12 volts is present, then conduct a tap test. Have a second person watch the flowmeter readings on the display (while other person taps repeatedly (use a short piece of wire or a paper clip) between pins 1 and 3 of flowmeter connector (on 207-3462Y2 harness). A flow value should show up indicating the wiring is not damaged.
3. If flow display responded to the tap test, your wiring to that point is good. If still not fixed, inspect adapter harness and test continuity per schematic (see Section D).
4. Replace flowmeter.

No Flow shown on display, but liquid is being pumped

Flowmeter Tap Test

G

Trouble-shooting

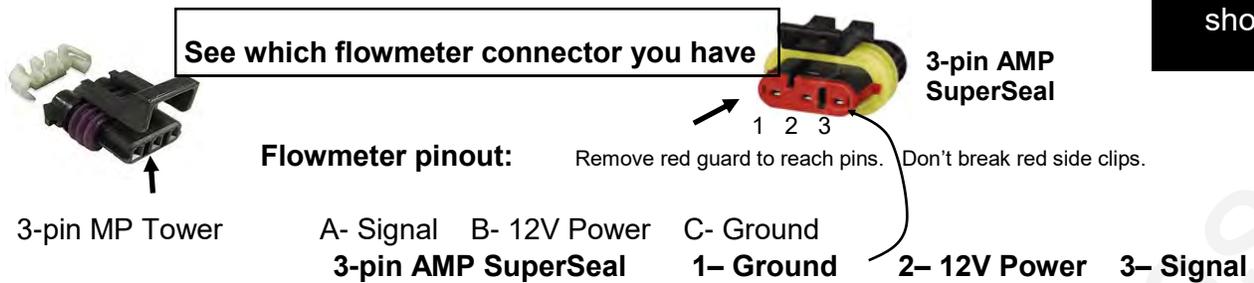

1. Unplug the flowmeter. With voltmeter, check for **12 volts between Power & Ground** of flowmeter connector. Should have **4-5 volts between signal and ground**. If voltage is not present, inspect wiring harness and check for voltage at harness connection(s) nearer the Rate Controller.
2. If 12 volts is present, then conduct a **tap test**. Have a second person watch Flow on the Liquid Diagnostics > screen (see next page) while other person taps repeatedly (use a short piece of wire or a paper clip) between signal and ground pins of flowmeter connector. The tapping should show a small number on the Flow Meter Signal Frequency and the Flow Meter Pulse count should increase indicating the wiring is OK.
3. If the display responded to the tap test, your wiring to that point is good. If tap test did not work, go back to the next harness connection and do a tap test there between signal and ground.
4. If the tap test registers flow on the display, replace flowmeter. (*Sometimes, cleaning the inside tube of the flowmeter with soapy water and a soft brush will remove a film covering the electrodes.*)
5. SureFire has a Speed/Flow Simulator (PN 219-01462) or a Tap Tester (212-03-3912Y1) that can be used to confirm if the wiring is good between the flowmeter and controller.

Field Verification of Flowmeter Calibration

Always verify the flow cal setting by comparing the amount actually applied in the field (from weigh tickets) with the amount shown on the display. Adjust the flow cal as needed to get less than 1% difference between the actual amount applied and the amount shown on the display.

In general:

Increase the Flow Cal number if not enough product is actually being applied. (If you want more, increase the number)

Decrease the Flow Cal number if too much product is being applied. (If you want less, decrease the number)

Formula to Adjust Flow Cal Number

(Volume shown on display) / (Volume actually applied) X flow cal number in display = new flow cal

Example: Display shows 727 gallons was applied. Weigh ticket shows 749 gallons was actually applied. Flow cal number in display was 3000. (*We applied too much, so we will decrease the flow cal.*)

$$727 / 749 \times 3000 = 2912 \text{ (new flow cal number to set in display)}$$

(Any adjustments to the flow cal number will only be as accurate as the measurements used in figuring it.)

Do not power wash the flowmeter.

Unplug the flowmeter before doing any welding on the implement.

Liquid Diagnostics Screen - Device Information



Diagnostics - Device Information

Devices	
CAN A	CAN B
DISPLAY	
232 Liquid Product Module	Firmware: 1.19.0
233 Auxiliary Input Module	Firmware ID: DC LIQUID
128 Liquid Product Module	Hardware ID: 4000405
	Product ID: DC LIQUID
	Serial Number: 2012751094
	Revision: 4.2.0.0
	Run Time: 1035976:05:07
	Boot Counter: 396
	CAN Name: A00C81010C21D906

Diagnostics

Liquid Diagnostics	
Controller Name	DirectLiquid
Serial Number	2012751094
Main Pressure (kPa)	0
Agitation Pressure (kPa)	N/A
Auxiliary Pressure (kPa)	0
PWM Duty Cycle (%)	0
Flow Meter Signal Frequency (Hz)	2
Flow Meter Pulse Count	34

During Flowmeter Tap Test a small number should register on the Flow Meter Signal Frequency and the Flow Meter Pulse Count should increase.

Recommended Care and Maintenance

H

Maintenance
& Parts

Air Bladder

PumpRight pumps have an air bladder to smooth the pump output flow. It is recommended to run this bladder at 20% of working pressure. So if your system operates at 50 psi, charge the air bladder to 10 psi. Due to the small size of the air bladder, **very little air is needed**. SureFire recommends charging a portable air tank to the correct pressure, then attach to the bladder valve to charge the air bladder to the same pressure as your air tank.

Winterization

SureFire recommends flushing your fertilizer pump and complete system with adequate amounts of water first. Next, use RV antifreeze to winterize your system by pumping an adequate amount through all components. At the beginning of the next season, begin with water to verify the system is in working order with no leaks.

Change Pump Oil Annually

PumpRight pumps use an internal oil lubricated crankshaft and connecting rod design. The oil is held in an external reservoir with level indicators. Hypro oil is recommended for the pump. This is a non-detergent SAE30 weight oil. If not available, hydraulic jack oils are a similar non-detergent formulation. Annual oil changes are recommended.

To fill or drain the pump completely, the pump shaft must be turned slowly by hand. The hydraulic motor will have to be removed to do this.

On some pump models, the pump will have to be removed from the mounting bracket and lifted slightly to allow access to the oil plug.

When refilling the pump with oil, the shaft will again have to be rotated to fill the pump to its required oil volume.

CRANKCASE OIL CAPACITIES				
Model	Capacity		Model	Capacity
PR17	13 oz		PR40	56 oz
PR30	28 oz		D250	98 oz

Diaphragm & Valve Replacement

PumpRight pumps are designed to allow very simple replacement of the two main pumping components; the diaphragms and the inlet & outlet valves. It is a good practice to replace these every 3 or 4 years, depending on usage. It is a small job that helps ensure reliable operation during the busy season.

Pre-season Service for PumpRight (Hydraulic Pump) Systems



(A little time spent here may prevent some downtime when you want to be rolling.)

1. Visually check entire system (hoses, fittings, harnesses, etc.) for any signs of wear or trouble. If connectors, harnesses, or parts have been soaked in fertilizer, check these very carefully.
2. Particularly check all 37- and 16-pin connectors on systems that have been in use. Be sure pins are clean, not corroded, and are making good contact. Corroded pins need to be replaced. Cleaning will not restore good electrical contact. If the pin has corroded, a lot of time the corrosion extends to the first part of the wire. If there is much corrosion, consider replacing the cable. Newer style cables have Deutsch connectors that seal better than the round AMP connectors.
3. Check all power cables / connectors beginning at the battery. Verify voltage at LPCM and to SureFire Adapter harness (3768).
4. Check the flow indicators for cracks and clarity. They can become weathered and difficult to see through.
5. Change the pump oil annually. Use SAE 30 Non-Detergent Oil. SureFire has Hypro Oil specifically for these pumps.
6. On the display, recheck all setup screens (see Section F of the manual) to verify correct setup.
7. Raise and lower the implement to verify that the height switch (if being used) arrow is indicating correctly on the Run Screen by the Master Switch indicator.
8. **Clean out the dirt that may be packed into the manual override knob on the hydraulic valve block.** May need to use a spray like WD-40 or compressed air to get the dirt out. You should be able to push down and rotate the knob a half turn counterclockwise, and have it pop up (to open the manual override) and then be able to push it down and turn it a half turn clockwise to lock it in operating position. If the stem is packed full of dirt, forcing the knob to turn with a pliers can break the stem. When the knob has been pushed down and rotated counterclockwise, there should be about ¼" movement in the stem with heavy spring tension.
9. If necessary, run pump in manual override mode to check hydraulic setup. This involves turning the hydraulic flow to 1, popping up the manual override knob, starting a Manual Test to open the section valves, and then turning on the hydraulic flow. The pump will be controlled by adjusting the hydraulic flow.
10. Fill system with water and run in Manual mode to verify components and system are in working order. (May need to open air bleed valve to prime pump the first time. Be sure the air bleed valve and tube are not plugged. Be sure recirculation knob is closed.) In these two tests, you should be able to speed the pump up and slow it down with the (+) and (-) button. SureFire gives recommendations for setting the PWM Low Limit (Zero Flow Offset) that generally work for nearly all systems. It is possible to fine-tune those settings. The Zero Flow Offset should be a setting at which the pump will run enough to register steady flow on the flowmeter. If the pump will be operating at a higher level (even when running with only one section on) the Zero Flow Offset can be increased. This is particularly helpful to get quicker startup at the beginning of a pass. Understand that the pump will not slow down below the Zero Flow Offset so if it is too high, there could be over-application at those times that lower output is needed (such as with only one section on). Some operators may be willing to live with a little over-application on the small areas that will be covered with only one section on to get a faster startup on every pass by setting the Zero Flow Offset higher.

- a. This is a good time to check out the Device Button > Diagnostics screen. This is a screen that every tech and every user should regularly check.
 - b. On the Liquid Diagnostics screen, check out the flowmeter operation at Flowmeter (Hz) to see the pulses (per second) that are being generated by the flowmeter. With the pump running at a steady speed this should be stable (± 2 Hz variation).
 - c. Check out the PWM Duty Cycle. On an Auto Test or while operating in the field at a steady speed, this should also be steady (± 2). If this is bouncing around more, lower the PWM Gain. 800 is our starting point on the PWM Gain for a hydraulic pump.
11. Tighten all clamps. Loose clamps may be evident by leaks on the output side of the system. Loose clamps from the tank to the pump are not always apparent but can be sources of air getting into the system which can create issues.
 12. Push in all QuickConnect (QC) fittings to be sure the tubes are tightly seated. Unseated QC fittings may not leak but they can cause check valves to leak because they allow air to be drawn into the system when application stops.
 13. Remove the blue or black cap from the top of each check valve. Check the diaphragm to be sure it is intact and not gummed up with residue. Look under the diaphragm for debris. Compress the spring in the cap to be sure it moves freely. Carefully replace diaphragm and tighten cap. These check valve fairprene diaphragms (133-03-40155-07) and the O-ring (133-03-40160) in the check valve should be replaced every year or two for best performance.
 14. Remove and clean the strainer. Be sure strainer is tightened securely so it will not suck air. Check the housing for cracks.
 15. Run system with a simulated speed and rate to be used in the field.
 16. Be sure all rows are flowing and that all metering tubes/orifices are open. (Note: It will take a higher flow rate with water to create enough pressure to open all the check valves so that each row will flow.)
 17. While the test is running, go to Device Button > Diagnostics > Liquid Diagnostics screen and look at Pressure, Flow and PWM Duty Cycle).
 18. Verify that all sections open and close (and in the correct order) with the switches in a Manual test.
 19. LiquiShift valves will not open until there is a PWM signal. This can be done with a Manual test or Auto Test.
 20. Check the placement devices for wear and alignment. Check tension on Keeton seed firmers. Use Flow Simulator (219-01462) or Tap Tester tool (212-03-3912Y1) to verify harnessing. Use Pressure Simulator (212-03-3910Y1) to verify harnessing and setup and to change LiquiShift valves.

Techs and end users should be familiar with the SureFire Ag website where manuals and documentation are available for download.

<http://www.surefireag.com/support>



⚠ DANGER

Hydraulic oil under extremely high pressure. Do not use hand or any other skin to check for or to stop hydraulic leaks. Be sure pressure is relieved before loosening hydraulic fittings. Replace worn hoses immediately. Seek medical care immediately if hydraulic oil is shot into the eye or the skin.



⚠ CAUTION

These pumps can deliver liquid at high pressure (290 PSI). Be sure the 100 PSI Pressure Relief Valve (PRV) is installed and functioning so system pressure will be kept under 100 PSI. Check hoses, hose clamps, and liquid fittings regularly and repair or replace loose connections.

PumpRight Valves & Diaphragms for D pumps

All PumpRight models use the same diaphragm and valve parts.



Diaphragm Pump Service Kit

Item Number 291-02-100500



1 Kit contains 1 diaphragm and 2 valves to service a single pumping diaphragm. Order multiple kits to service all the diaphragms in your pump per chart at right.

Qty in Kit	Part Number (all begin 291-02-9910-xxxxxx)	Description
1	550085	Diaphragm (Desmopan)
2	320030	O-Ring
2	759051	Valve Assembly

	Number of Diaphragms
D70	2
D115	3
D160	4
D250	6

Diaphragm & Valve Service Steps:

1. Remove inlet and outlet plumbing connections by unscrewing ring nut on inlet and outlet fitting.
2. Use extreme caution when removing and replacing drain plug, so that threads are not stripped and o-ring is not damaged. Remove drain plug from bottom of pump to drain oil from pump. Rotate pump shaft to remove all oil. Replace drain plug making sure o-ring is in place. Tighten plug to 171.4 In.Lbs.
3. Remove pump manifold(s) using a 17mm or 13 mm wrench.
 - D70 1 manifold 2 x 17 mm nuts (on top)
 - D115 1 manifold 3 x 17 mm nuts (on side)
 - D160 2 manifolds Each manifold has 4 sets of 2 x 13 mm nuts
 - D 250 2 manifolds Each manifold has 6 sets of 2 x 13 mm nuts
4. Remove and replace complete valve assembly.
5. Remove the pump head.
6. Remove the diaphragm bolt, support washer and diaphragm. Turn the pump shaft to up stroke to replace diaphragm.
7. Install new diaphragm (LIQUID side up), then replace washer and bolt.
8. Turn pump to downstroke to seat new diaphragm into the sleeve groove.
9. Replace pump head and manifold(s).
10. Refill crankcase with SAE30 non detergent oil (PumpRight Oil or hydraulic jack oil). Turn the pump shaft and top off sight glass.

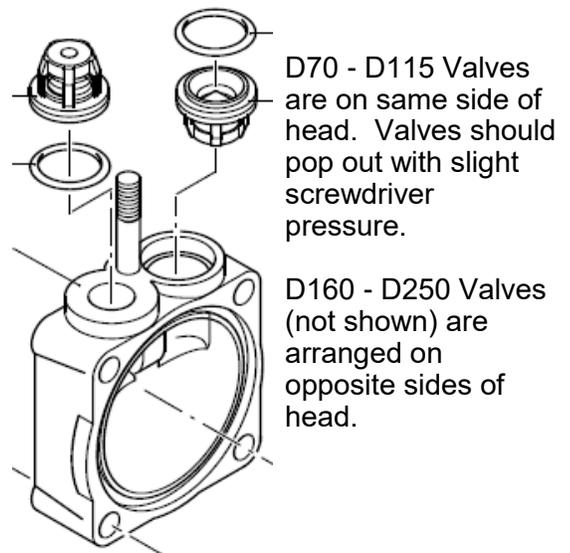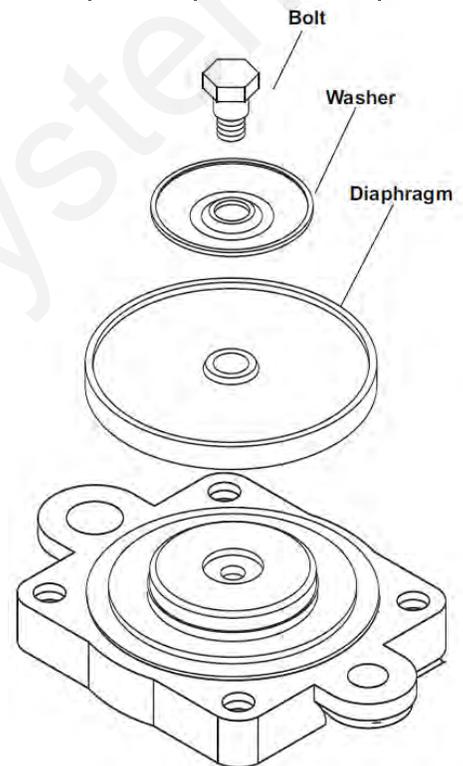

Other Service Parts

D70, D115, D160, D250

Part Number (all begin 291-02-9910-xxxxxx)	Description
550080	Diaphragm (Buna, Optional)
550190	Accumulator Diaphragm

PumpRight Valves & Diaphragms



Diaphragm Pump Service Kits

1 Kit contains 1 diaphragm and 2 valves to service a single pumping diaphragm.

Order multiple kits to service all the diaphragms in your specific pump per chart below...

Visit www.surefireag.com or www.support.surefireag.com for [PumpRight Diaphragm Pump Repair and Maintenance Video](#)

QTY in Kit	Part Number	Description
PR17 Pump Service Kit - 3 Diaphragm		
KIT #: 291-13-100100 (pump requires 3 kits)		
1	291-13-1040083	BlueFlex Diaphragm (PR17)
2	291-13-2429051	Valve
2	291-13-3460380	Gasket/O-ring

PR30 Pump Service Kit - 3 Diaphragm		
KIT #: 291-13-100150 (pump requires 3 kits)		
1	291-13-550081	BlueFlex Diaphragm
2	291-13-2429051	Valve
2	291-13-3460380	Gasket/O-ring

PR40 Pump Service Kit - 4 Diaphragm		
KIT #: 291-13-100150 (pump requires 4 kits)		
1	291-13-550081	BlueFlex Diaphragm
2	291-13-2429051	Valve
2	291-13-3460380	Gasket/O-ring

D250 Pump Service Kit - 6 Diaphragm		
KIT #: 291-13-100200 (pump requires 6 kits)		
1	291-13-550081	BlueFlex Diaphragm
2	291-02-9910-759051	Valve
2	291-02-680070	Gasket/O-ring

For other service parts, see individual Pump Part Breakout Diagrams in [396-4034Y1](#), the PumpRight manual that came with your pump.

Also see the manual and individual pump parts breakouts online here. (store.surefireag.com)

PumpRight Valves & Diaphragms

Diaphragm Pump Service Kit Replacement Instructions for PR Pumps

Visit www.surefireag.com for PumpRight Diaphragm Pump Repair and Maintenance Video




	Number of Diaphragms
PR17	3
PR30	3
PR40	4
D250	6

Diaphragm & Valve Service Steps:


1. Remove inlet and outlet plumbing connections by unscrewing ring nut on inlet and outlet fitting.
2. Use extreme caution when removing and replacing drain plug, so that threads are not stripped and o-ring is not damaged. Remove drain plug from bottom of pump to drain oil from pump. Rotate pump shaft to remove all oil. Replace drain plug making sure o-ring is in place. Tighten plug to 180 In.Lbs.
3. Remove pump manifold(s) using a 13 mm wrench.
4. Remove and replace complete valve assembly.
5. Remove the pump head.
6. Remove the diaphragm bolt, support washer and diaphragm. Turn the pump shaft to up stroke to replace diaphragm.
7. Install new diaphragm (LIQUID side up), then replace washer and bolt.
8. Turn pump to downstroke to seat new diaphragm into the sleeve groove.
9. Replace pump head and manifold(s).
10. Refill crankcase with SAE30 non detergent oil (PumpRight Oil or hydraulic jack oil). Turn the pump shaft and top off sight glass.

NOTE: See individual Part Breakout Charts for Bolt/Nut Torque Specs.


**Typical Manifold—2 per pump—
inlet and outlet**

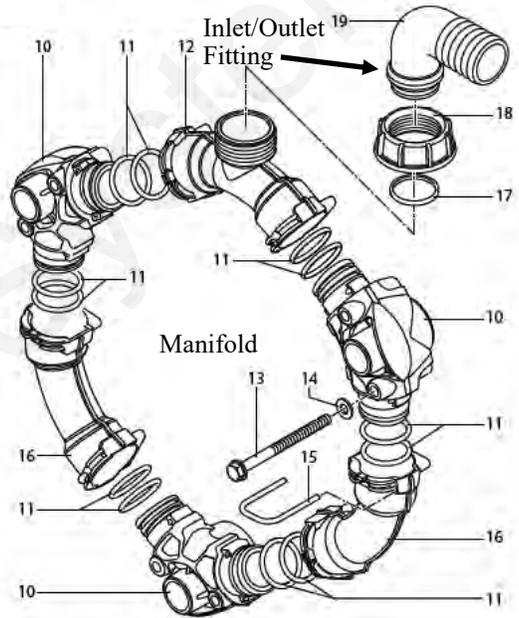

Typical Valve Assembly

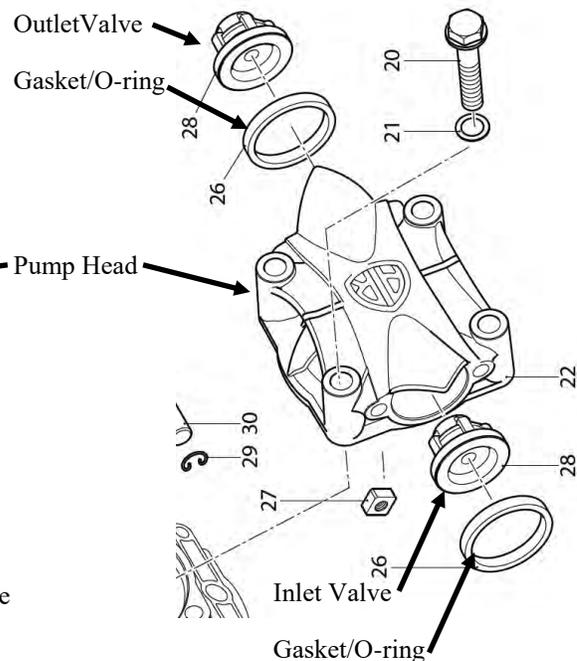

Typical Diaphragm Assembly

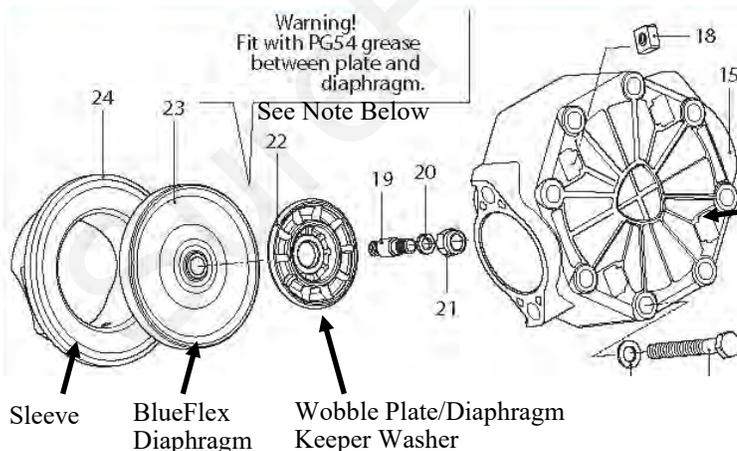

NOTE: A multipurpose grease is fine to use for applying in between the Diaphragm and Wobble Plate/Washer

For other pump service parts, see individual Pump Part Breakout Diagrams in [396-4034Y1](#), the PumpRight manual that came with your pump.


[Also see the manual and individual pump parts breakouts online here. \(store.surefireag.com\)](#)

[Go to support.surefireag.com for pump information and parts breakdowns.](#)

PWM Valve and Motor Parts



- 164-FTA0994 4.0 CID motor (this is the standard motor beginning in 2016)
- 164-FTA1609 Same as 164-FTA0994, but with RPM Speed Sensor--
Ag Leader does not support a Pump RPM sensor.

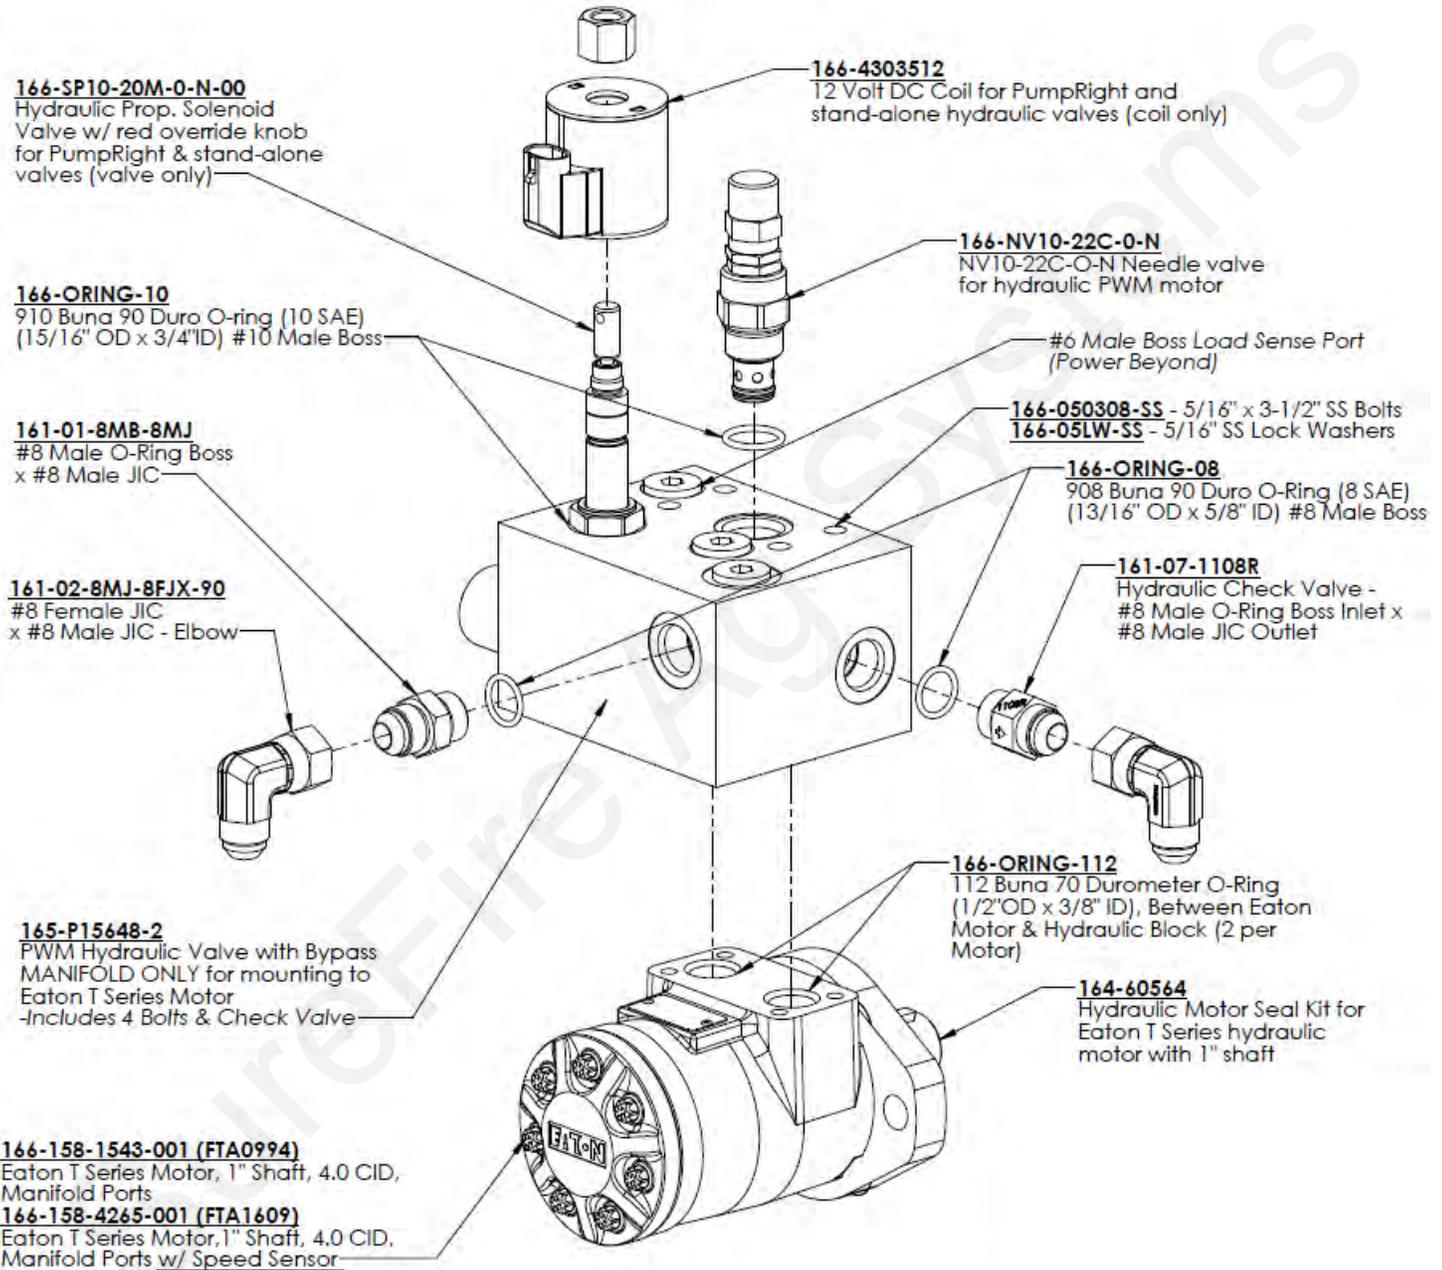

©2012-2021 SureFire Ag Systems—All Rights Reserved

