

396-2860Y1





Tower Fertilizer System for Case IH AFS® AccuControl With Pro 700 Display

AFS® AccuControl

&

SurePoint Tower for PWM Control

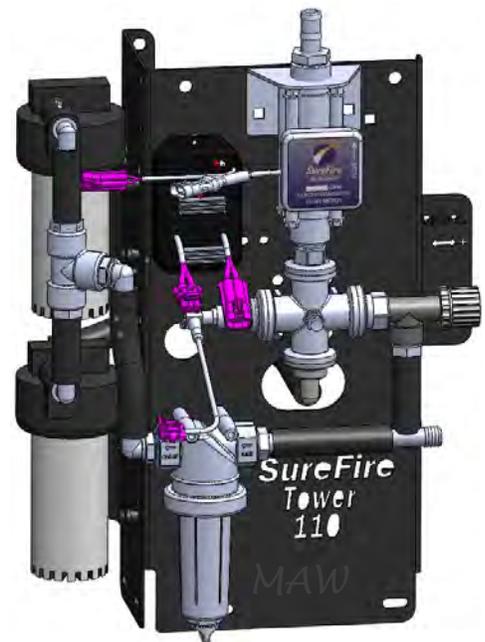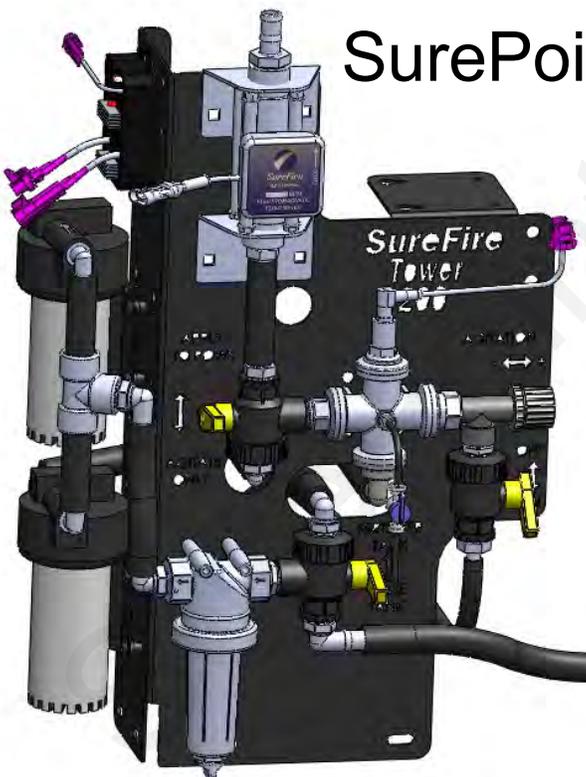

Maximum Application Rates with Two 5.3 GPM Electric Pumps

Maximum Application Rates in GPA on 30" Rows at 6 MPH (no agitation)				
Rows	8	12	16	24
Max GPA	20	12	9	5



SurePoint Ag Systems



Table Of Contents

Introduction

- Basic Steps to Install your Fertilizer System 1
- Complete Fertilizer System Example Drawings 2-3

A

Introduction

Components - Liquid

- Flowmeters, Section Valves..... 4-5
- Pressure Sensor, Pump Priming and Air Bleed Valve 6
- Flow Indicators and Manifolds, Check Valves, Orifice Charts 7-14
- Dual Check Valve Systems, Row Distribution 15-18
- **Metering Tube Charts** 19

B

Components
Liquid

Components - Wiring & Electrical

- Connecting to AccuControl Rate & Section Control Module 20-21
- Schematic, PWM EPD, Implement Lift Switch 22-24
- Harness Drawings 25-28

D

Components
Wiring & Elec.

Installation Overview

- Floating Ball Flow Indicators, Tower Mounting Options..... 30-32
- Tower 110 Plumbing Overview and Valve Operation, Recirculation..... 33
- Tower 200 Plumbing Overview and Valve Operation, Agitation 34-35

E

Installation
Overview

Setup & Operation

- Pro 700 Display Setup 37
- Pro 700 Menu Structure..... 38-39
- AccuControl Configuration 40-41
- Layout, Valve Calibration, Startup Tips 42
- Product Setup, Layer Assignment, Work Condition 43
- Initial Setup Screenshots 44-45
- Calibrate Flowmeter (Liquid Calibration or Catch Test)..... 46

F

Setup &
Operation

Troubleshooting

- EPD Lights, Pump Will Not Run, Section Valve Won't Move 47-48
- Application Rate Fluctuates, Slow Getting to Target Rate 49
- Flowmeter Tap Test, Flowmeter Calibration 50

G

Trouble-
Shooting

Maintenance & Parts

- Winterization..... 51
- **Pre-season Service**..... 51
- **Addendum for Setup and Troubleshooting** 52


H

Maintenance
& Parts





Safety

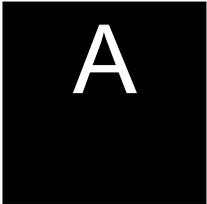

TAKE NOTE! THIS SAFETY ALERT SYMBOL FOUND THROUGHOUT THIS MANUAL IS USED TO CALL YOUR ATTENTION TO INSTRUCTIONS INVOLVING YOUR PERSONAL SAFETY AND THE SAFETY OF OTHERS. FAILURE TO FOLLOW THESE INSTRUCTIONS CAN RESULT IN INJURY OR DEATH.



**THIS SYMBOL MEANS
ATTENTION!**

BECOME ALERT!

YOUR SAFETY IS INVOLVED!

Note the use of the signal words DANGER, WARNING and CAUTION with the safety messages. The appropriate signal word for each has been selected using the following guidelines:



DANGER: Indicates an imminently hazardous situation that, if not avoided, will result in death or serious injury. This signal word is to be limited to the most extreme situations typically for machine components which, for functional purposes, cannot be guarded.



WARNING: Indicates a potentially hazardous situation that, if not avoided, could result in death or serious injury, and includes hazards that are exposed when guards are removed. It may also be used to alert against unsafe practices.



CAUTION: Indicates a potentially hazardous situation that, if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices.

NOTICE is used to address safety practices not related to personal safety.





Hydraulic Fluid and Equipment Safety

If your system uses hydraulic equipment with hydraulic fluid under extremely high pressure, please note:

Hydraulic fluid escaping under pressure can have sufficient force to penetrate the skin causing serious injury. Keep all hoses and connections in good serviceable condition. Failure to heed may result in serious personal injury or death. Avoid the hazard by relieving the pressure before disconnecting lines or performing work on the system.

Make sure hydraulic fluid connections are tight and all hydraulic hoses and lines are in good condition before applying pressure to the system. Use a piece of paper or cardboard, NOT BODY PARTS, to check for suspected leaks. Wear protective gloves and safety glasses or goggles when working with hydraulic systems. DO NOT DELAY!

Check hydraulic hoses and fittings frequently. Loose, broken, and missing hardware can cause equipment to not perform properly and can result in serious injury or death. Hydraulic systems can be hot and cause burns. Before working on any system, wait until the fluid has cooled.

If an accident occurs, see a doctor familiar with this type of injury immediately. Any fluid injected into the skin or eyes must be treated within a few hours or gangrene may result.



A Word to the Operator

It is YOUR responsibility to read and understand the safety messages in this manual. YOU are the key to safety.
SAFETY IS YOUR RESPONSIBILITY.

This system may apply many different kinds of agricultural liquid products. Read and follow all label information and instructions related to the handling, storage, and application of the product you are using.

All electrical harnessing should be checked regularly and should be routed and secured so it will not be pinched, cut, or stretched.

Online Resources Available

[SurePoint support site](https://support.surefireag.com/products/210) <https://support.surefireag.com/products/210>

- Manuals
- QuickStart Guides
- Troubleshooting Documents
- Support Bulletins

SurePoint Ag Systems



General Description

A

Introduction

You have purchased a SurePoint fertilizer system for your equipment. This system will be controlled by your Pro 700 display and AccuControl control module. The rate controller will adjust the speed of the SurePoint Tower electric pumps based on feedback from the flowmeter and vehicle speed. The system is capable of section control to minimize overlap areas with optional section valves.

Basic Installation Steps

1. Install Pro 700 display, harnesses, and AccuControl™ Trimble Rate & Section Control Module.
2. Check software versions installed on Pro 700. Have dealer update to latest Pro 700 display and AccuControl software, as well as latest software for Trimble Field-IQ Rate & Section Control Module. Rate & Section Control software versions 3.19 or 3.20 have been good versions. Versions prior to that do not work well.
3. Open the packages and familiarize yourself with the components. Refer to manual sections B, C & D for component information.
4. Mount the Tower or Accelerator Tank on your equipment. Electric pumps should be located close to the tanks. They will push the product a long distance, but are not as good at pulling product a long distance.
5. Plumb the tank to the Tower inlet. See section E for details.
6. Install the plumbing kit including section valves, flow indicator columns / manifolds, check valves, plumbing to each row unit delivery point. See section B for information on these components.
7. Attach the flowmeter outlet to section valve or manifold inlet. Attach section valve outlets to flow indicator inlets.
8. Attach harnesses as shown in Section D.
9. Set up Controller for SurePoint fertilizer system as shown in Section F.
10. Fill system with water, conduct initial operation and tests per Section F.
11. Winterize system with RV Antifreeze if freezing temperatures are expected.
12. Do pre-season service each year as described on page 51.

Consult your Pro 700 Display User Guide and AccuControl Manual for more information on the setup and operation of your Pro 700 AccuControl system.




System Overview - Example 1

A

Introduction

The following gives an example of a complete SurePoint Fertilizer system with these components:

- Pro 700 Display
- AccuControl Field-IQ Rate & Section Control Module
- Tower 110
- Section Valves
- Flow Indicators
- Check Valves with Colored Disc Orifices

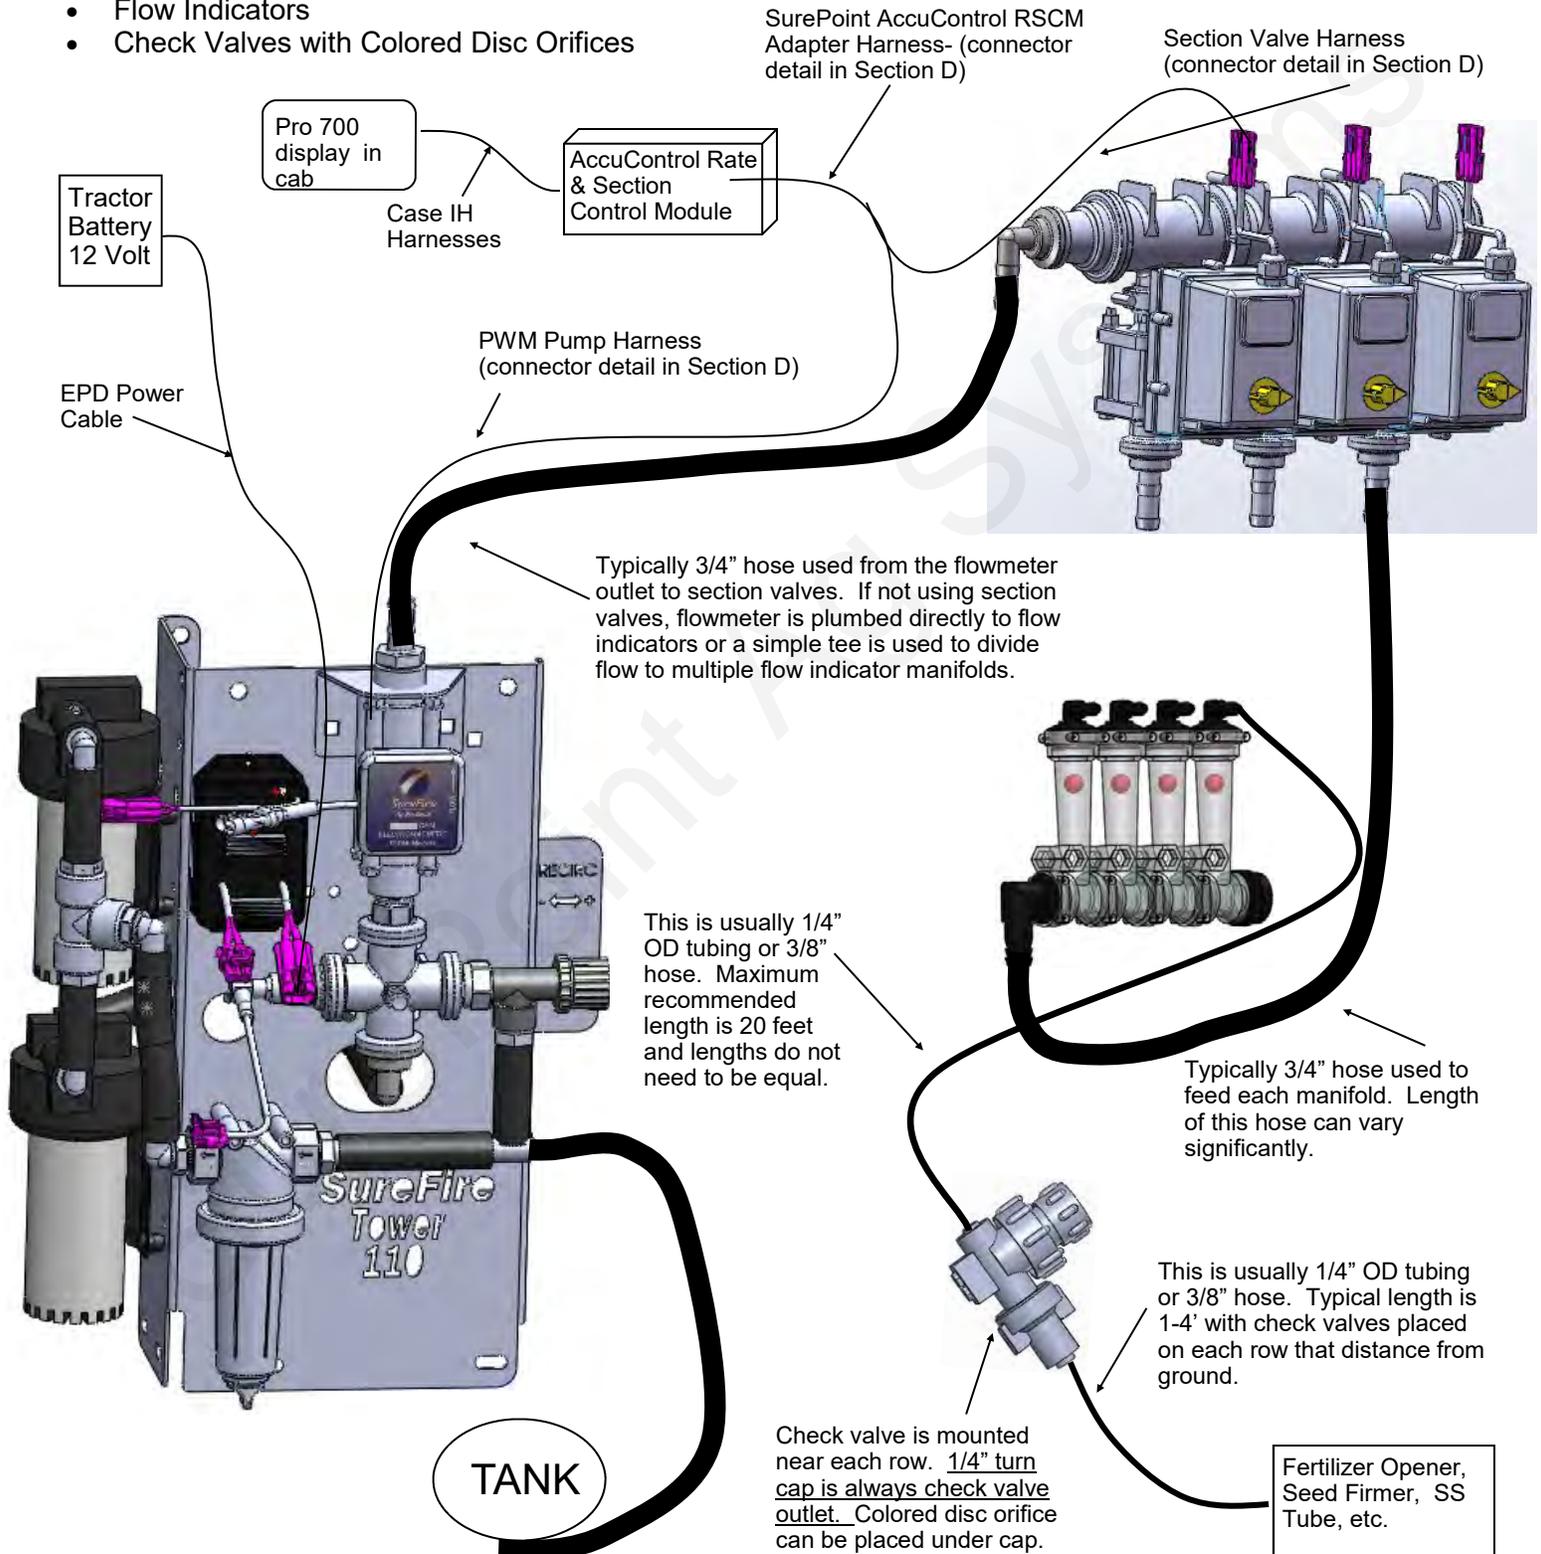


System Overview - Example 2

A

Introduction

The following gives an example of a complete SurePoint Fertilizer system with these components:

- Pro 700 Display
- AccuControl Field-IQ Rate & Section Control Module
- Accelerator with Tower 200
- Dual Check Valve Distribution System
- Dual Metering Tube

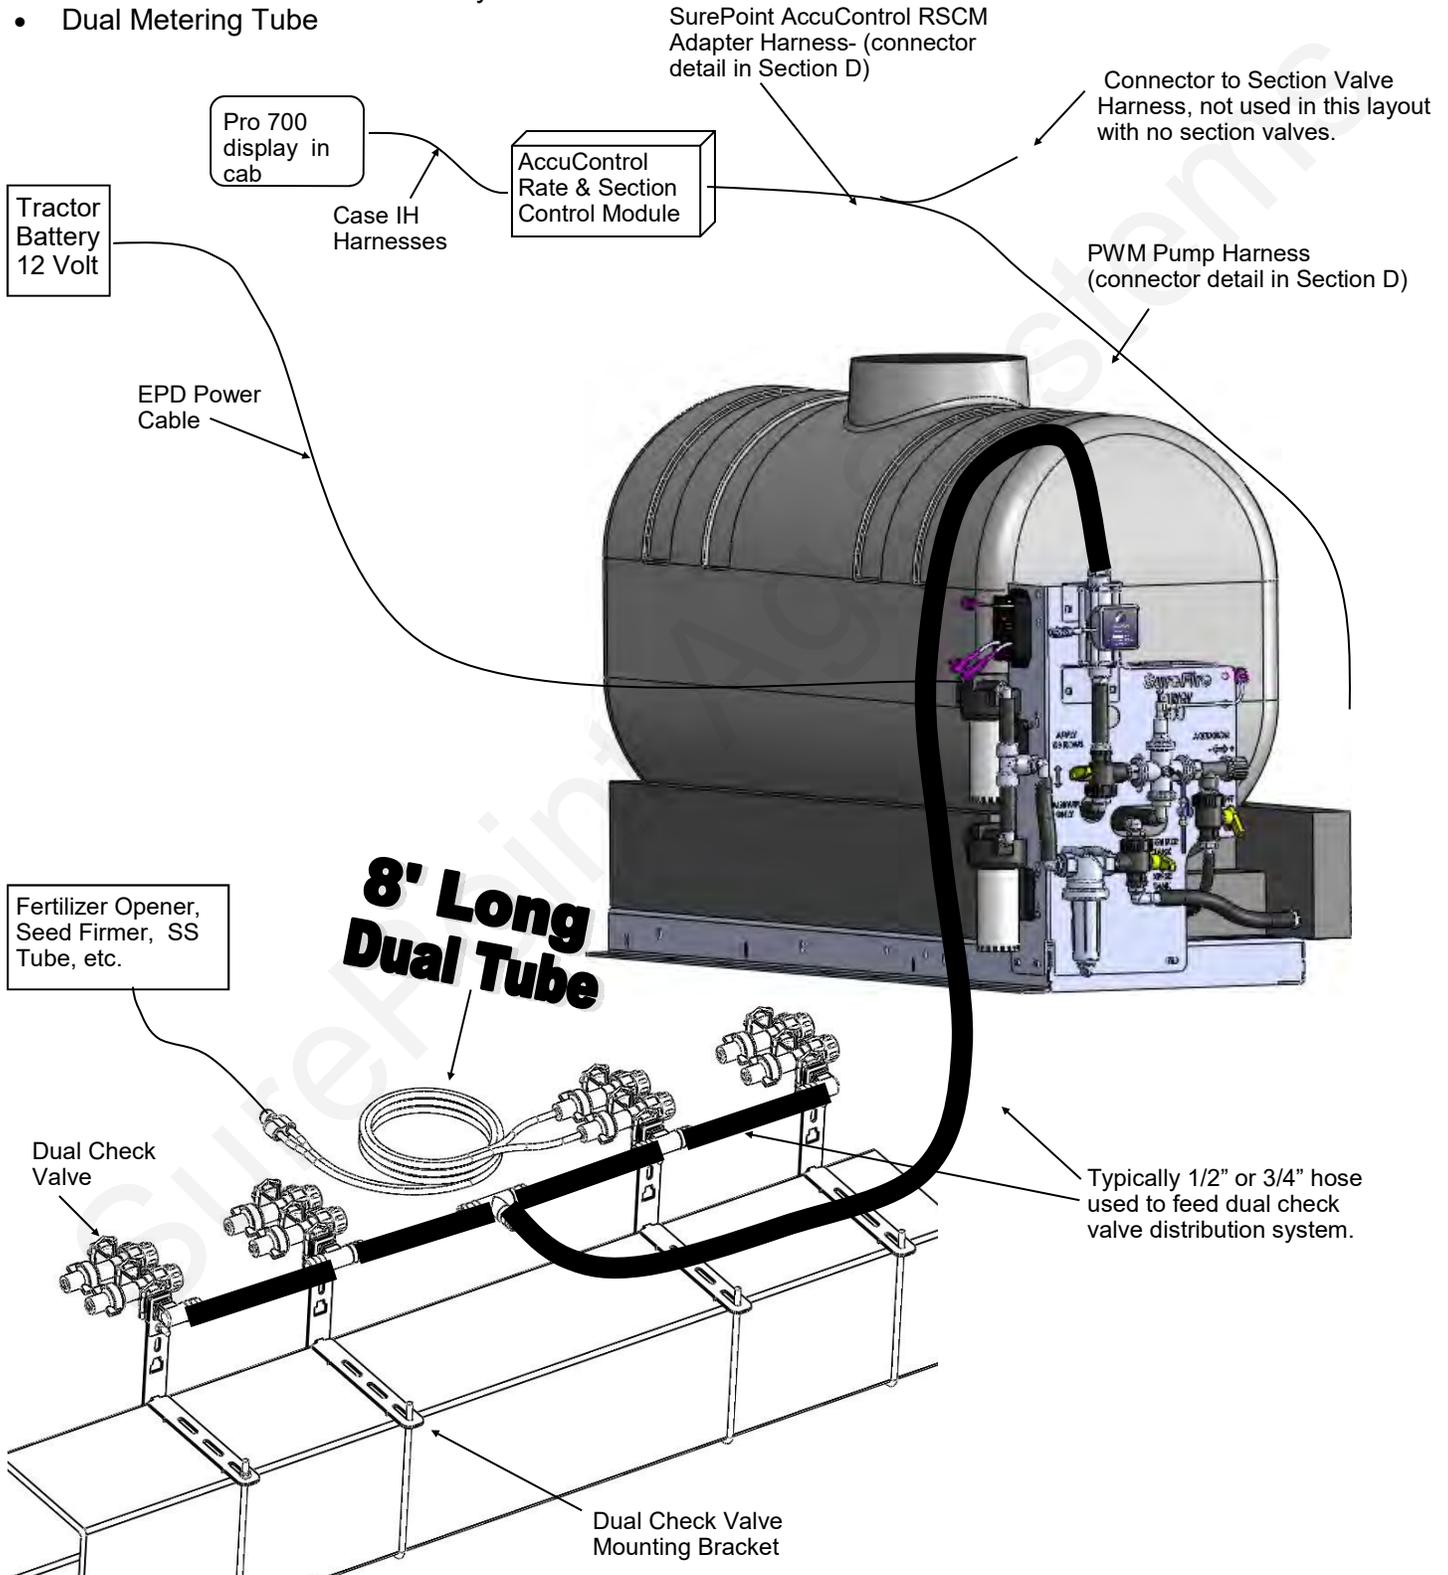

Electromagnetic Flowmeter Kits

0.13 - 2.6 GPM
 0.3 - 5.0 GPM
 0.08 - 1.6 GPM

Item Number 500-02-2040
 Item Number 500-02-2050
 —

Flowmeter Only
 204-01-46211CUF00
 204-01-46211CUF01
 204-01-46211CUF05

Kits include flowmeter, mounting bracket, hose barb fittings & hose clamps.


B

Components
Liquid

Before doing any arc welding on the implement, unplug the cable to the flowmeter, or damage to the flowmeter may result.


New Look in 2017—Black body with orange label. Same accurate, reliable electromagnetic technology. 3-pin Amp SuperSeal connector is sealed to flowmeter body for tighter, cleaner connection.

Mounting Bracket,
 Used in Tower 110 &
 200 (Tower 200
 shown)
 410-2106Y1

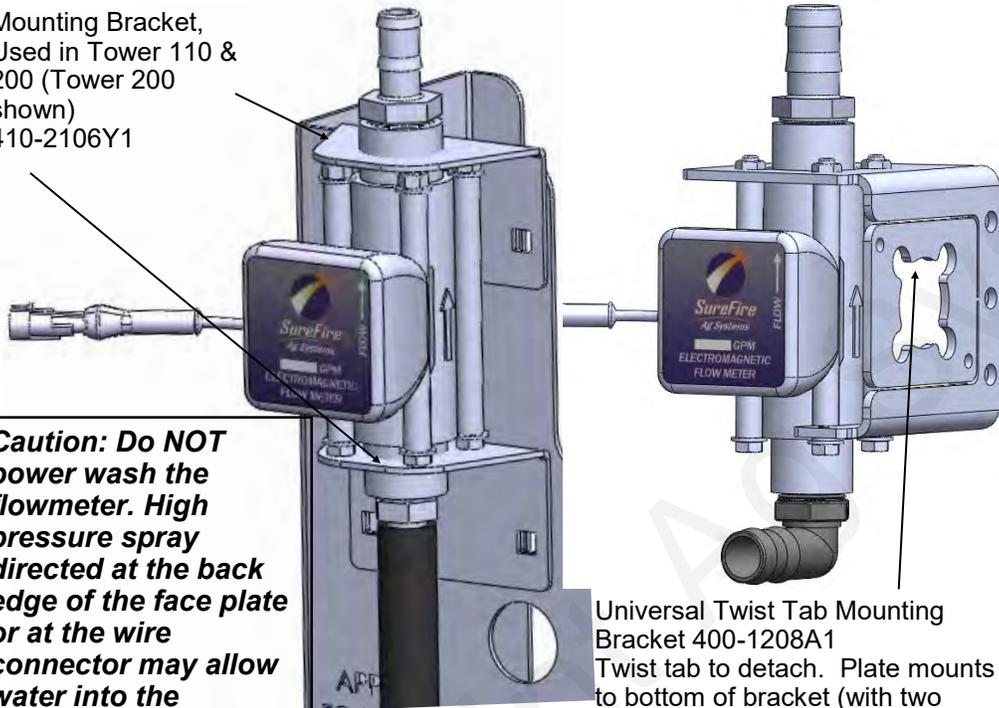

Caution: Do NOT power wash the flowmeter. High pressure spray directed at the back edge of the face plate or at the wire connector may allow water into the flowmeter electronics.

Universal Twist Tab Mounting Bracket 400-1208A1
 Twist tab to detach. Plate mounts to bottom of bracket (with two 1/4"x1" carriage bolts) to capture flowmeter.

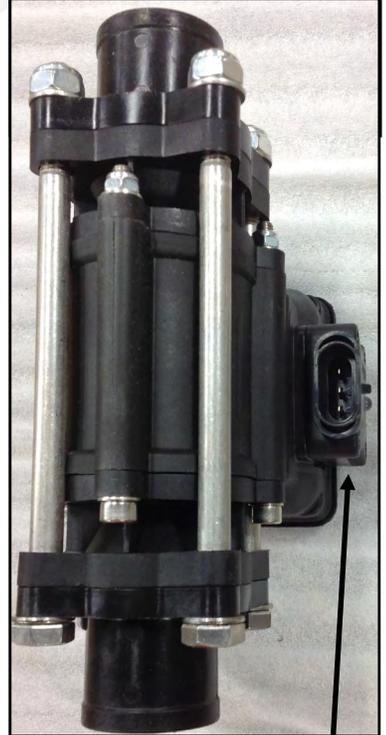

Amp SuperSeal 3-pin connector
 Use adapter 201-17842 to connect to 3-pin MP harness



Serial number label on side also shows pulses per gallon.

Electromagnetic flowmeters are superior to traditional turbine flowmeters in two basic ways. First, they have no moving parts. This translates into no wear items or potential for contaminants to jam a spinning turbine.

Second, electromagnetic flowmeters detect the flow by electrically measuring the velocity of the liquid, which makes them less sensitive to viscosity or density of the fluid measured. They are generally extremely accurate using the standard calibration number. **SurePoint still recommends you perform a catch test to verify the system is properly installed and configured. Adjust the flow cal as needed based on accurate catch tests with the actual product or observation of gallons applied and acres worked.**

Flowmeter Model (orange label or blue label)	Pulses/Gal	FPT Size	Hose Barb In kit
0.13 - 2.6 GPM	3000	3/4"	3/4"
0.3 - 5.0 GPM	3000	3/4"	3/4"
0.08-1.6 GPM	22700	3/4"	3/4"

If necessary, the flowmeter will read above it's rated range (and slightly below).

* Earlier model flowmeters (gray meters with white labels with black text) have different calibration numbers. Flow cal number is on the serial number sticker on the side of the flowmeter.




Section Valves

B
Components
Liquid

105-100075BRB90


105-100PLG (alternate
105-100PLG025 includes 1/4" pipe
thread for gauge)

Note: Ensure back-side port
is capped prior to use

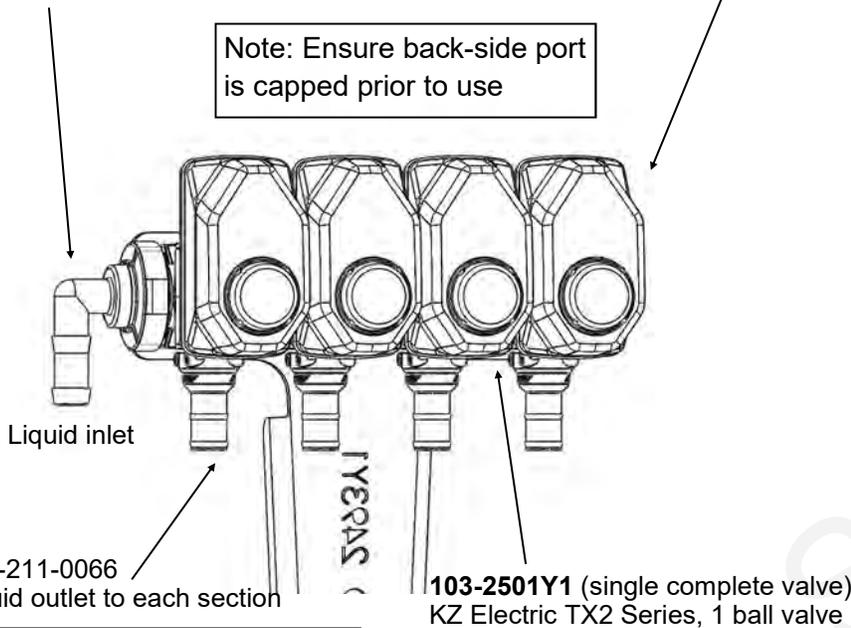

Additional Parts:

- 1" Gasket 105-100G-H
- 1" Clamp 105-FC100

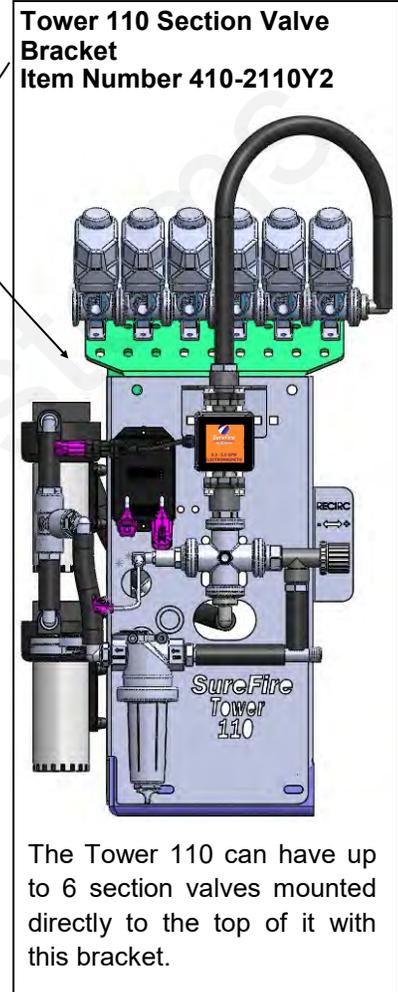

The Tower 110 can have up to 6 section valves mounted directly to the top of it with this bracket.

This is a 3-way valve. If product will not flow when valve is ON, either move the outlet hose to the other port, or remove actuator and rotate valve ball 180°, and replace actuator.



If valve indicator stays GREEN all the time or if valve indicator is not in full ON or full OFF position, replace actuator. Pull gray pin to remove actuator from valve.

How it Works

Section valves can be assembled into groups with a common inlet to control flow to each section. Common assemblies use up to 5-6 valves, however, more can be used where practical. Many alternate fittings can be used to accommodate different hose sizes and configurations.

The valves have a 3-pin weather pack electrical connector. This has a power, ground, and switched signal wire. The power measured to ground should have 12 volts when the controller is on. The switched signal wire will have 12 volts to turn the valve on, and 0 volts to turn the valve off.

Wiring Connector:
Pin A—Red, 12 Volts +
Pin B—Black, Ground -
Pin C—White, Signal
12V=on ; 0V=off

Mounting Hardware:
2 Valve Bolt Kit 384-1100
Mounting Bracket 400-2493Y1

Pressure Sensor

The Pro 700 display with AccuControl currently does not have the ability to show fertilizer system liquid pressure on the display.




The pressure reading is only for informational purposes and is NOT used in the flow control process. Flow control uses the flowmeter feedback only.

A pressure gauge would be helpful to optimize system performance and troubleshoot any issues.

Pump Priming and Air Bleed Valve

An air bleed valve is included with each pump to aid in system priming. It is shipped in the pump accessories bag and *must be installed during system installation.*

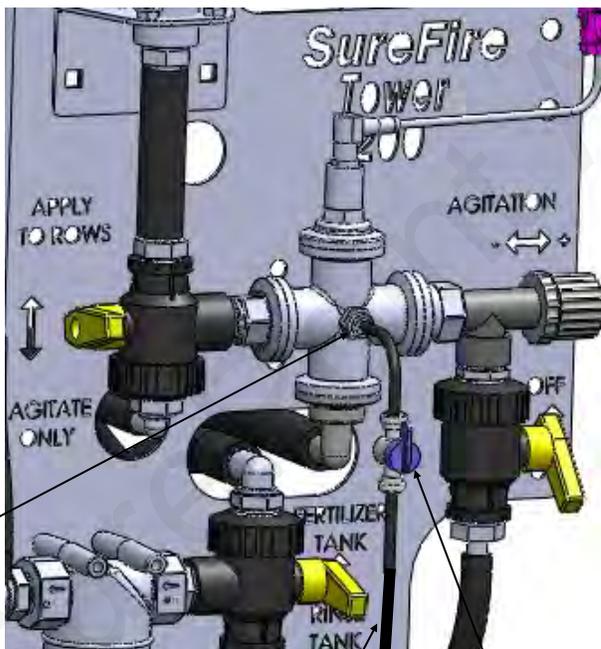

Shipped from factory with plug installed.

1/4" Tubing

1/4" air bleed valve

Why use an air bleed valve:

Most Tower fertilizer systems are equipped with a 4 lb. check valve on the end of each hose delivering fertilizer to the ground. These valves do not let air escape from the system, unless it is pressurized. 12 volt liquid pumps are not good air compressors. Therefore, the pump can struggle to prime due to air trapped on the outlet side of the pump.

The air bleed valve is a small 1/4" valve that when opened lets air escape from the pump outlet at zero pressure. **To prime the pump, open until liquid comes out and then close the valve.**

How to install the air bleed valve:

Remove the 1/4" plug from the quick connect fitting on the center cross on the Tower (see picture). Next, insert the 1/4" tubing in the quick connect fitting. Run the 1/4" tubing to an easily accessible spot on your equipment. Next, cut the tubing and push the 1/4" valve onto the tubing. Finally, run the tubing to a low location where any fertilizer that escapes will run on the ground.

Be sure the air bleed valve tube does not become plugged with dirt or it will not allow the air to bleed.

Product Distribution

To assure proper and even distribution to each row, the product being applied must be metered to each individual row. This metering is done by one of the 3 following methods which create back pressure so an equal amount of liquid is applied to each row.

1. A metering orifice may be placed in the top cap of each floating ball flow indicator. (See photos on page 9—this is not used very often.)
2. A metering orifice may be placed in the check valve cap in the line that leads to each row. (See photo on page 11)
3. A dual metering tube kit with dual check valves may be used. (See pages 15-18)




Floating Ball Flow Indicator & Manifold System

Flow indicators give a clear visual signal that a fertilizer system is working. These indicators use an o-ring and wire clip connection to snap together in any configuration necessary.

SurePoint has simple tee brackets and U-bolts that will mount these to a variety of bar sizes.

Two main types of flow indicators are used. On 30" row spacing, the low flow column with 1/4" or 3/8" push to connect outlet is recommended for rates under 10 GPA. For rates over 10 GPA the full flow column with 3/8" hose barb outlet is preferred.

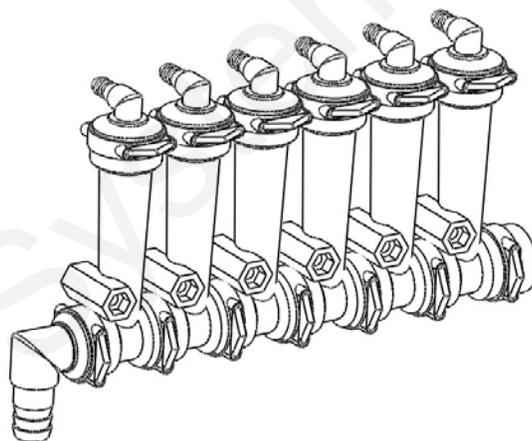

Parts List

Complete Columns

- 701-20460-950 Single Full Flow Column with 3/8" HB - 90 Degree Outlet
- 701-20460-940 Single Full Flow Column with 3/8" QC - 90 Degree Outlet
- 701-20460-960 Single Full Flow Column with 1/2" HB - 90 Degree Outlet
- 701-20460-935 Single Low Flow Column with 3/8" QC - 90 Degree Outlet
- 701-20460-920 Single Low Flow Column with 1/4" QC - 90 Degree Outlet

Fittings

- 701-20503-00 ORS x 3/4" HB - Straight
- 701-20511-00 ORS x 3/8" HB - 90 Degree
- 701-20512-00 ORS x 1/2" HB - 90 Degree
- 701-20513-00 ORS x 3/4" HB - 90 Degree
- 701-20516-00 ORS x 1/4" QC - 90 Degree
- 701-20517-00 ORS x 3/8" QC - 90 Degree
- 701-20518-00 ORS x 1/4" FPT - 90 Degree
- 701-20519-00 ORS x 1/4" FPT - Straight
- 701-20520-00 ORS Male x ORS Female - 90 degree
- 701-20521-00 Wilger End Cap
- 701-20523-00 ORS Male x ORS Female x 3/8" FPT - Isolator
- 701-20525-00 ORS Male x ORS Male x 1" FPT - Tee

Service Parts Only

- 701-20460-02 Wilger Flow Indicator Ball Retainer
- 701-20460-03 FKM O-Ring for indicator body & fittings
- 701-20460-04 Wilger Lock U-clip
- 701-20460-05 Flow Indicator Ball - 1/2" SS Ball
- 701-20460-06 Flow Indicator Ball - Maroon Glass
- 701-20460-07 Flow Indicator Ball - Red Celcon
- 701-20460-08 Flow Indicator Ball - Green Poly
- 701-20460-09 Flow Indicator Ball - Black Poly
- 701-20460-15 Viton O-Ring for column & fittings
- 701-40225-05 Viton O-Ring for Orifice

Brackets & U-Bolts

- 400-1037A1 3-6 Row Bracket
- 400-3155Y1 7-12 Row Bracket
- 400-2011A1 White Backer Plate for 3-6 Row Bracket
- 400-2010A1 White Backer Plate for 7-12 Row Bracket
- 400-1315A2 Flow Indicator Bracket, 6-8 in wide hitch mount



Floating Ball Flow Indicators- Full Flow Column (mostly 3/8" HB)

The full flow column is typically used with rates over 10 GPA on 30" rows. For rates less than 10 GPA SurePoint recommends the low flow columns with 1/4" or 3/8" push to connect (QC) outlet fittings.

The full flow columns are most often assembled with 3/8" hose barb outlets. See the low flow info below for the difference between full and low flow columns.


Full Flow Indicators w/ 3/8" Hose Barb Outlet

Column Flow (GPM):	.05-2.70 GPM
Equivalent Application Rate On 30" Rows at 6 MPH:	2-70 GPA

Ball Selection for 30" Rows

GPM	GPA	Ball
.05-.18	2-6	Green Plastic*
.09-.30	3-10	Red Plastic*
.31-.72	10-20	Maroon Glass
.40-2.1	13-70	Stainless Steel (1/2")

*Plastic balls may float on heavier fertilizers, such as 10-34-0. SurePoint recommends using the low flow column for these flow rates.

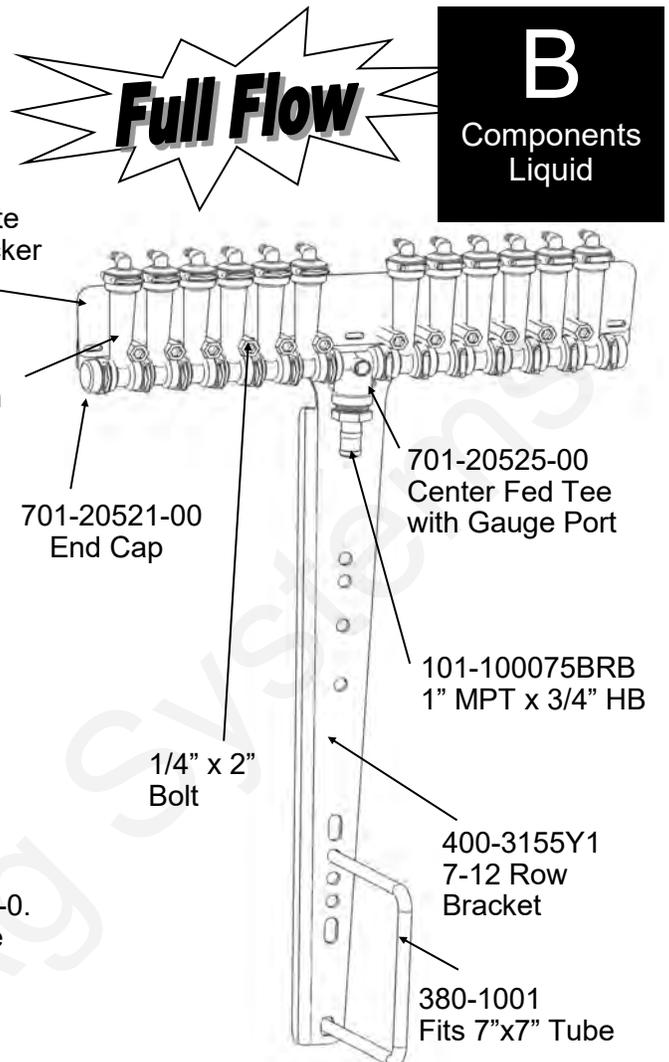

Low Flow Column (mostly 1/4" QC or 3/8" QC)

The low flow column has a smaller internal diameter. This means a heavier ball can be used to monitor a smaller flow.

SurePoint uses the low flow columns with 1/4" push to connect outlet fittings. The flow capability of 1/4" tubing and the low flow column are a great pair for rates on 30" rows under 10 GPA.

Externally, the low flow column can only be identified by "Low Flow" molded into one side of the column. All the same fittings work with low flow and full flow columns.


Low Flow Indicators w/ 1/4" Push to Connect (QC) Outlet

Column Flow (GPM):	.03-.30 GPM
*** Low Flow Column with 3/8" hose barb	.03 - .70 GPM
Equivalent Application Rate On 30" Rows at 6 MPH (1/4" QC):	1-10 GPA

Ball Selection for 30" Rows


GPM	GPA	Ball
.03-.09	1-3	Green Plastic*
.05-.14	2-4	Red Plastic*
.10-.18	3-6	Maroon Glass
.15-.70	5-10	Stainless Steel (1/2")

*These balls may float on heavier fertilizers, such as 10-34-0. Use Maroon Glass in this case.

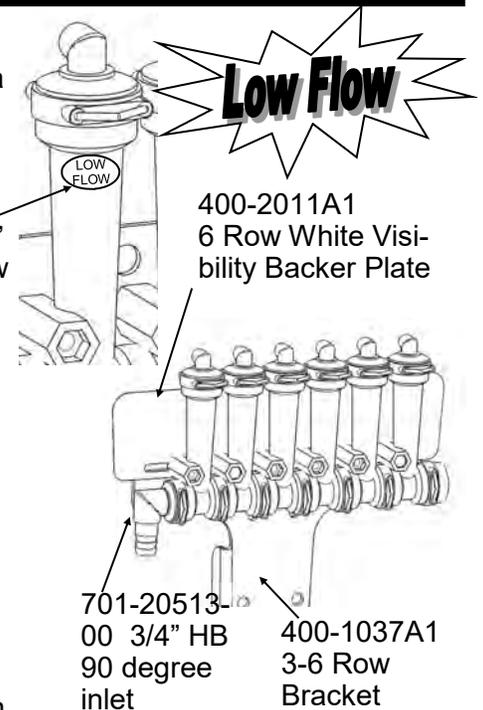

Floating Ball Flow Indicators— Metering Orifice Selection for 30” Rows

See www.SurePointag.com for other row spacings

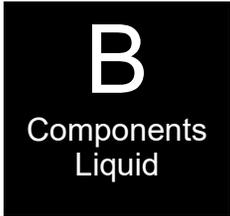

30” Spacing

Orifice	PSI	Gal/Min 28-0-0	MPH						
			4.0	4.5	5.0	5.5	6.0	6.5	7.0
28	10	0.043	2.15	1.91	1.72	1.56	1.43	1.32	1.23
	20	0.061	3.02	2.69	2.42	2.20	2.02	1.86	1.73
	30	0.075	3.72	3.31	2.98	2.71	2.48	2.29	2.13
	40	0.087	4.29	3.82	3.43	3.12	2.86	2.64	2.45
	50	0.097	4.82	4.28	3.85	3.50	3.21	2.97	2.75
	60	0.106	5.26	4.67	4.21	3.82	3.50	3.23	3.00
35	10	0.070	3.46	3.08	2.77	2.52	2.31	2.13	1.98
	20	0.098	4.86	4.32	3.89	3.54	3.24	2.99	2.78
	30	0.120	5.96	5.30	4.77	4.33	3.97	3.67	3.40
	40	0.139	6.88	6.11	5.50	5.00	4.58	4.23	3.93
	50	0.156	7.71	6.85	6.17	5.61	5.14	4.74	4.41
	60	0.170	8.41	7.48	6.73	6.12	5.61	5.18	4.81
40	10	0.090	4.47	3.97	3.57	3.25	2.98	2.75	2.55
	20	0.127	6.31	5.61	5.05	4.59	4.21	3.88	3.60
	30	0.157	7.75	6.89	6.20	5.64	5.17	4.77	4.43
	40	0.181	8.94	7.94	7.15	6.50	5.96	5.50	5.11
	50	0.202	9.99	8.88	7.99	7.26	6.66	6.15	5.71
	60	0.221	10.95	9.73	8.76	7.96	7.30	6.74	6.26
46	10	0.119	5.91	5.26	4.73	4.30	3.94	3.64	3.38
	20	0.169	8.37	7.44	6.69	6.08	5.58	5.15	4.78
	30	0.207	10.25	9.11	8.20	7.45	6.83	6.31	5.86
	40	0.239	11.83	10.51	9.46	8.60	7.88	7.28	6.76
	50	0.267	13.23	11.76	10.58	9.62	8.82	8.14	7.56
	60	0.293	14.50	12.89	11.60	10.55	9.67	8.92	8.29
52	10	0.149	7.36	6.54	5.89	5.35	4.91	4.53	4.21
	20	0.210	10.38	9.23	8.31	7.55	6.92	6.39	5.93
	30	0.257	12.70	11.29	10.16	9.24	8.47	7.82	7.26
	40	0.296	14.67	13.04	11.74	10.67	9.78	9.03	8.39
	50	0.332	16.43	14.60	13.14	11.95	10.95	10.11	9.39
	60	0.363	17.96	15.96	14.37	13.06	11.97	11.05	10.26
63	10	0.218	10.78	9.58	8.62	7.84	7.18	6.63	6.16
	20	0.307	15.20	13.51	12.16	11.05	10.13	9.35	8.69
	30	0.376	18.62	16.55	14.89	13.54	12.41	11.46	10.64
	40	0.435	21.51	19.12	17.21	15.64	14.34	13.24	12.29
	50	0.486	24.05	21.38	19.24	17.49	16.03	14.80	13.74
	60	0.532	26.33	23.40	21.06	19.15	17.55	16.20	15.04
78	10	0.341	16.87	14.99	13.49	12.27	11.24	10.38	9.64
	20	0.481	23.83	21.18	19.06	17.33	15.89	14.66	13.62
	30	0.590	29.22	25.97	23.37	21.25	19.48	17.98	16.70
	40	0.681	33.73	29.98	26.98	24.53	22.49	20.76	19.27
	50	0.762	37.72	33.53	30.17	27.43	25.14	23.21	21.55
	60	0.835	41.31	36.72	33.05	30.04	27.54	25.42	23.60
98	10	0.553	27.38	24.34	21.90	19.91	18.25	16.85	15.64
	20	0.782	38.72	34.42	30.98	28.16	25.82	23.83	22.13
	30	0.956	47.31	42.05	37.85	34.41	31.54	29.11	27.03
	40	1.106	54.76	48.67	43.81	39.82	36.50	33.70	31.29
	50	1.239	61.33	54.51	49.06	44.60	40.88	37.74	35.04
	60	1.354	67.02	59.58	53.62	48.74	44.68	41.24	38.30
107	10	0.649	32.11	28.54	25.69	23.35	21.41	19.76	18.35
	20	0.920	45.56	40.50	36.45	33.13	30.37	28.04	26.03
	30	1.124	55.63	49.45	44.51	40.46	37.09	34.24	31.79
	40	1.301	64.39	57.24	51.52	46.83	42.93	39.63	36.80
	50	1.451	71.84	63.86	57.47	52.25	47.89	44.21	41.05
	60	1.584	78.41	69.70	62.73	57.03	52.27	48.25	44.81
130	10	0.938	46.43	41.27	37.15	33.77	30.96	28.57	26.53
	20	1.319	65.27	58.02	52.22	47.47	43.51	40.17	37.30
	30	1.619	80.16	71.26	64.13	58.30	53.44	49.33	45.81
	40	1.867	92.43	82.16	73.94	67.22	61.62	56.88	52.82
	50	2.088	103.38	91.89	82.70	75.19	68.92	63.62	59.07
	60	2.292	113.46	100.85	90.76	82.51	75.64	69.82	64.83

Tower Electric Pump Pressure Recommendations (with 4 lb check valves):


- Minimum 10 PSI
- Maximum 30 PSI (*pump can do 50 PSI or more if total output is not too great*)

PumpRight Pressure Recommendations (with 10 lb check valves):

- Minimum 20 PSI
- Maximum 80 PSI

Chart is for 28-0-0 Fertilizer @ 70°

- Heavier fertilizers (like 10-34-0) will have 5-15% less flow than chart indicates for a certain pressure
- Cold fertilizers will cause system pressure to increase at a given application rate.
- Tower Electric Pump Systems will have reduced flow and increased electrical current draw due to cold fertilizer increasing operating pressure. **Use the largest orifice possible for cold weather operation.**

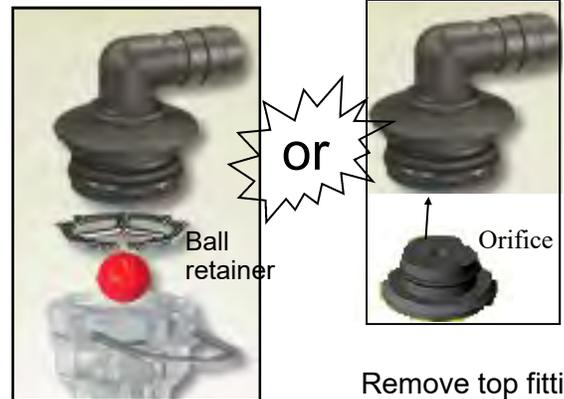

If using a metering orifice in the flow indicator, the orifice replaces the ball retainer. If not using an orifice here, the ball retainer must be in place.

Remove top fitting of each column. Then push metering orifice into bottom of each outlet fitting. (*This is not used very often.*)



All application rates (gallons/acres) are estimates based on 0-28-0 (10.65 lbs/gallon) at 70 degrees F.

Check Valves

10 lb check valve with 3/8" hose barbs


B
Components
Liquid

The recommended check valve for most **PumpRight hydraulic installations** is the 10 lb check with 3/8" hose barbs. This works with 3/8" rubber hose which SurePoint recommends for most applications over 10 GPA on 30" rows. The recommended minimum system operating pressure for this check is 20 psi, to ensure all checks open fully.

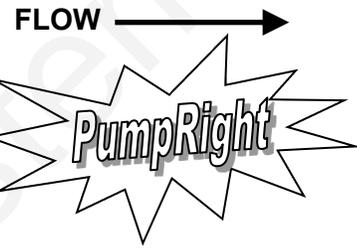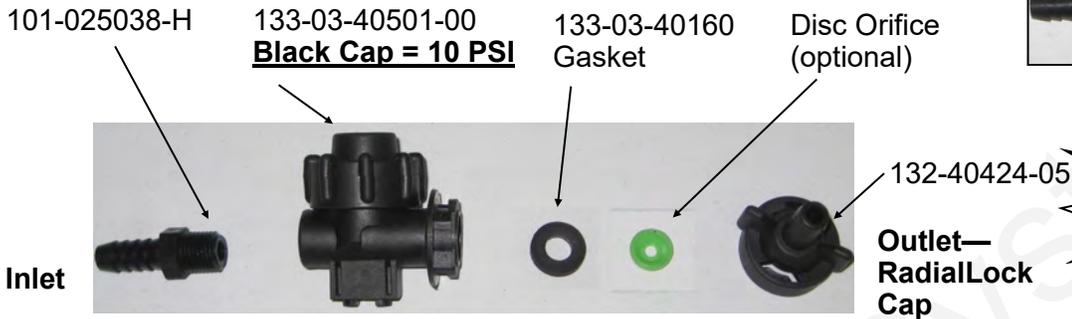

4 lb check valve with 1/4" quick connect fittings

4 lb check valves are typically used with **electric pump systems**. SurePoint recommends this valve for use with 1/4" tubing applying up to 10 GPA on 30" rows. The recommended minimum system operating pressure for this check is 10 psi, to ensure all checks open fully.

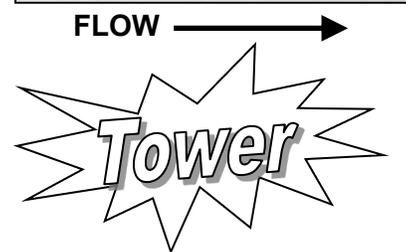

Special Purpose Check Valve Assemblies

Assembly Part Number	Description	Suggested Uses (30" rows)
136-10-04QC04QC	1/4" QC x 1/4" QC 10 lb	< 10 GPA with PumpRight & 1/4" Tubing
136-10-06QC06QC	3/8" QC x 3/8" QC 10 lb	With 3/8" tubing plumbing
136-04-06HB06HB	3/8" HB x 3/8" HB 4 lb	> 10 GPA with Electric Pumps
136-04-08HB08HB	1/2" HB x 1/2" HB 4 lb	> 50 GPA with PumpRight
136-10-08HB08HB	1/2" HB x 1/2" HB 10 lb	> 50 GPA with PumpRight

Colored Disc Orifice Chart for 30" rows

B

Components
Liquid

30" Spacing

Orifice Color (Approx Size)	PSI	Gal/Min 28-0-0	MPH						
			4.0	4.5	5.0	5.5	6.0	6.5	7.0
Pink (24)	10	0.033	1.62	1.44	1.30	1.18	1.08	1.00	0.93
	20	0.046	2.28	2.02	1.82	1.66	1.52	1.40	1.30
	30	0.057	2.80	2.49	2.24	2.04	1.87	1.73	1.60
	40	0.065	3.24	2.88	2.59	2.36	2.16	1.99	1.85
	50	0.073	3.64	3.23	2.91	2.64	2.42	2.24	2.08
	60	0.081	3.99	3.54	3.19	2.90	2.66	2.45	2.28
Gray (30)	10	0.050	2.50	2.22	2.00	1.82	1.66	1.54	1.43
	20	0.072	3.55	3.15	2.84	2.58	2.37	2.18	2.03
	30	0.088	4.34	3.85	3.47	3.15	2.89	2.67	2.48
	40	0.101	4.99	4.44	4.00	3.63	3.33	3.07	2.85
	50	0.112	5.56	4.95	4.45	4.05	3.71	3.42	3.18
	60	0.124	6.13	5.45	4.91	4.46	4.09	3.77	3.50
Black (35)	10	0.070	3.46	3.08	2.77	2.52	2.31	2.13	1.98
	20	0.098	4.86	4.32	3.89	3.54	3.24	2.99	2.78
	30	0.120	5.96	5.30	4.77	4.33	3.97	3.67	3.40
	40	0.139	6.88	6.11	5.50	5.00	4.58	4.23	3.93
	50	0.156	7.71	6.85	6.17	5.61	5.14	4.74	4.41
	60	0.170	8.41	7.48	6.73	6.12	5.61	5.18	4.81
Brown (41)	10	0.094	4.64	4.13	3.71	3.38	3.10	2.86	2.65
	20	0.132	6.53	5.80	5.22	4.75	4.35	4.02	3.73
	30	0.162	8.02	7.13	6.41	5.83	5.34	4.93	4.58
	40	0.187	9.24	8.22	7.39	6.72	6.16	5.69	5.28
	50	0.209	10.34	9.19	8.27	7.52	6.89	6.36	5.91
	60	0.228	11.30	10.05	9.04	8.22	7.53	6.95	6.46
Orange (46)	10	0.119	5.91	5.26	4.73	4.30	3.94	3.64	3.38
	20	0.169	8.37	7.44	6.69	6.08	5.58	5.15	4.78
	30	0.207	10.25	9.11	8.20	7.45	6.83	6.31	5.86
	40	0.239	11.83	10.51	9.46	8.60	7.88	7.28	6.76
	50	0.267	13.23	11.76	10.58	9.62	8.82	8.14	7.56
	60	0.293	14.50	12.89	11.60	10.55	9.67	8.92	8.29
Maroon (52)	10	0.149	7.36	6.54	5.89	5.35	4.91	4.53	4.21
	20	0.210	10.38	9.23	8.31	7.55	6.92	6.39	5.93
	30	0.257	12.70	11.29	10.16	9.24	8.47	7.82	7.26
	40	0.296	14.67	13.04	11.74	10.67	9.78	9.03	8.39
	50	0.332	16.43	14.60	13.14	11.95	10.95	10.11	9.39
	60	0.363	17.96	15.96	14.37	13.06	11.97	11.05	10.26
Red (63)	10	0.218	10.78	9.58	8.62	7.84	7.18	6.63	6.16
	20	0.307	15.20	13.51	12.16	11.05	10.13	9.35	8.69
	30	0.376	18.62	16.55	14.89	13.54	12.41	11.46	10.64
	40	0.435	21.51	19.12	17.21	15.64	14.34	13.24	12.29
	50	0.486	24.05	21.38	19.24	17.49	16.03	14.80	13.74
	60	0.532	26.33	23.40	21.06	19.15	17.55	16.20	15.04
Blue (80)	10	0.351	17.39	15.46	13.91	12.65	11.59	10.70	9.94
	20	0.496	24.57	21.84	19.66	17.87	16.38	15.12	14.04
	30	0.608	30.09	26.75	24.08	21.89	20.06	18.52	17.20
	40	0.702	34.74	30.88	27.79	25.26	23.16	21.38	19.85
	50	0.785	38.86	34.54	31.08	28.26	25.90	23.91	22.20
	60	0.859	42.53	37.81	34.03	30.93	28.36	26.18	24.31
Yellow (95)	10	0.506	25.06	22.27	20.05	18.22	16.70	15.42	14.32
	20	0.715	35.39	31.46	28.32	25.74	23.60	21.78	20.23
	30	0.876	43.37	38.55	34.69	31.54	28.91	26.69	24.78
	40	1.009	49.94	44.39	39.95	36.32	33.29	30.73	28.54
	50	1.133	56.07	49.84	44.86	40.78	37.38	34.51	32.04
	60	1.239	61.33	54.51	49.06	44.60	40.88	37.74	35.04
Green (110)	10	0.686	33.95	30.18	27.16	24.69	22.63	20.89	19.40
	20	0.973	48.19	42.83	38.55	35.04	32.12	29.65	27.53
	30	1.186	58.70	52.18	46.96	42.69	39.13	36.12	33.54
	40	1.372	67.90	60.35	54.32	49.38	45.27	41.78	38.80
	50	1.531	75.78	67.36	60.63	55.12	50.52	46.64	43.30
	60	1.681	83.23	73.98	66.58	60.53	55.49	51.22	47.56

Tower Electric Pump Pressure Recommendations (with 4 lb check valves):

- Minimum 10 PSI
- Maximum 30 PSI (pump can do 50 PSI or more if total output is not too great)


Hydraulic PumpRight Pressure Recommendations (with 10 lb check valves):

- Minimum 20 PSI
- Maximum 80 PSI

Chart is for 28-0-0 Fertilizer @ 70°

- Heavier fertilizers (like 10-34-0) will have 5-15% less flow than chart indicates for a certain pressure
- Cold fertilizers will cause system pressure to increase at a given application rate.
- Tower Electric Pump Systems will have reduced flow and increased electrical current draw due to cold fertilizer increasing operating pressure. **Use the largest orifice possible for cold weather operation. This is absolutely essential for 24-row systems using electric pumps.**

Colored Disc Orifice assemblies under the check valve cap in most cases. (Drop the orifice with the hole down into the cap, then put the gasket on top of it.) The orifice can also be installed in a manifold (common on grain drills).

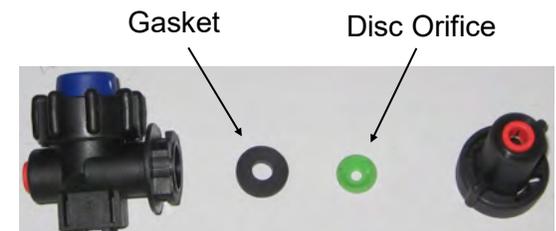

FLOW → 1/4 Turn Cap is Outlet

Colored Disc Orifice Chart Common Grain Drill Row Spacings

B
Components
Liquid

7.5" Spacing

Orifice Color (Approx Size)	PSI	Gal/Min 28-0-0	MPH						
			4.0	4.5	5.0	5.5	6.0	6.5	7.0
Pink (24)	10	0.033	6.5	5.8	5.2	4.7	4.3	4.0	3.7
	20	0.046	9.1	8.1	7.3	6.6	6.1	5.6	5.2
	30	0.057	11.2	10.0	9.0	8.2	7.5	6.9	6.4
	40	0.065	13.0	11.5	10.4	9.4	8.6	8.0	7.4
	50	0.073	14.5	12.9	11.6	10.6	9.7	8.9	8.3
	60	0.081	15.9	14.2	12.8	11.6	10.6	9.8	9.1
Gray (30)	10	0.050	10.0	8.9	8.0	7.3	6.7	6.1	5.7
	20	0.072	14.2	12.6	11.4	10.3	9.5	8.7	8.1
	30	0.088	17.3	15.4	13.9	12.6	11.6	10.7	9.9
	40	0.101	20.0	17.8	16.0	14.5	13.3	12.3	11.4
	50	0.112	22.3	19.8	17.8	16.2	14.8	13.7	12.7
	60	0.124	24.5	21.8	19.6	17.8	16.4	15.1	14.0
Black (35)	10	0.070	13.8	12.3	11.1	10.1	9.2	8.5	7.9
	20	0.098	19.4	17.3	15.6	14.1	13.0	12.0	11.1
	30	0.120	23.8	21.2	19.1	17.3	15.9	14.7	13.6
	40	0.139	27.5	24.5	22.0	20.0	18.3	16.9	15.7
	50	0.156	30.8	27.4	24.7	22.4	20.6	19.0	17.6
	60	0.170	33.6	29.9	26.9	24.5	22.4	20.7	19.2
Brown (41)	10	0.094	19	17	15	14	12	11	11
	20	0.132	26	23	21	19	17	16	15
	30	0.162	32	29	26	23	21	20	18
	40	0.187	37	33	30	27	25	23	21
	50	0.209	41	37	33	30	28	25	24
	60	0.228	45	40	36	33	30	28	26
Orange (46)	10	0.119	24	21	19	17	16	15	14
	20	0.169	33	30	27	24	22	21	19
	30	0.207	41	36	33	30	27	25	23
	40	0.239	47	42	38	34	32	29	27
	50	0.267	53	47	42	38	35	33	30
	60	0.293	58	52	46	42	39	36	33
Maroon (52)	10	0.149	29	26	24	21	20	18	17
	20	0.210	42	37	33	30	28	26	24
	30	0.257	51	45	41	37	34	31	29
	40	0.296	59	52	47	43	39	36	34
	50	0.332	66	58	53	48	44	40	38
	60	0.363	72	64	57	52	48	44	41
Red (63)	10	0.218	43	38	34	31	29	27	25
	20	0.307	61	54	49	44	41	37	35
	30	0.376	74	66	60	54	50	46	43
	40	0.435	86	76	69	63	57	53	49
	50	0.486	96	86	77	70	64	59	55
	60	0.532	105	94	84	77	70	65	60
Blue (80)	10	0.351	70	62	56	51	46	43	40
	20	0.496	98	87	79	71	66	60	56
	30	0.608	120	107	96	88	80	74	69
	40	0.702	139	124	111	101	93	86	79
	50	0.785	155	138	124	113	104	96	89
	60	0.859	170	151	136	124	113	105	97
Yellow (95)	10	0.506	100	89	80	73	67	62	57
	20	0.715	142	126	113	103	94	87	81
	30	0.876	173	154	139	126	116	107	99
	40	1.009	200	178	160	145	133	123	114
	50	1.133	224	199	179	163	150	138	128
	60	1.239	245	218	196	178	164	151	140

Rates are estimates based on 28-0-0 (10.7 lb/gal at 70° F)

10" Spacing

Orifice Color (Approx Size)	PSI	Gal/Min 28-0-0	MPH						
			4.0	4.5	5.0	5.5	6.0	6.5	7.0
Pink (24)	10	0.033	4.9	4.3	3.9	3.5	3.2	3.0	2.8
	20	0.046	6.8	6.1	5.5	5.0	4.6	4.2	3.9
	30	0.057	8.4	7.5	6.7	6.1	5.6	5.2	4.8
	40	0.065	9.7	8.6	7.8	7.1	6.5	6.0	5.6
	50	0.073	10.9	9.7	8.7	7.9	7.3	6.7	6.2
	60	0.081	12.0	10.6	9.6	8.7	8.0	7.4	6.8
Gray (30)	10	0.050	7.5	6.7	6.0	5.4	5.0	4.6	4.3
	20	0.072	10.6	9.5	8.5	7.7	7.1	6.6	6.1
	30	0.088	13.0	11.6	10.4	9.5	8.7	8.0	7.4
	40	0.101	15.0	13.3	12.0	10.9	10.0	9.2	8.6
	50	0.112	16.7	14.8	13.4	12.1	11.1	10.3	9.5
	60	0.124	18.4	16.4	14.7	13.4	12.3	11.3	10.5
Black (35)	10	0.070	10.4	9.2	8.3	7.6	6.9	6.4	5.9
	20	0.098	14.6	13.0	11.7	10.6	9.7	9.0	8.3
	30	0.120	17.9	15.9	14.3	13.0	11.9	11.0	10.2
	40	0.139	20.6	18.3	16.5	15.0	13.8	12.7	11.8
	50	0.156	23.1	20.6	18.5	16.8	15.4	14.2	13.2
	60	0.170	25.2	22.4	20.2	18.4	16.8	15.5	14.4
Brown (41)	10	0.094	14	12	11	10	9	9	8
	20	0.132	20	17	16	14	13	12	11
	30	0.162	24	21	19	17	16	15	14
	40	0.187	28	25	22	20	18	17	16
	50	0.209	31	28	25	23	21	19	18
	60	0.228	34	30	27	25	23	21	19
Orange (46)	10	0.119	18	16	14	13	12	11	10
	20	0.169	25	22	20	18	17	15	14
	30	0.207	31	27	25	22	21	19	18
	40	0.239	35	32	28	26	24	22	20
	50	0.267	40	35	32	29	26	24	23
	60	0.293	43	39	35	32	29	27	25
Maroon (52)	10	0.149	22	20	18	16	15	14	13
	20	0.210	31	28	25	23	21	19	18
	30	0.257	38	34	30	28	25	23	22
	40	0.296	44	39	35	32	29	27	25
	50	0.332	49	44	39	36	33	30	28
	60	0.363	54	48	43	39	36	33	31
Red (63)	10	0.218	32	29	26	24	22	20	18
	20	0.307	46	41	36	33	30	28	26
	30	0.376	56	50	45	41	37	34	32
	40	0.435	65	57	52	47	43	40	37
	50	0.486	72	64	58	52	48	44	41
	60	0.532	79	70	63	57	53	49	45
Blue (80)	10	0.351	52	46	42	38	35	32	30
	20	0.496	74	66	59	54	49	45	42
	30	0.608	90	80	72	66	60	56	52
	40	0.702	104	93	83	76	69	64	60
	50	0.785	117	104	93	85	78	72	67
	60	0.859	128	113	102	93	85	79	73
Yellow (95)	10	0.506	75	67	60	55	50	46	43
	20	0.715	106	94	85	77	71	65	61
	30	0.876	130	116	104	95	87	80	74
	40	1.009	150	133	120	109	100	92	86
	50	1.133	168	150	135	122	112	104	96
	60	1.239	184	164	147	134	123	113	105

Rates are estimates based on 28-0-0 (10.7 lb/gal at 70° F)



Colored Disc Orifice Chart

B
Components
Liquid

15" Spacing

Orifice Color (Approx Size)	PSI	Gal/Min	MPH						
		28-0-0	4.0	4.5	5.0	5.5	6.0	6.5	7.0
Pink (24)	10	0.033	3.2	2.9	2.6	2.4	2.2	2.0	1.9
	20	0.046	4.6	4.0	3.6	3.3	3.0	2.8	2.6
	30	0.057	5.6	5.0	4.5	4.1	3.7	3.5	3.2
	40	0.065	6.5	5.8	5.2	4.7	4.3	4.0	3.7
	50	0.073	7.3	6.5	5.8	5.3	4.8	4.5	4.2
60	0.081	8.0	7.1	6.4	5.8	5.3	4.9	4.6	
Gray (30)	10	0.050	5.0	4.4	4.0	3.6	3.3	3.1	2.9
	20	0.072	7.1	6.3	5.7	5.2	4.7	4.4	4.1
	30	0.088	8.7	7.7	6.9	6.3	5.8	5.3	5.0
	40	0.101	10.0	8.9	8.0	7.3	6.7	6.1	5.7
	50	0.112	11.1	9.9	8.9	8.1	7.4	6.8	6.4
60	0.124	12.3	10.9	9.8	8.9	8.2	7.5	7.0	
Black (35)	10	0.070	6.9	6.2	5.5	5.0	4.6	4.3	4.0
	20	0.098	9.7	8.6	7.8	7.1	6.5	6.0	5.6
	30	0.120	11.9	10.6	9.5	8.7	7.9	7.3	6.8
	40	0.139	13.8	12.2	11.0	10.0	9.2	8.5	7.9
	50	0.156	15.4	13.7	12.3	11.2	10.3	9.5	8.8
60	0.170	16.8	15.0	13.5	12.2	11.2	10.4	9.6	
Brown (41)	10	0.094	9.3	8.3	7.4	6.8	6.2	5.7	5.3
	20	0.132	13.1	11.6	10.4	9.5	8.7	8.0	7.5
	30	0.162	16.0	14.3	12.8	11.7	10.7	9.9	9.2
	40	0.187	18.5	16.4	14.8	13.4	12.3	11.4	10.6
	50	0.209	20.7	18.4	16.5	15.0	13.8	12.7	11.8
60	0.228	22.6	20.1	18.1	16.4	15.1	13.9	12.9	
Orange (46)	10	0.119	11.8	10.5	9.5	8.6	7.9	7.3	6.8
	20	0.169	16.7	14.9	13.4	12.2	11.2	10.3	9.6
	30	0.207	20.5	18.2	16.4	14.9	13.7	12.6	11.7
	40	0.239	23.7	21.0	18.9	17.2	15.8	14.6	13.5
	50	0.267	26.5	23.5	21.2	19.2	17.6	16.3	15.1
60	0.293	29.0	25.8	23.2	21.1	19.3	17.8	16.6	
Maroon (52)	10	0.149	15	13	12	11	10	9	8
	20	0.210	21	18	17	15	14	13	12
	30	0.257	25	23	20	18	17	16	15
	40	0.296	29	26	23	21	20	18	17
	50	0.332	33	29	26	24	22	20	19
60	0.363	36	32	29	26	24	22	21	
Red (63)	10	0.218	22	19	17	16	14	13	12
	20	0.307	30	27	24	22	20	19	17
	30	0.376	37	33	30	27	25	23	21
	40	0.435	43	38	34	31	29	26	25
	50	0.486	48	43	38	35	32	30	27
60	0.532	53	47	42	38	35	32	30	
Blue (80)	10	0.351	35	31	28	25	23	21	20
	20	0.496	49	44	39	36	33	30	28
	30	0.608	60	54	48	44	40	37	34
	40	0.702	69	62	56	51	46	43	40
	50	0.785	78	69	62	57	52	48	44
60	0.859	85	76	68	62	57	52	49	
Yellow (95)	10	0.506	50	45	40	36	33	31	29
	20	0.715	71	63	57	51	47	44	40
	30	0.876	87	77	69	63	58	53	50
	40	1.009	100	89	80	73	67	61	57
	50	1.133	112	100	90	82	75	69	64
60	1.239	123	109	98	89	82	75	70	
Green (110)	10	0.686	68	60	54	49	45	42	39
	20	0.973	96	86	77	70	64	59	55
	30	1.186	117	104	94	85	78	72	67
	40	1.372	136	121	109	99	91	84	78
	50	1.531	152	135	121	110	101	93	87
60	1.681	166	148	133	121	111	102	95	
White (125)	10	0.867	86	76	69	62	57	53	49
	20	1.230	122	108	97	89	81	75	70
	30	1.504	149	132	119	108	99	92	85
	40	1.735	172	153	137	125	114	106	98
	50	1.938	192	171	153	140	128	118	110
60	2.124	210	187	168	153	140	129	120	
Lime Green (156)	10	1.372	136	121	109	99	91	84	78
	20	1.947	193	171	154	140	128	119	110
	30	2.381	236	209	189	171	157	145	135
	40	2.752	272	242	218	198	182	168	156
	50	3.071	304	270	243	221	203	187	174
60	3.363	333	296	266	242	222	205	190	

Rates are estimates based on 28-0-0 (10.7 lb/gal at 70° F)

20" Spacing

Orifice Color (Approx Size)	PSI	Gal/Min	MPH						
		28-0-0	4.0	4.5	5.0	5.5	6.0	6.5	7.0
Pink (24)	10	0.033	2.4	2.2	1.9	1.8	1.6	1.5	1.4
	20	0.046	3.4	3.0	2.7	2.5	2.3	2.1	2.0
	30	0.057	4.2	3.7	3.4	3.1	2.8	2.6	2.4
	40	0.065	4.9	4.3	3.9	3.5	3.2	3.0	2.8
	50	0.073	5.5	4.8	4.4	4.0	3.6	3.4	3.1
60	0.081	6.0	5.3	4.8	4.3	4.0	3.7	3.4	
Gray (30)	10	0.050	3.7	3.3	3.0	2.7	2.5	2.3	2.1
	20	0.072	5.3	4.7	4.3	3.9	3.5	3.3	3.0
	30	0.088	6.5	5.8	5.2	4.7	4.3	4.0	3.7
	40	0.101	7.5	6.7	6.0	5.4	5.0	4.6	4.3
	50	0.112	8.3	7.4	6.7	6.1	5.6	5.1	4.8
60	0.124	9.2	8.2	7.4	6.7	6.1	5.7	5.3	
Black (35)	10	0.070	5.2	4.6	4.2	3.8	3.5	3.2	3.0
	20	0.098	7.3	6.5	5.8	5.3	4.9	4.5	4.2
	30	0.120	8.9	7.9	7.1	6.5	6.0	5.5	5.1
	40	0.139	10.3	9.2	8.3	7.5	6.9	6.3	5.9
	50	0.156	11.6	10.3	9.3	8.4	7.7	7.1	6.6
60	0.170	12.6	11.2	10.1	9.2	8.4	7.8	7.2	
Brown (41)	10	0.094	7.0	6.2	5.6	5.1	4.6	4.3	4.0
	20	0.132	9.8	8.7	7.8	7.1	6.5	6.0	5.6
	30	0.162	12.0	10.7	9.6	8.7	8.0	7.4	6.9
	40	0.187	13.9	12.3	11.1	10.1	9.2	8.5	7.9
	50	0.209	15.5	13.8	12.4	11.3	10.3	9.5	8.9
60	0.228	17.0	15.1	13.6	12.3	11.3	10.4	9.7	
Orange (46)	10	0.119	8.9	7.9	7.1	6.5	5.9	5.5	5.1
	20	0.169	12.6	11.2	10.0	9.1	8.4	7.7	7.2
	30	0.207	15.4	13.7	12.3	11.2	10.3	9.5	8.8
	40	0.239	17.7	15.8	14.2	12.9	11.8	10.9	10.1
	50	0.267	19.8	17.6	15.9	14.4	13.2	12.2	11.3
60	0.293	21.7	19.3	17.4	15.8	14.5	13.4	12.4	
Maroon (52)	10	0.149	11	10	9	8	7	7	6
	20	0.210	16	14	12	11	10	10	9
	30	0.257	19	17	15	14	13	12	11
	40	0.296	22	20	18	16	15	14	13
	50	0.332	25	22	20	18	16	15	14
60	0.363	27	24	22	20	18	17	15	
Red (63)	10	0.218	16	14	13	12	11	10	9
	20	0.307	23	20	18	17	15	14	13
	30	0.376	28	25	22	20	19	17	16
	40	0.435	32	29	26	23	22	20	18
	50	0.486	36	32	29	26	24	22	21
60	0.532	39	35	32	29	26	24	23	
Blue (80)	10	0.351	26	23	21	19	17	16	15
	20	0.496	37	33	29	27	25	23	21
	30	0.608	45	40	36	33	30	28	26
	40	0.702	52	46	42	38	35	32	30
	50	0.785	58	52	47	42	39	36	33
60	0.859	64	57	51	46	43	39	36	
Yellow (95)	10	0.506	38	33	30	27	25	23	21
	20	0.715	53	47	42	39	35	33	30
	30	0.876	65	58	52	47	43	40	37
	40	1.009	75	67	60	54	50	46	43
	50	1.133	84	75	67	61	56	52	48
60	1.239	92	82	74	67	61	57	53	
Green (110)	10	0.686	51	45	41	37	34	31	29
	20	0.973	72	64	58	53	48	44	41
	30	1.186	88	78	70	64	59	54	50
	40	1.372	102	91	81	74	68	63	58
	50	1.531	114	101	91	83	76	70	65
60	1.681	125	111	100	91	83	77	71	
White (

Colored Disc Orifice Chart

B
Components
Liquid

22" Spacing

22" Spacing

22" Spacing

Orifice Color (Approx Size)	PSI	Gal/Min 28-0-0	MPH						
			4.0	4.5	5.0	5.5	6.0	6.5	7.0
Pink (24)	10	0.033	2.2	2.0	1.8	1.6	1.5	1.4	1.3
	20	0.046	3.1	2.8	2.5	2.3	2.1	1.9	1.8
	30	0.057	3.8	3.4	3.1	2.8	2.5	2.4	2.2
	40	0.065	4.4	3.9	3.5	3.2	2.9	2.7	2.5
	50	0.073	5.0	4.4	4.0	3.6	3.3	3.1	2.8
	60	0.081	5.4	4.8	4.3	4.0	3.6	3.3	3.1
Gray (30)	10	0.050	3.4	3.0	2.7	2.5	2.3	2.1	1.9
	20	0.072	4.8	4.3	3.9	3.5	3.2	3.0	2.8
	30	0.088	5.9	5.3	4.7	4.3	3.9	3.6	3.4
	40	0.101	6.8	6.1	5.4	5.0	4.5	4.2	3.9
	50	0.112	7.6	6.7	6.1	5.5	5.1	4.7	4.3
	60	0.124	8.4	7.4	6.7	6.1	5.6	5.1	4.8
Black (35)	10	0.070	4.7	4.2	3.8	3.4	3.1	2.9	2.7
	20	0.098	6.6	5.9	5.3	4.8	4.4	4.1	3.8
	30	0.120	8.1	7.2	6.5	5.9	5.4	5.0	4.6
	40	0.139	9.4	8.3	7.5	6.8	6.3	5.8	5.4
	50	0.156	10.5	9.3	8.4	7.6	7.0	6.5	6.0
	60	0.170	11.5	10.2	9.2	8.3	7.6	7.1	6.6
Brown (41)	10	0.094	6.3	5.6	5.1	4.6	4.2	3.9	3.6
	20	0.132	8.9	7.9	7.1	6.5	5.9	5.5	5.1
	30	0.162	10.9	9.7	8.7	8.0	7.3	6.7	6.2
	40	0.187	12.6	11.2	10.1	9.2	8.4	7.8	7.2
	50	0.209	14.1	12.5	11.3	10.3	9.4	8.7	8.1
	60	0.228	15.4	13.7	12.3	11.2	10.3	9.5	8.8
Orange (46)	10	0.119	8.1	7.2	6.5	5.9	5.4	5.0	4.6
	20	0.169	11.4	10.1	9.1	8.3	7.6	7.0	6.5
	30	0.207	14.0	12.4	11.2	10.2	9.3	8.6	8.0
	40	0.239	16.1	14.3	12.9	11.7	10.8	9.9	9.2
	50	0.267	18.0	16.0	14.4	13.1	12.0	11.1	10.3
	60	0.293	19.8	17.6	15.8	14.4	13.2	12.2	11.3
Maroon (52)	10	0.149	10	9	8	7	7	6	6
	20	0.210	14	13	11	10	9	9	8
	30	0.257	17	15	14	13	12	11	10
	40	0.296	20	18	16	15	13	12	11
	50	0.332	22	20	18	16	15	14	13
	60	0.363	24	22	20	18	16	15	14
Red (63)	10	0.218	15	13	12	11	10	9	8
	20	0.307	21	18	17	15	14	13	12
	30	0.376	25	23	20	18	17	16	15
	40	0.435	29	26	23	21	20	18	17
	50	0.486	33	29	26	24	22	20	19
	60	0.532	36	32	29	26	24	22	21
Blue (80)	10	0.351	24	21	19	17	16	15	14
	20	0.496	34	30	27	24	22	21	19
	30	0.608	41	36	33	30	27	25	23
	40	0.702	47	42	38	34	32	29	27
	50	0.785	53	47	42	39	35	33	30
	60	0.859	58	52	46	42	39	36	33
Yellow (95)	10	0.506	34	30	27	25	23	21	20
	20	0.715	48	43	39	35	32	30	28
	30	0.876	59	53	47	43	39	36	34
	40	1.009	68	61	54	50	45	42	39
	50	1.133	76	68	61	56	51	47	44
	60	1.239	84	74	67	61	56	51	48
Green (110)	10	0.686	46	41	37	34	31	28	26
	20	0.973	66	58	53	48	44	40	38
	30	1.186	80	71	64	58	53	49	46
	40	1.372	93	82	74	67	62	57	53
	50	1.531	103	92	83	75	69	64	59
	60	1.681	113	101	91	83	76	70	65
White (125)	10	0.867	59	52	47	43	39	36	33
	20	1.230	83	74	66	60	55	51	47
	30	1.504	102	90	81	74	68	62	58
	40	1.735	117	104	94	85	78	72	67
	50	1.938	131	116	105	95	87	81	75
	60	2.124	143	127	115	104	96	88	82
Lime Green (156)	10	1.372	93	82	74	67	62	57	53
	20	1.947	131	117	105	96	88	81	75
	30	2.381	161	143	129	117	107	99	92
	40	2.752	186	165	149	135	124	114	106
	50	3.071	207	184	166	151	138	128	118
	60	3.363	227	202	182	165	151	140	130

Rates are estimates based on 28-0-0 (10.7 lb/gal at 70° F)


36" Spacing

36" Spacing

36" Spacing

Orifice Color (Approx Size)	PSI	Gal/Min 28-0-0	MPH						
			4.0	4.5	5.0	5.5	6.0	6.5	7.0
Pink (24)	10	0.033	1.4	1.2	1.1	1.0	0.9	0.8	0.8
	20	0.046	1.9	1.7	1.5	1.4	1.3	1.2	1.1
	30	0.057	2.3	2.1	1.9	1.7	1.6	1.4	1.3
	40	0.065	2.7	2.4	2.2	2.0	1.8	1.7	1.5
	50	0.073	3.0	2.7	2.4	2.2	2.0	1.9	1.7
	60	0.081	3.3	3.0	2.7	2.4	2.2	2.0	1.9
Gray (30)	10	0.050	2.1	1.8	1.7	1.5	1.4	1.3	1.2
	20	0.072	3.0	2.6	2.4	2.2	2.0	1.8	1.7
	30	0.088	3.6	3.2	2.9	2.6	2.4	2.2	2.1
	40	0.101	4.2	3.7	3.3	3.0	2.8	2.6	2.4
	50	0.112	4.6	4.1	3.7	3.4	3.1	2.9	2.6
	60	0.124	5.1	4.5	4.1	3.7	3.4	3.1	2.9
Black (35)	10	0.070	2.9	2.6	2.3	2.1	1.9	1.8	1.6
	20	0.098	4.1	3.6	3.2	2.9	2.7	2.5	2.3
	30	0.120	5.0	4.4	4.0	3.6	3.3	3.1	2.8
	40	0.139	5.7	5.1	4.6	4.2	3.8	3.5	3.3
	50	0.156	6.4	5.7	5.1	4.7	4.3	4.0	3.7
	60	0.170	7.0	6.2	5.6	5.1	4.7	4.3	4.0
Brown (41)	10	0.094	3.9	3.4	3.1	2.8	2.6	2.4	2.2
	20	0.132	5.4	4.8	4.4	4.0	3.6	3.3	3.1
	30	0.162	6.7	5.9	5.3	4.9	4.5	4.1	3.8
	40	0.187	7.7	6.8	6.2	5.6	5.1	4.7	4.4
	50	0.209	8.6	7.7	6.9	6.3	5.7	5.3	4.9
	60	0.228	9.4	8.4	7.5	6.8	6.3	5.8	5.4
Orange (46)	10	0.119	4.9	4.4	3.9	3.6	3.3	3.0	2.8
	20	0.169	7.0	6.2	5.6	5.1	4.6	4.3	4.0
	30	0.207	8.5	7.6	6.8	6.2	5.7	5.3	4.9
	40	0.239	9.9	8.8	7.9	7.2	6.6	6.1	5.6
	50	0.267	11.0	9.8	8.8	8.0	7.3	6.8	6.3
	60	0.293	12.1	10.7	9.7	8.8	8.1	7.4	6.9
Maroon (52)	10	0.149	6	5	5	4	4	4	4
	20	0.210	9	8	7	6	6	5	5
	30	0.257	11	9	8	8	7	7	6
	40	0.296	12	11	10	9	8	8	7
	50	0.332	14	12	11	10	9	8	8
	60	0.363	15	13	12	11	10	9	9
Red (63)	10	0.218	9	8	7	7	6	6	5
	20	0.307	13	11	10	9	8	8	7
	30	0.376	16	14	12	11	10	10	9
	40	0.435	18	16	14	13	12	11	10
	50	0.486	20	18	16	15	13	12	11
	60	0.532	22	20	18	16	15	14	13
Blue (80)	10	0.351	14	13	12	11	10	9	8
	20	0.496	20	18	16	15	14	13	12
	30	0.608	25	22	20	18	17	15	14
	40	0.702	29	26	23	21	19	18	17
	50	0.785	32	29	26	24	22	20	19
	60	0.859	35	32	28	26	24	22	20
Yellow (95)	10	0.506	21	19	17	15	14	13	12
	20	0.715	29	26	24	21	20	18	17
	30	0.876	36	32	29	26	24	22	21
	40	1.009	42	37	33	30	28	26	24
	50	1.133	47	42	37	34	31	29	27
	60	1.239	51	45	41	37	34	31	29
Green (110)	10	0.686	28	25	23	21	19	17	16
	20	0.973	40	36	32	29	27	25	23
	30	1.186	49	43	39	36	33	30	28
	40	1.372	57	50	45	41	38	35	32
	50	1.531	63	56	51	46	42	39	36

Dual Metering Tube Plumbing Kits with Dual Check Valve

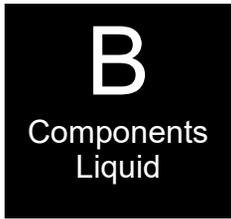

SurePoint dual metering tube plumbing kits are a great way to plumb a planter to apply fertilizer. They'll also work on other implements when applying fertilizer or other chemicals.

These plumbing kits will contain everything you need to distribute fertilizer from the flowmeter outlet down to the ground application device of your choice (not included).

These instructions will show you where all the pieces go. It will provide guidance on how much metering tube to use. There are some optional fittings included in each plumbing kit. These instructions will show you where and why you'd want to use the optional pieces.

The dual check valve assembly is a key piece in the dual metering tube design. In addition to a check valve to stop fertilizer from draining when the system is shut off, **each check valve has an on/off valve on top of it. These on / off valves allow the operator to turn on only tube 1, only tube 2, or both tube 1 and 2.** This provides for three different application ranges, which is especially helpful to having a versatile application system.

Dual Advantage of Dual Metering Tube

Metering tube provides a larger passage way diameter than a comparable orifice. For a 5 GPA rate on 30" rows, a size 0.046" orifice would be used. For the same rate a 0.110" meter tube that is 8' long would be used. This 8' tube with more than twice the diameter creates a fertilizer system resistant to plugging while providing excellent row to row distribution.

By using two metering tubes, the fertilizer system can handle Black Label ZN (or most other liquid solutions) and provide the proper system pressure as the fertilizer properties change due to temperature, mixtures and other factors.




Field Operation of Dual Metering Tube - Dual Check Valve System

The dual metering tube allows for three application rate ranges. Some products have a widely variable viscosity. Therefore, based on temperature, tank mixing and fertilizer batch, the best tube to use will change.

SurePoint recommends you start with the large tube ON only. This is the middle size and is a good starting point. Conduct a test using the test speed mode to determine your system pressure. Recommended pressure is between 8- 30 PSI. If pressure is below 8 psi, some check valves may not open and row to row distribution will be uneven. If pressure is too high the pump may be working harder than is necessary.

Start with large tube ON, small tube OFF:

- **Pressure below 10 PSI: Turn large tube OFF and small tube ON.**
- **Pressure over 30 PSI: Turn BOTH tubes ON.**

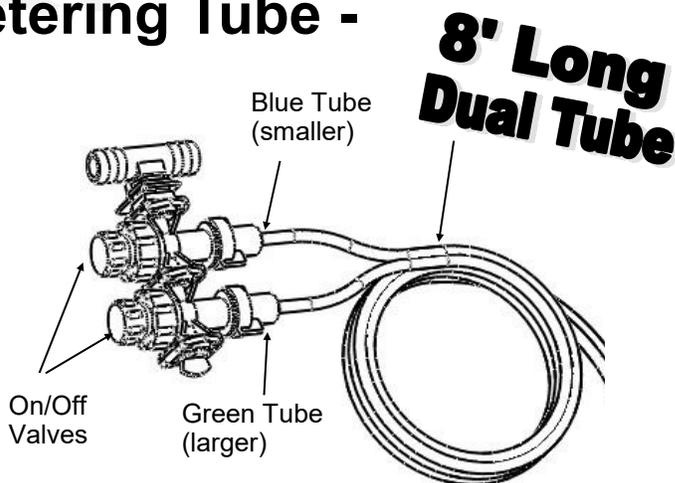

	GPA on 30" rows (approx, will vary)
Blue Tube	1.5 - 3
Green Tube	3 - 6
Blue & Green Tube	6 - 10
Minimum Recommended flow for Blue Tube (8 ft)	4 - 5 oz/min

Other size tubes are available if needed for different application rates.

** Ultra Low Rate Application –For rates from 2-5 oz/min/row use a 12 foot length of metering tube. To calculate oz/min/row: $Oz/min/row = (GPA \times MPH \times spacing \text{ (inches)}) \div 46.4$



Dual Check Valve Plumbing Diagram

4 Row Planter Shown, add rows as necessary


136-04-200400, Dual 4 PSI check valve with 1/4" QC caps and 3/8" FPT inlet

101-075075038-HBT-M-W 3/4" HB x 3/4" HB x 3/8" MPT Tee

113-19-025025025 Y Divider - 1/4" QC

Dual Metering Tube - 8 feet long


101-038075-90-W, 3/8" MPT x 3/4" HB - 90 degree

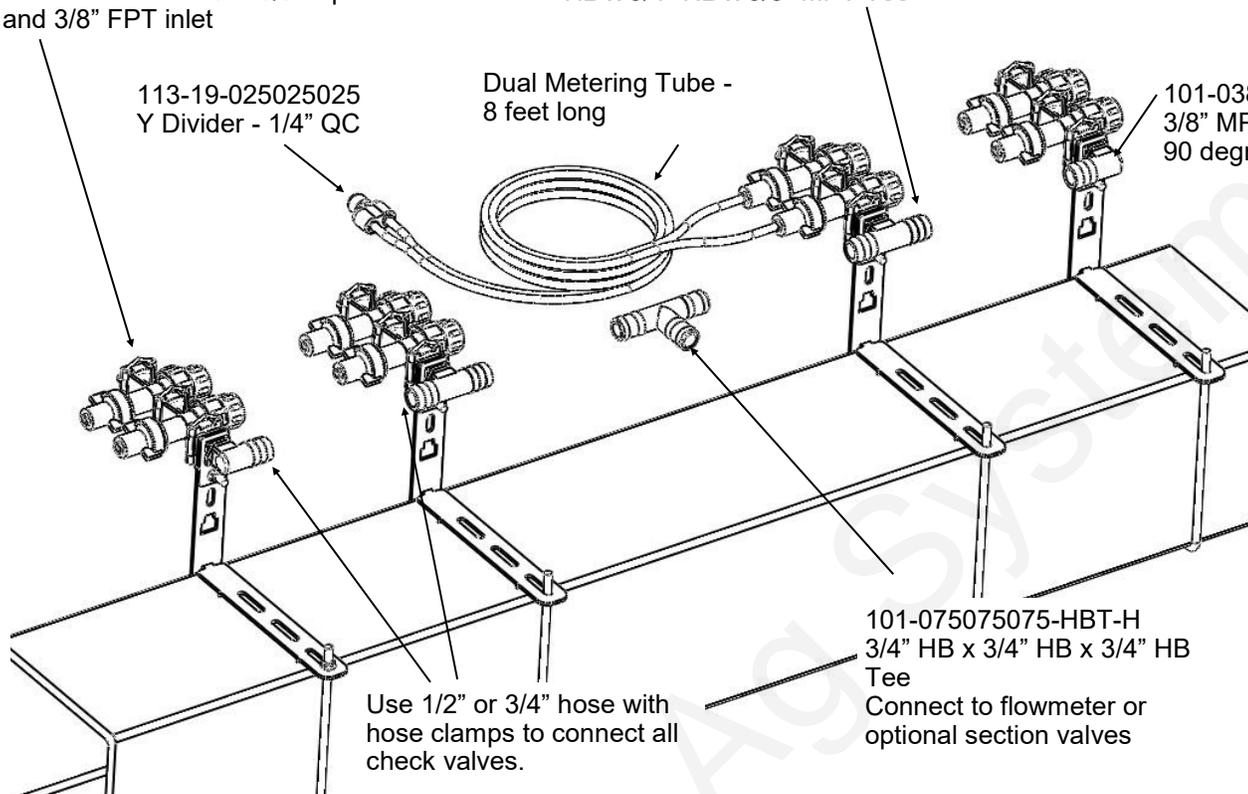

This is a general diagram showing the dual check valve assembly mounted on a planter toolbar. The check valve and bracket are very flexible in their mounting. The check valve can mount behind, directly over, or in front of the toolbar. The check valve can be put in the bracket facing up & down or sideways (shown). In addition the steel bracket could be rotated 90 degrees and clamp around the bar. The multiple slots in the bracket are used to mount to any tube 7x7 inches or smaller.

Sectional Plumbing Diagram with Dual Check Valves

12 Row Planter Shown

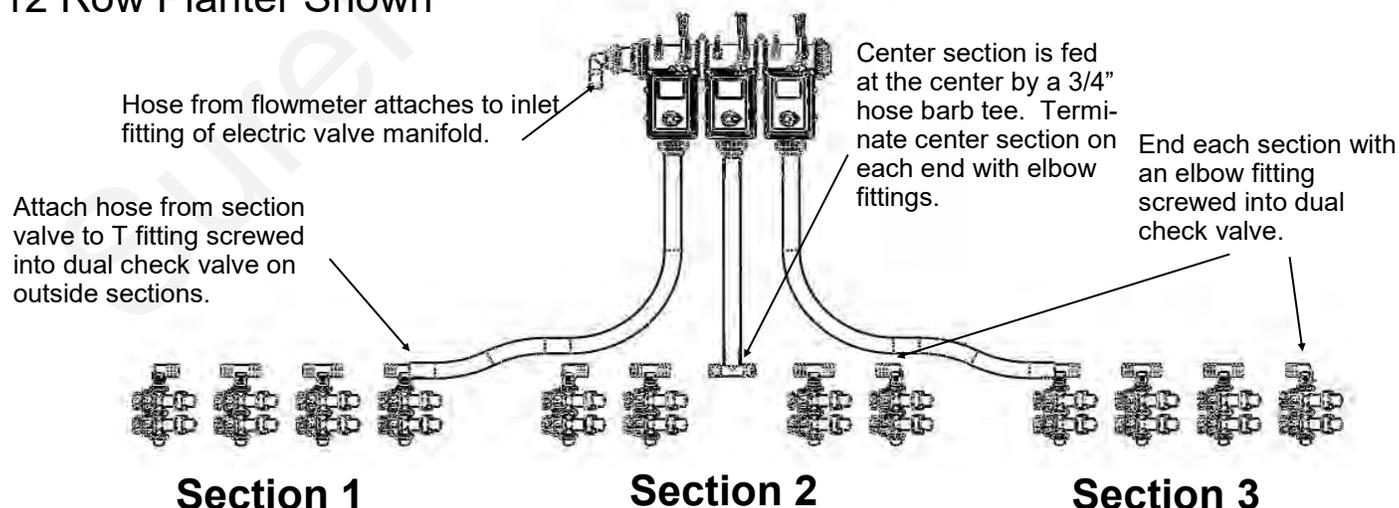


For a 2 section plumbing system, omit the center section and plumb similar to the outside 2 sections.

Dual Check Valve Assembly Steps



B
Components
Liquid

Follow these steps to mount each check valve to the steel bracket.


1. Screw the 3/8" MPT x 3/4" HB tee or elbow into the check valve using blue thread sealer. Orient the hose barb to run the 3/4" hose down the planter toolbar.
2. Insert the check valve into the "C" notch in the end of the bracket, according to how you want the check valve to be mounted on your planter. Orient the wire clips up or to the side for easiest access.
3. Slide the small "C" clamp bracket around the check valve to lock it in place.
4. Install the 1/4" carriage bolt and flange nut to secure the "C" clamp plate around the check valve.
5. Now, mount the check valve on the bar. Hold the check valve and long bracket assembly on the toolbar. Slide the tab on the front of the short bracket into the upper or lower notch on the long bracket.
6. Slide the L bolt into the appropriate slots on the brackets for your tube size. Tighten the 1/4" flange nuts to hold the bracket in place.

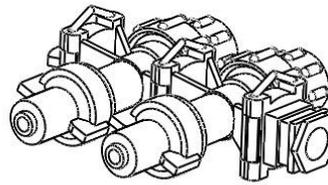

Clamp Bracket

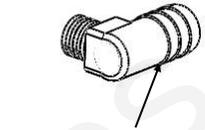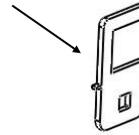

Elbow at end of section, Tee in mid-locations.

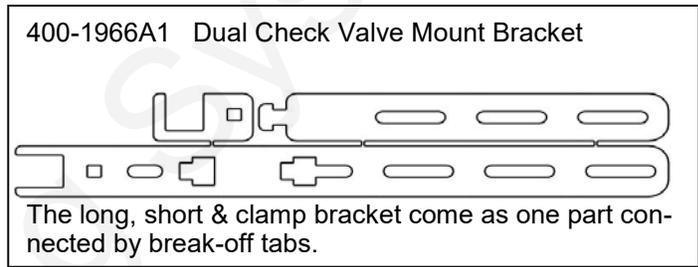

Check Valve Mounting Options

The dual check valve mounting bracket is very flexible to fit many different planter configurations. Three options are shown here to illustrate some of the possibilities.

Example 1. Use the long bracket on the top of a bar. The check valve is mounted vertically. The liquid supply hose is ran directly on the front side of the bar. The U-bolt is placed in slots to clamp on a 4x6 inch tube.

Example 2. Use the long bracket on the rear of a bar. The check valve is mounted over the top of the bar. The supply line would run above and behind the bar. The short bracket is placed in the notch to mount the check valve closer to the bar.

Example 3. Use the long bracket on the front of a 3x7 bar (vacuum tube on some planters). Mount the check valve hanging forward of the bar. The supply line will run directly over the bar. The excess bolt and bracket length can be cut off.

Short Bracket


Long Bracket

311-0408000800-05
1/4" L Bolt

Connection to Keeton Seed Firmer, Rebounder Seed Covers or through thin wall stainless steel tubes

1. Mount the Keeton Seed Firmer or Rebounder Seed Cover.
2. Route the tube included in the above kit as instructed.
3. Attach the 1/4" tube to the 1/4" QC Y divider fitting.
4. Zip all tubing to the planter and row unit in as many locations as possible.

For thin wall stainless steel tubes, you can push the 1/4" black tubing all the way through the stainless steel tube so fertilizer will run directly from the tubing onto the ground.

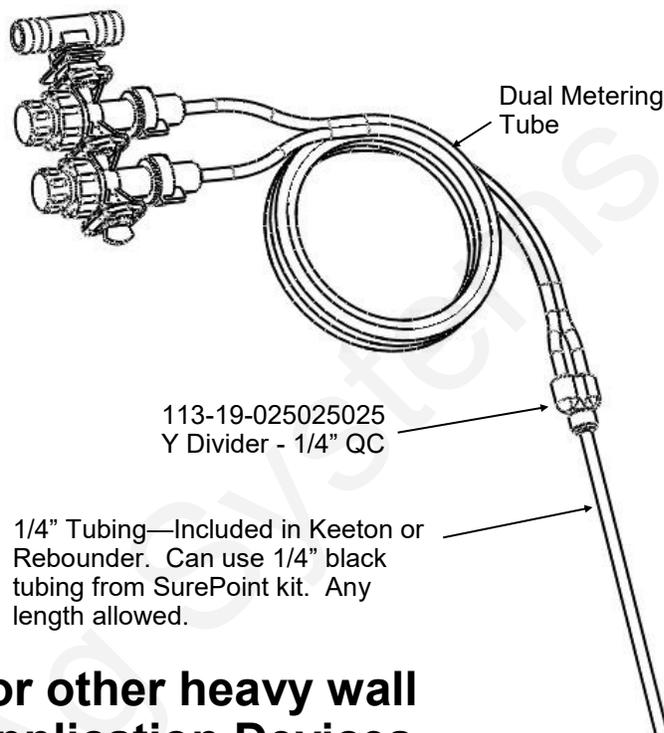


Connection to Totally Tubular or other heavy wall Stainless Steel Tube Ground Application Devices


When using a 3/8" OD stainless steel tube to apply fertilizer to the ground, there are two options for the delivery tube plumbing. If the tube ID is less than 1/4" (tubing will not fit inside tube) this attachment method must be used. The description following is for Option 1. See bottom right picture for Option 2.

1. Use the 1/4" x 3/8" QC fitting shown. Push the 3/8" end onto the stainless steel tube. (Hint: if the fitting slips off the stainless steel tube, use sandpaper or a file to roughen the end of the tube slightly)
2. Use a short piece of 1/4" black tubing to connect the Y fitting to the reducer fitting on the stainless steel tube.
3. Zip all tubing to the planter and row unit in as many locations as possible.

Option 1: QC Fitting attaches to SS Tube

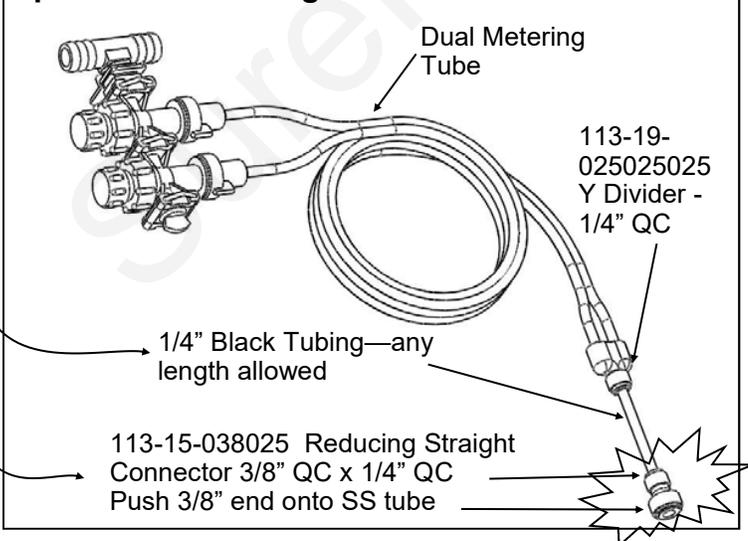

Option 2: 3/8" Hose attaches to SS Tube

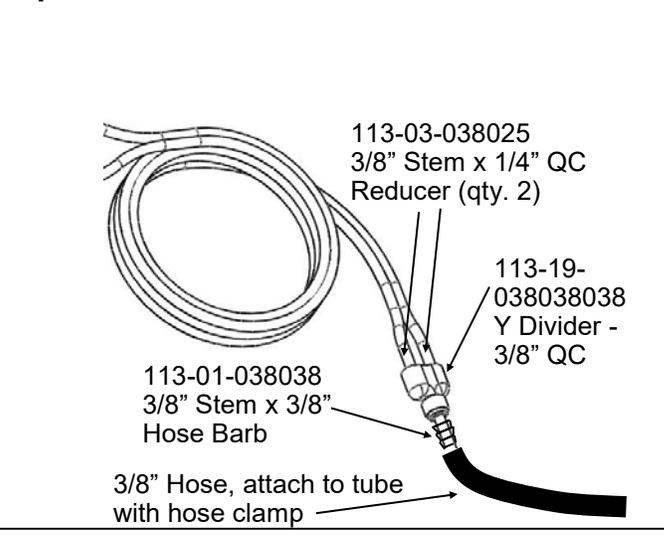

Electric Pump (Tower) Systems--10-40 PSI (Tubes 8' unless noted)

Low Viscosity (28-0-0 approx 10.7 lb/gal)				Medium-Low Viscosity (32-0-0 approx 11.0 lb/gal)			
	oz/min	mL/min	gal/min		oz/min	mL/min	gal/min
Tube Color	Flow Range	Flow Range	Flow Range	Tube Color	Flow Range	Flow Range	Flow Range
Gray	3.5-7.4	105-220	0.03 - 0.06	Gray	2.5-5.5	74-163	0.02-0.04
Purple	6-14.4	175-415	0.05 - 0.11	Purple	4.1-11.1	121-328	0.03-0.09
Brown	8-18.2	235-540	0.06 - 0.14	Brown	5.7-14.3	170-425	0.04-0.11
Blue	10-22.6	295-670	0.08 - 0.18	Blue	7.5-18	220-530	0.06-0.14
Green	18-40.2	530-1190	0.14 - 0.31	Green	14-33.2	415-980	0.11-0.26
Tan	25-55	740-1625	0.19 - 0.43	Tan	20-46.4	590-1370	0.16-0.36
Orange	44-93.6	1300-2770	0.34 - 0.73	Orange	36-83	1065-2455	0.28-0.65
Yellow	55-114.4	1625-3380	0.43 - 0.89	Yellow	44-100	1300-2955	0.34-0.78
Black	72-152	2130-4495	0.56 - 1.19	Black	60-129	1775-3815	0.47-1.01
5' Tan	33-73	975-2160	0.26 - 0.57	5' Tan	27-63	800-1865	0.21-0.49
5' Orange	57-121	1685-3580	0.45 - 0.95	5' Orange	49-113	1450-3340	0.38-0.88
5' Yellow	70-145	2070-4290	0.55 - 1.13	5' Yellow	59-134	1745-3965	0.46-1.05
5' Black	95-200	2810-5915	0.74 - 1.56	5' Black	80-172	2365-5085	0.63-1.34

10-40 PSI 60°F

Medium Viscosity (Starter, N-P Blend, approx 11.2 lb/gal)				High Viscosity (10-34-0 approx 11.6 lb/gal)			
	oz/min	mL/min	gal/min		oz/min	mL/min	gal/min
Tube Color	Flow Range	Flow Range	Flow Range	Tube Color	Flow Range	Flow Range	Flow Range
Gray	1.5-3.7	45-110	0.01-0.03	Gray			
Purple	2.2-7.8	65-230	0.02-0.06	Purple	1.0-2.8	30-83	0.008-0.02
Brown	3.5-10.4	105-310	0.03-0.08	Brown	1.4-4.2	41-124	0.011-0.03
Blue	5-13.7	150-405	0.04-0.11	Blue	1.8-5.5	53-163	0.014-0.04
Green	9.5-26	280-770	0.07-0.20	Green	2.6-9.4	77-280	0.02-0.07
Tan	14-37.4	415-1105	0.11-0.29	Tan	4-14.8	120-440	0.03-0.12
Orange	27-72	800-2130	0.21-0.56	Orange	9-30	265-885	0.07-0.23
Yellow	33-85	975-2515	0.26-0.66	Yellow	13-42	385-1240	0.10-0.33
Black	48-106	1420-3135	0.38-0.83	Black	18-55	530-1625	0.14-0.43
5' Tan	20-53	590-1565	0.16-0.41	5' Tan	6-22.2	165-655	0.04-0.17
5' Orange	38-101	1125-2985	0.30-0.79	5' Orange	13-43	380-1270	0.10-0.34
5' Yellow	46-118	1360-3490	0.36-0.92	5' Yellow	18-58	540-1715	0.14-0.45
5' Black	67-148	1980-4375	0.52-1.16	5' Black	25-76	740-2250	0.20-0.59

10-40 PSI 60°F--For 10-34-0 select a tube with additional capacity for cold weather.

Water (8.34 lb/gal)			
	oz/min	mL/min	gal/min
Tube Color	Flow Range	Flow Range	Flow Range
White	2.5-5.5	75-165	0.02-0.04
Gray	5.8-11.6	170-340	0.045-0.09
Purple	10-20	295-590	0.08-0.16
Brown	12.5-25	370-740	0.10-0.20
Blue	17.5-35	520-1040	0.14-0.28
Green	26-52	770-1540	0.20-0.40
Tan	34-68	1005-2010	0.27-0.54
Orange	60-120	1775-3550	0.47-0.94
Yellow	75-150	2220-44400	0.59-1.18

These charts are typical flow rates from 10 to 40 PSI.

The capacity of electric pumps declines as the pressure increases. If total pump output is low enough, they can operate at 50 psi or more.

These charts are designed for typical N-P fertilizers. Suspension, granular, and/or clay/based products may not follow these charts.

These charts are for product at 60° F. Products will be thicker and pressure will be higher at lower temperatures (esp 10-34-0). *MAW*

Pro 700 AccuControl Field-IQ™ Rate and Section Control Module

SurePoint Fertilizer Systems begin at the AccuControl Rate and Section Control Module. The picture below shows this control module. You will need to purchase this module from your Case IH dealer. You will also need to purchase an unlock code for your Pro 700 display to enable AccuControl functions.

The rate controller has two harness connections. The first is the connection to the Case IH wiring harness that connects to the in-cab display. The second is where the SurePoint Fertilizer System harnesses begin. The following pages show system diagrams for single section, 2-6 section and 7-10 section configurations. Detailed harness drawings follow for information and troubleshooting.

Instructions for setting up the AccuControl on the in cab display are in Section F. Detailed screen shots of the Pro 700 display are included showing exactly what settings are required and recommended for SurePoint Fertilizer Systems.



Trimble Field-IQ Rate and Section Control Module


18-Pin Connector-
Connect to Case IH
Harness back to in-cab
display

30-Pin Connector-
Connect to SurePoint
Harness

SurePoint Harness
213-02-3764Y2

Aux Master/Dump Valve (12-pin Deutsch connector) on 213-02-3764Y2 plugs into Aux I/O (12-pin Deutsch connector) that comes from 18-pin connector harness. (Only needed if using Aux Master/ Dump Valve.)

2-pin Power
Connector
(P5)
-Connect to
SurePoint
Harness

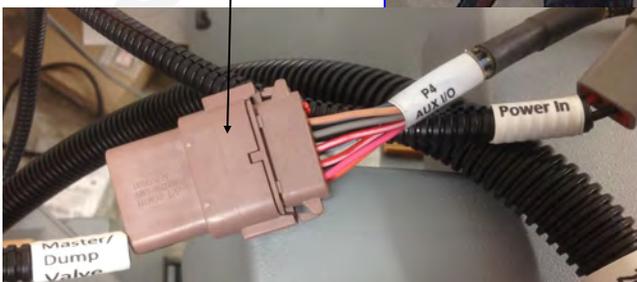


Case IH AFS AccuControl Rate and Section Control Module

D

Wiring & Elec

This chart shows you the output functions by pin location on the AccuControl Rate and Section Control Module. Use this information to verify if the AccuControl system is providing the correct output. If the module is not providing the correct output, contact your Case IH dealer to repair the problem. Also review any applicable settings on the display to verify the system is properly set up.

AccuControl (Trimble Field-IQ)
Rate and Section Control Module

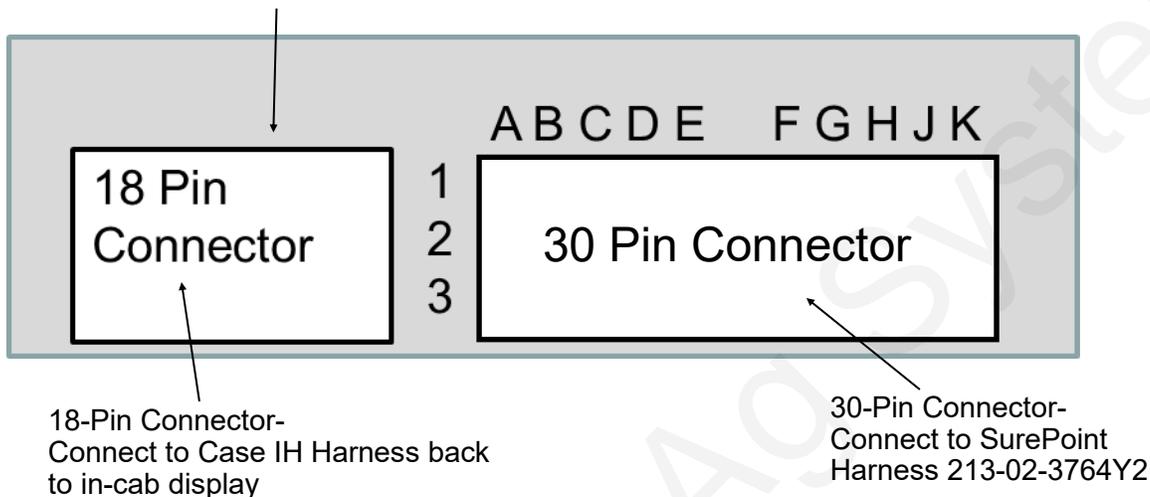


Common Troubleshooting:

PWM Signal to Pump: Pins E1 to E2 should have 0-12 volts to energize the EPD (Electric Pump Driver) Module. Use manual mode to increase signal. Should get up to 12 volts after holding increase button.

Flowmeter Tap Test: Pins C2 and C3 are Flow Ground and Signal. If no flow is registering on the display, you can tap between these two pins with a short wire. This produces a pulse. The display should indicate a flow when this is done rapidly. *(Note: To help register flow for the tap test, change the flowmeter calibration to 10, so it will show a flow with fewer taps. Be sure to reset the flow cal to the proper number after the test.)*

Case IH AFS AccuControl PWM Wiring Schematic Single Section for Tower Electric Pump Liquid Application

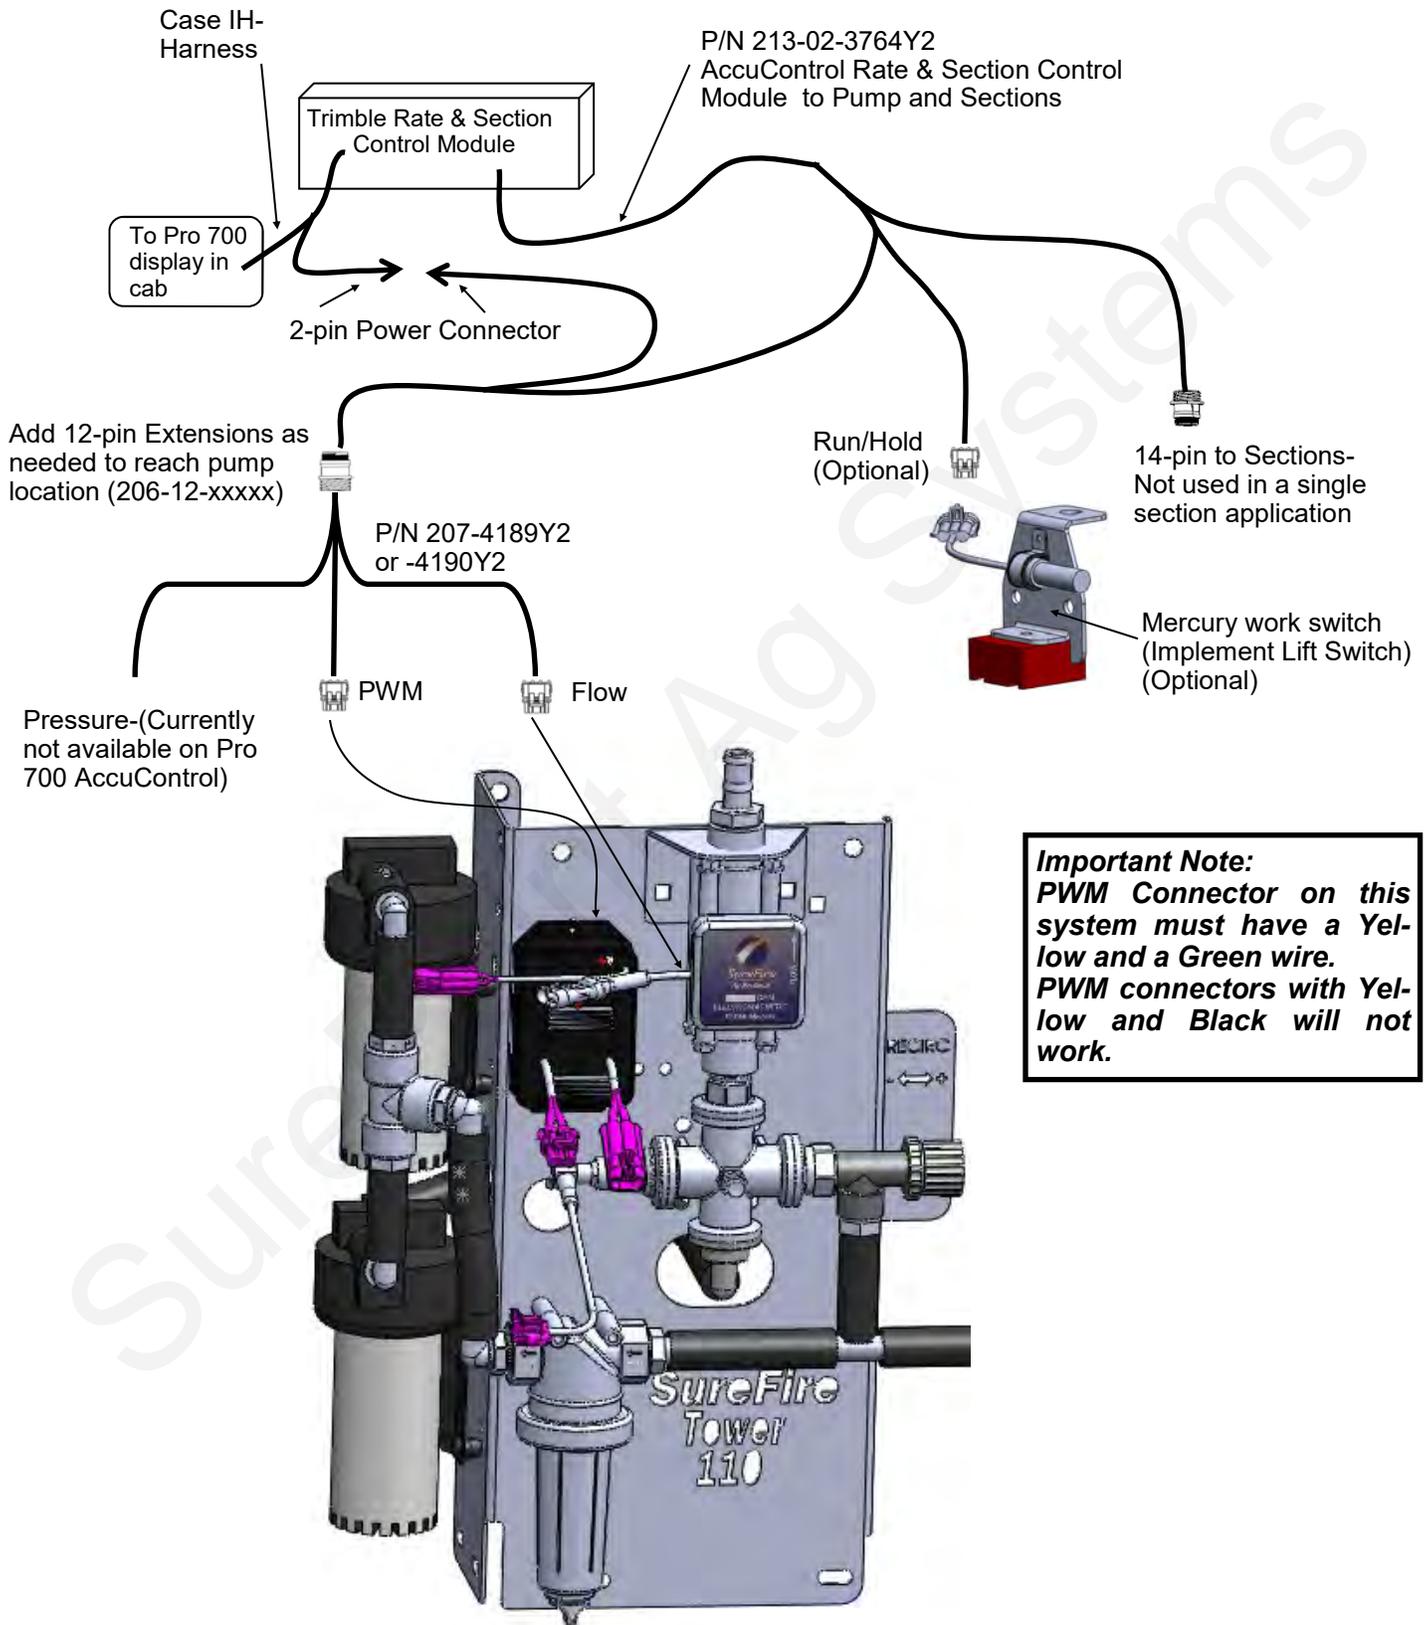

40 Amp PWM EPD

(Pulse Width Modulated Electric Pump Driver)

Item Number: 205-19024 with Anderson connectors
(replaces 205-18385 with 480 MP connectors)



The Electric Pump Driver powers 1 or 2 electric pumps by providing a pulse width modulated signal to control pump speed. It needs to have a power connection and wiring capable of carrying up to 40 amps of current. **It must be connected directly to the tractor battery.** SurePoint recommends 8 gauge wire (or heavier) if extending harnesses in the field.

PWM Connection on pump harness
(Must have yellow and green wires)

Beginning in late 2015, these four connectors are Anderson connectors


Plug in 1 pump directly OR plug in 2 pumps with "Y" cable PN 205-3116Y1.

Troubleshooting Tip:


If the pumps won't run, connect the power and pump connector directly together to give pumps full 12 volts directly from battery. This will tell you if the pumps are the problem or if something else is wrong. The pumps will be running at full speed, so don't leave them connected this way for long.

Use the test connector on the line from the battery to test the voltage under load.

The most common issue with the EPD will be a low voltage condition (under load) delivered to the EPD from the battery. Voltage drop occurs anytime current is moved through a wire. A low-voltage (12 v) system with long runs (60-80 feet) may have unacceptable voltage drops if any part of the system is weak or the load is high. This could be bad (corroded, weak, loose or burnt) connectors (at the battery, at the hitch, and at the EPD), too small of wire used (smaller wire equals more voltage drop), low source voltage, and heavy load. Any or all of these may contribute to a low voltage condition under load that may shut down the processor in the EPD module. This will be indicated by 4 quick flashes of the red light, followed by a short pause. Unplug the power-in connector to reset the EPD.

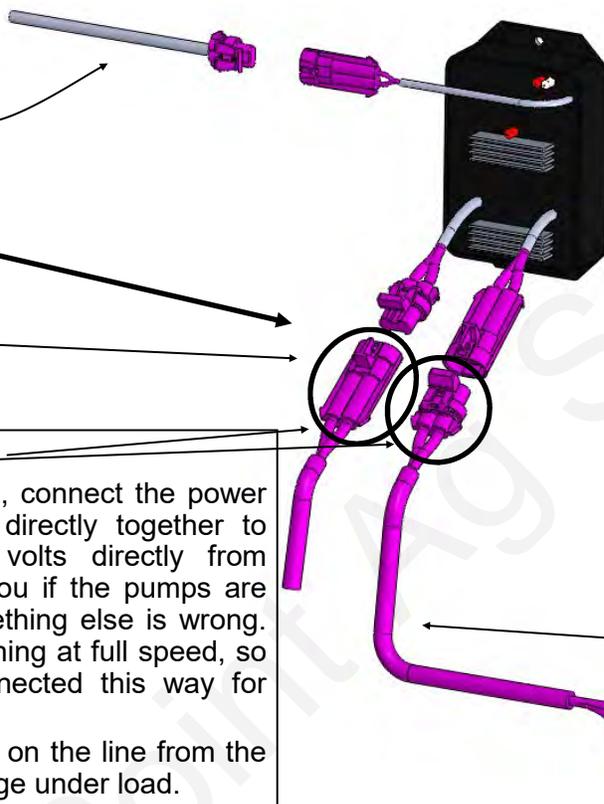

205-19024

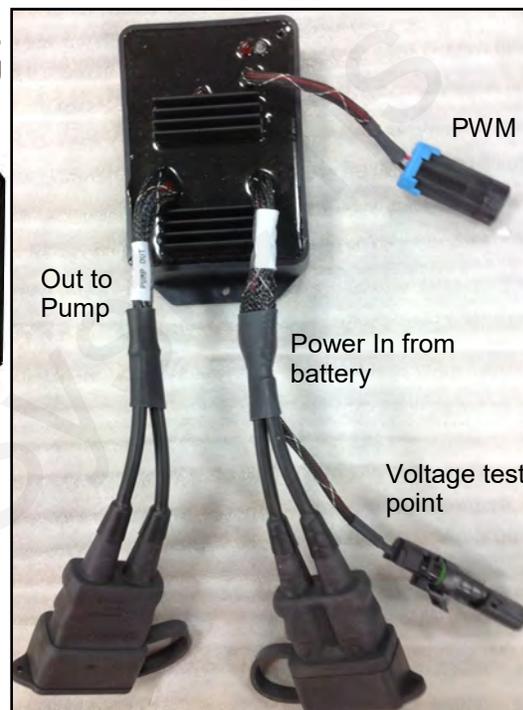

EPD Power Harness PN 205-3118Y1 (20 feet) - **connect to tractor battery.** This is 6 AWG wire.

40 Amp in-line fuse

Use EPD **Power Harness Extensions** as needed (These have Anderson Connectors)

Part Number	Description	Wire Size
206-02-3120Y1	1' Extension	10 gauge
206-02-3121Y1	5' Extension	10 gauge
206-02-3122Y1	10' Extension	8 gauge
206-02-3123Y1	20' Extension	8 gauge
206-02-3124Y1	30' Extension	30' and longer—6 gauge
206-02-3125Y1	40' Extension	
206-02-3126Y1	50' Extension	
206-02-3127Y1	60' Extension	
206-02-3128Y1	2' Anderson Ext w/ Power Switch-8 AWG	

SurePoint recommends a single long extension harness as multiple connectors will reduce voltage, increase current and hurt performance of your electric pump system.



Implement Lift Switch for Field-IQ™ (Mercury Run/Hold Switch)




The Mercury Run/Hold Switch turns liquid application on and off automatically when the implement is raised or lowered. The switch is mounted on a component that rotates when the implement is raised and lowered. The switch is attached to a magnetic base for easy mounting to any metal part of your tractor hitch or implement.

For mounted 3-point equipment:

- Mount the switch on the tractor 3 point arms.
- See the pictures below for switch orientation in run and hold positions.
- Connect the switch to the Run/Hold Switch connector on Harness 213-02-3764Y2.

For hitch drawn implements:


- Mount the switch on a wheel frame that rotates as it lifts the wheels up and down to raise and lower the implement.
- See the pictures below for switch orientation in run and hold positions.
- Connect the switch to the Run/Hold Switch connector on Harness 213-02-3764Y2.

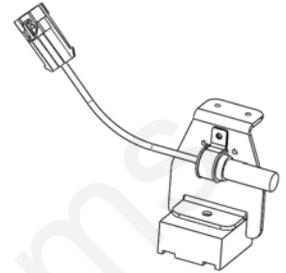

Run/Hold Switch Logic

How to Adjust:

If your controller is turning off product application before or after you want, tilt the switch. If it turns off after you want when lifting the implement, tip more to the HOLD position. If product application should begin sooner when you lower the implement, tip more to the RUN position. You can adjust the switch by moving the magnet or by loosening the screw and rotating the mercury switch.

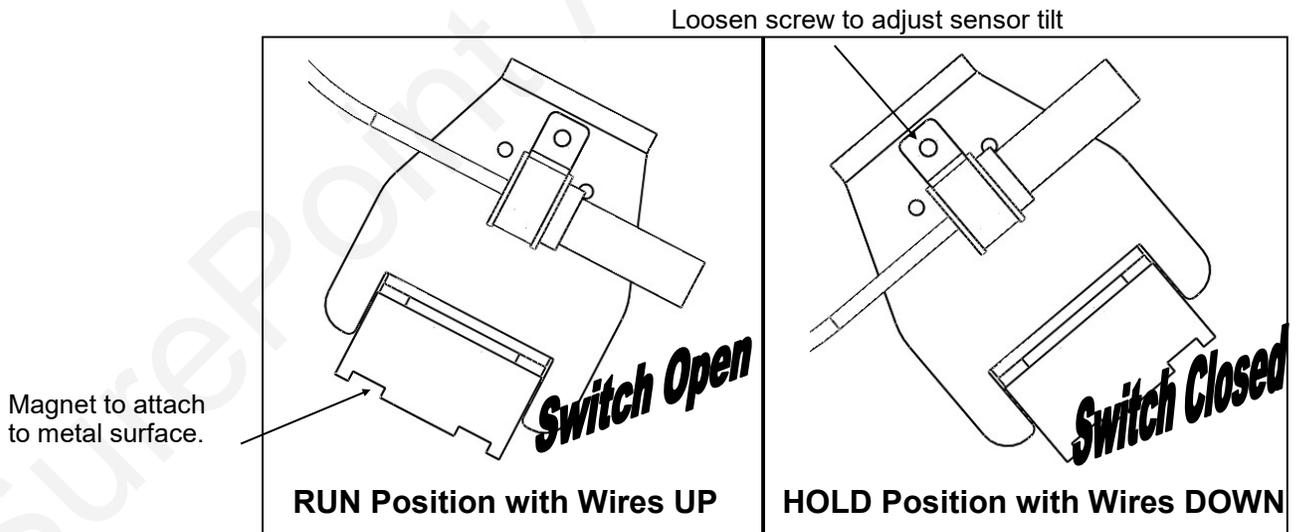

How to Test:

To test the run / hold mercury switch you will need a volt meter. Set the meter to test continuity (or ohms). With the wires down, you should have continuity between the two pins in the connector. With the wires up, the switch should be open (no continuity).

213-02-3764Y2

Trimble Field IQ Adapter Cable 30-pin to 12-pin Product and 14-pin Sections

Wire 18AWG unless otherwise specified

30-pin Cinch Connector



+12V	A1
+12V	B1
+ 5V	C1
Impl Switch 5V	D1
Servo +/PWM	E1
Section 5	F1
Section 4	G1
Section 3	H1
Section 2	J1
Section 1	K1
Pressure 1 Signal	A2
Pressure 2 Signal	B2
Flow Signal	C2
Impl Switch Signal	D2
Servo -/PWM	E2
Section 10	F2
Section 9	G2
Section 8	H2
Section 7	J2
Section 6	K2
GND	A3
GND	B3
Flow GND	C3
	D3
	E3
	F3
GND	G3
POWER	H3
Section 12	J3
Section 11	K3

POWER IN

2 Pin Connector – Deutsch DTP04-2P Male



GND	1
+12VDC	2

Aux/Dump Valve Signal
12 Pin Connector
Deutsch DTM04-12P



1	PNK
---	-----

Run/Hold



A	Imp Sw Signal
B	
C	Imp Sw 5V

Dust Cap



SECTIONS 1-6

14-pin Deutsch HDP24-18-14PE



A	HC PWR 1
B	HC PWR 2
C	HC GND 1
D	HC GND 2
E	PWM 1 (+)
F	PWM 1 (-)
G	Pressure 1
H	AUX/Dump Valve
J	Sect 1
K	Sect 2
L	Sect 3
M	Sect 4
N	Sect 5
P	Sect 6

PUMP

12-Pin Deutsch Female DT06-12SA



1	+12V DC
2	GND
3	Flow Signal 1
4	Pressure 1
5	PWM (+)
6	PWM (-)
7	
8	
9	
10	
11	Section 1
12	Section 2

SECTIONS 7-12

14-pin Deutsch HDP24-18-14PE




A	HC PWR 1
B	HC PWR 2
C	HC GND 1
D	HC GND 2
E	PWM 1 (+)
F	PWM 1 (-)
G	Pressure 2
H	AUX/Dump Valve
J	Sect 7
K	Sect 8
L	Sect 9
M	Sect 10
N	Sect 11
P	Sect 12

Part No:	213-02-3764Y2	Drawn By:	Mark Wolters		
Description:	Trimble Field IQ Adapter Cable 30-pin to 12-pin Product and 14-pin Sections	Last Edit Date:	10/12/2018	Revision	A-02
Copyright 2017 SureFire Ag Systems, Reproduction or other use of drawing without express written permission from SureFire Ag Systems is forbidden		25			

207-4189Y1

Final Cable for Tower With 1-2 Section Valves (pwm, flow, pres., sec 1, sec 2, fill flow)

**Wire 18AWG
unless otherwise
specified**

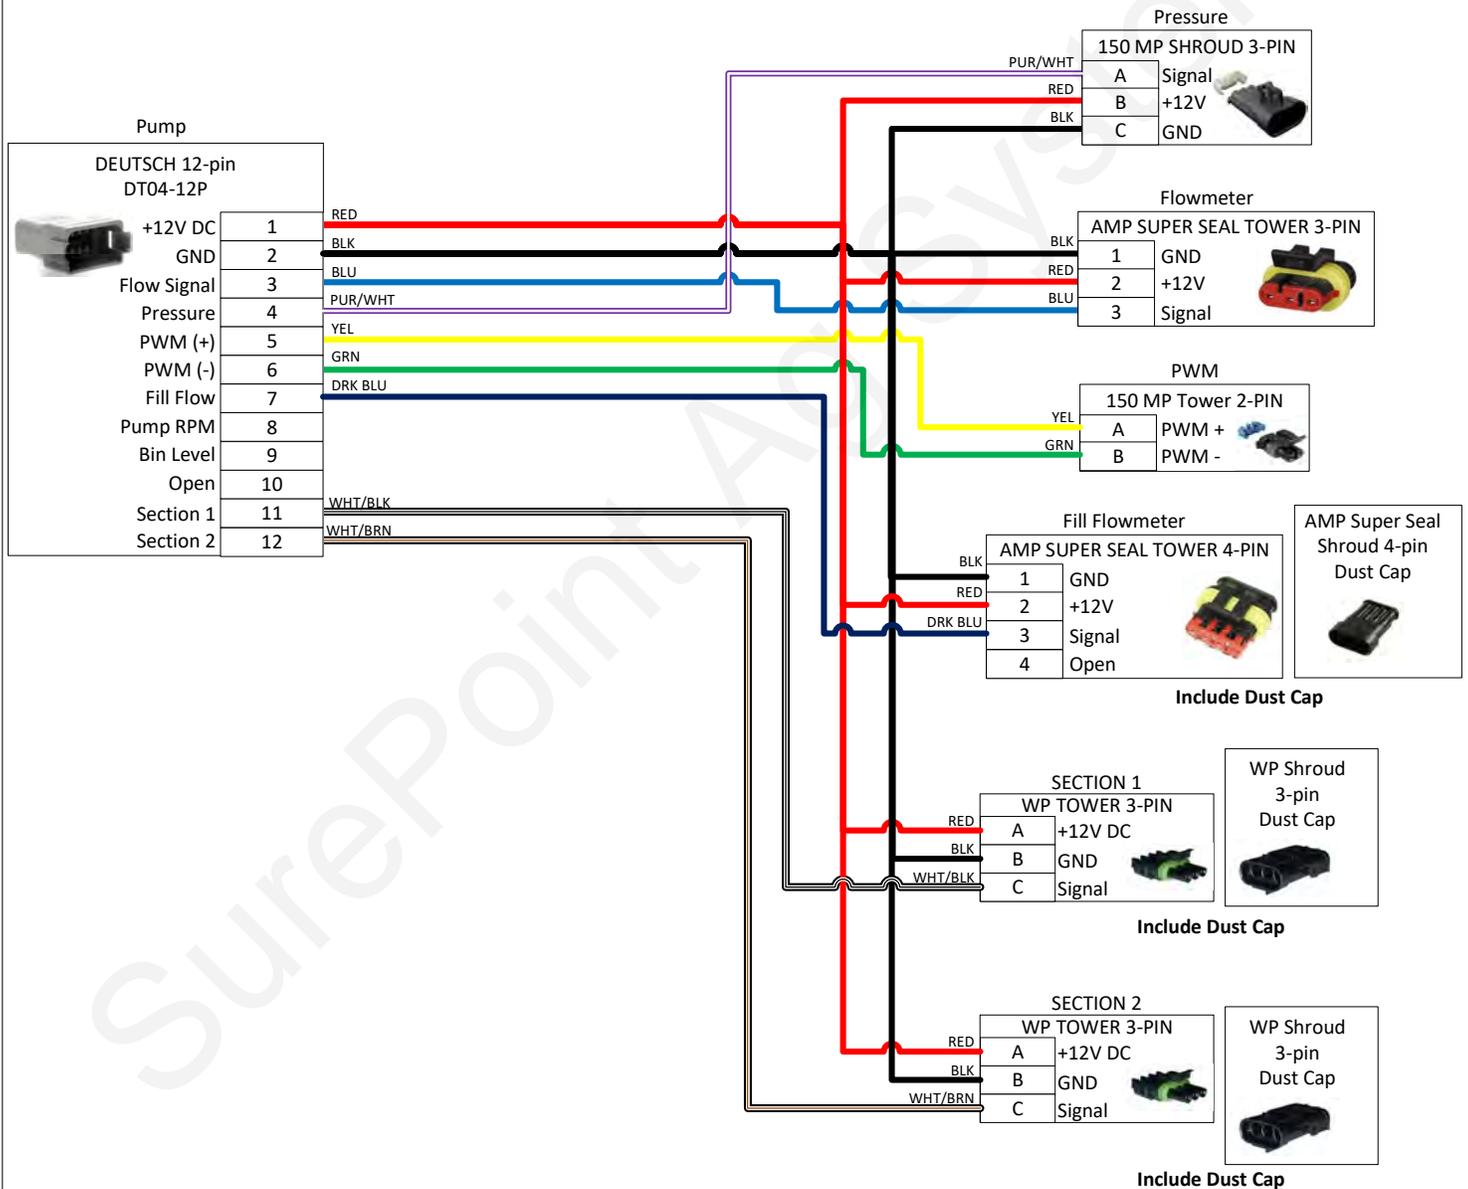


Part No:	207-4189Y1	Drawn By:	Brandon Cavenee		
Description:	Final Cable for Tower With 1-2 Section Valves (pwm, flow, pres., sec 1, sec 2, fill flow)	Last Edit Date:	4/3/2019	Revision	A-03
Copyright 2016 SureFire Ag Systems, Reproduction or other use of drawing without express written permission from SureFire Ag Systems is forbidden		26			

207-4190Y1

12-pin Deutsch Final Cable-same as 3462Y1

**Wire 18AWG
unless otherwise
specified**

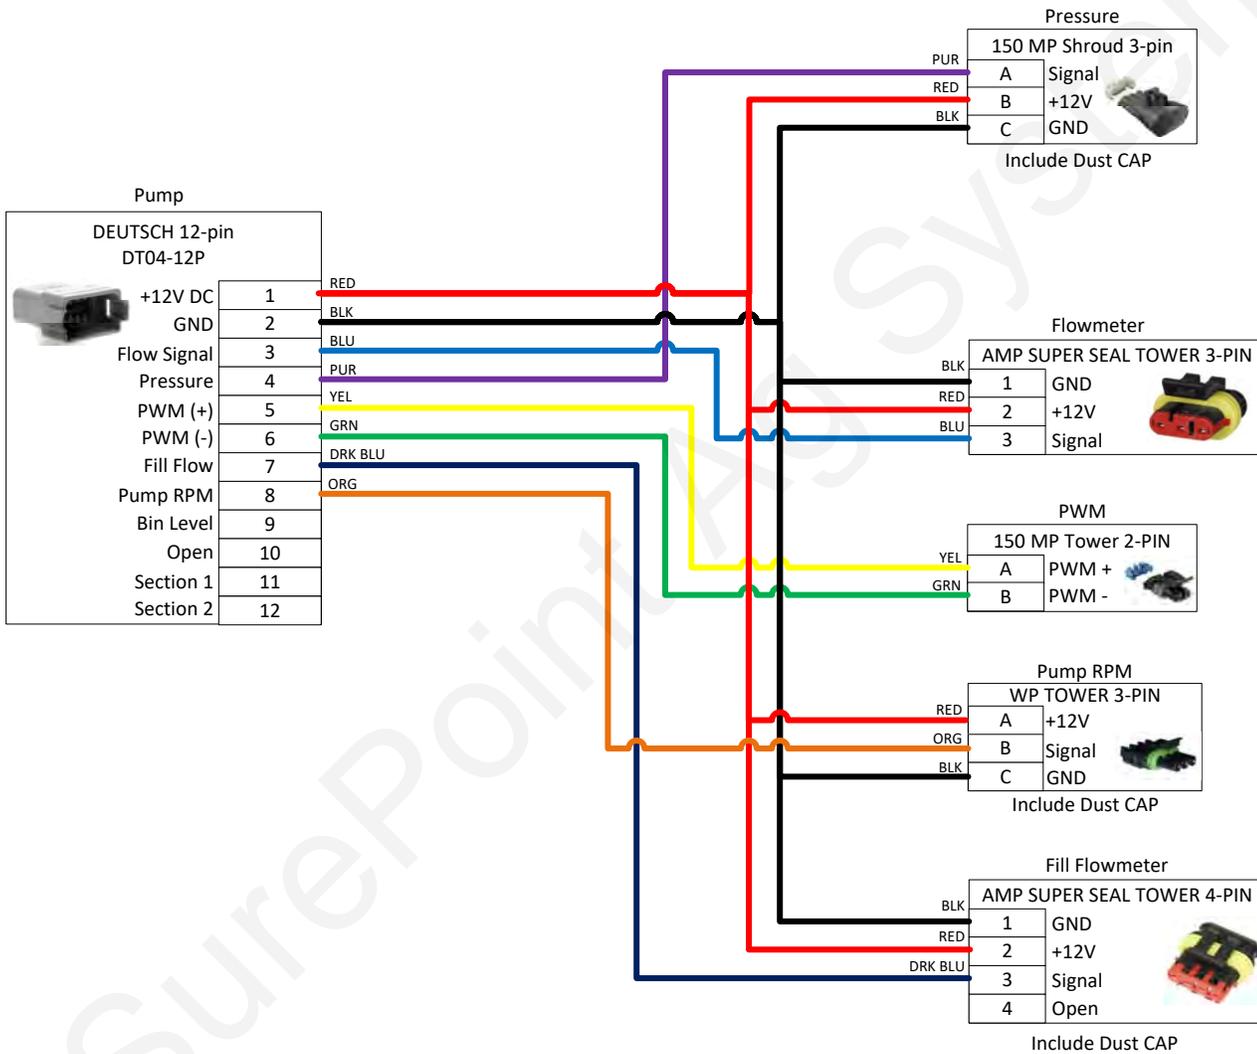


Part No:	207-4190Y1	Drawn By:	Brandon Cavenee		
Description:	12-pin Deutsch Final Cable-same as 3462Y1(pwm, flow, pres., pump rpm, fill flow)	Last Edit Date:	10/31/2016	Revision	A-02
Copyright 2016 SureFire Ag Systems, Reproduction or other use of drawing without express written permission from SureFire Ag Systems is forbidden		27			

207-3463Y1

14-Pin 6 Section Final Cable (6 sections, flow return, pressure)

**Wire 18AWG
unless otherwise
specified**

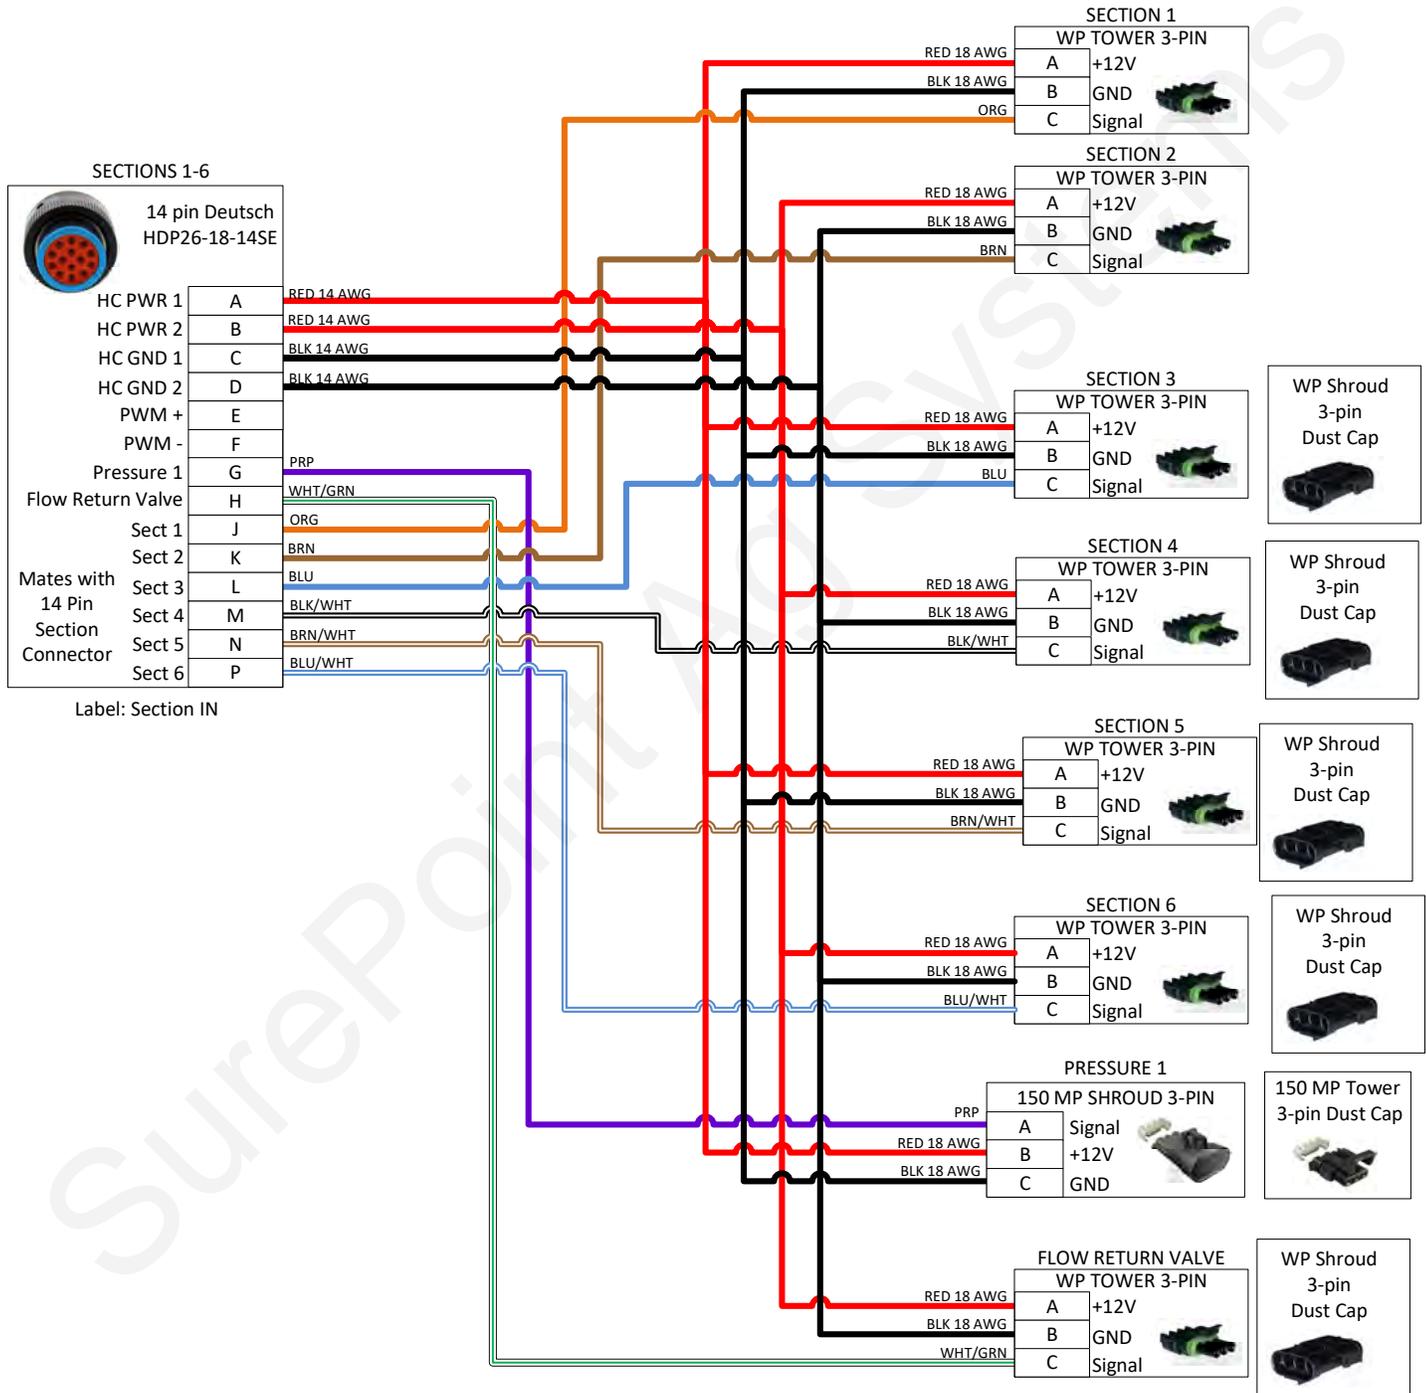

Part No:	207-3463Y1	Drawn By:	Brandon Cavenee		
Description:	14-Pin 6 Section Final Cable (6 sections, flow return, pressure)	Last Edit Date:	6/4/2021	Revision	A-02
Copyright 2016 SureFire Ag Systems, Reproduction or other use of drawing without express written permission from SureFire Ag Systems is forbidden		28			

SurePoint Ag Systems



Floating Ball Flow Indicators


Flow Indicators are extremely flexible and can be mounted in hundreds of different configurations on various types of liquid application equipment. This page is to give you some ideas and let you customize the installation for what works best on your equipment.

E Installation Overview

16 Row

Split 6 - 4 - 6

This configuration works well on a 16 row front fold planter. Each flow indicator manifold is shown fed by a cross in a single section installation. Each manifold could be fed by a section valve if desired.

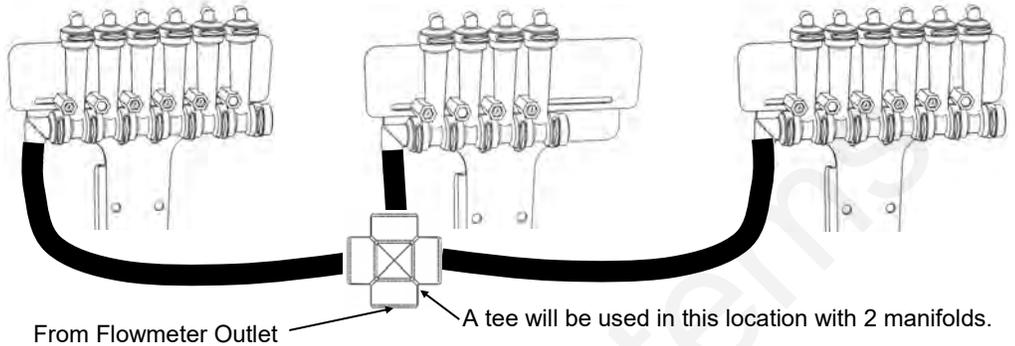


12 Row

Split 3 - 3 - 3 - 3

Shown here is a 12 row with four 3 row sections controlled by four section valves. Note each 6 row T-Bracket can hold two separate 3 row manifolds.


A 4 section 24 row could be similar with four 6 row manifolds on two large T-Brackets.

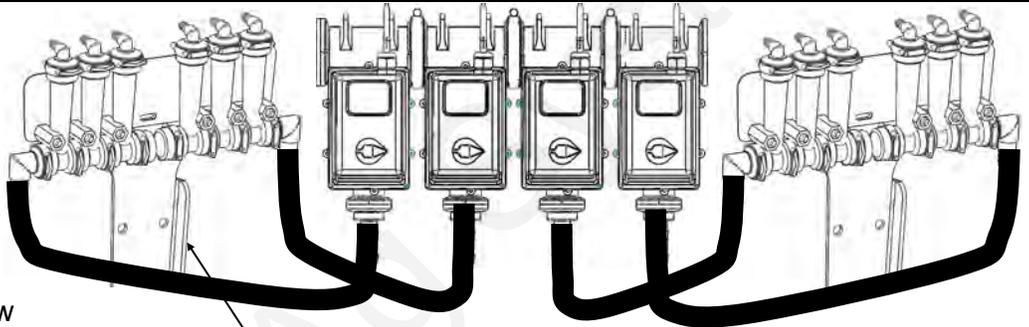


12 Row Dual Product

Product 1 Split 4 - 4 - 4 / Product 2 Split 4 - 4 - 4

In this case each manifold would be fed by a section valve. There would be 6 total section valves (3 sections X 2 products). Most often one set (top) of flow indicators would be Full Flow for high rate fertilizer and 2nd set (bottom) would be Low Flow for starter.

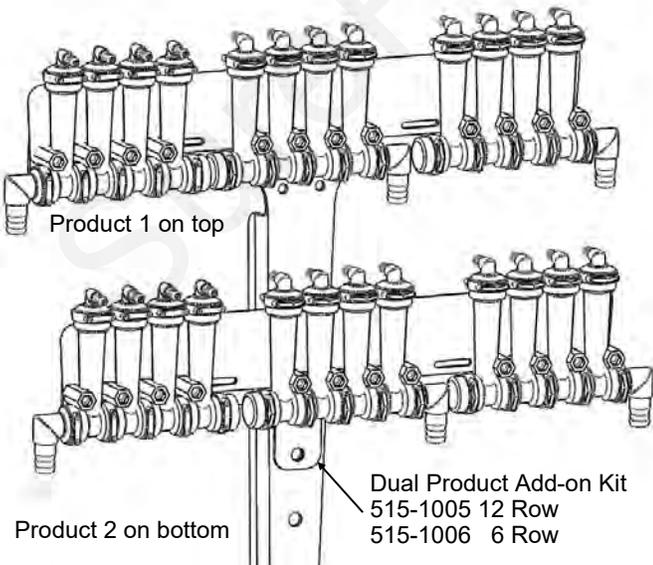

General Plumbing Guidelines

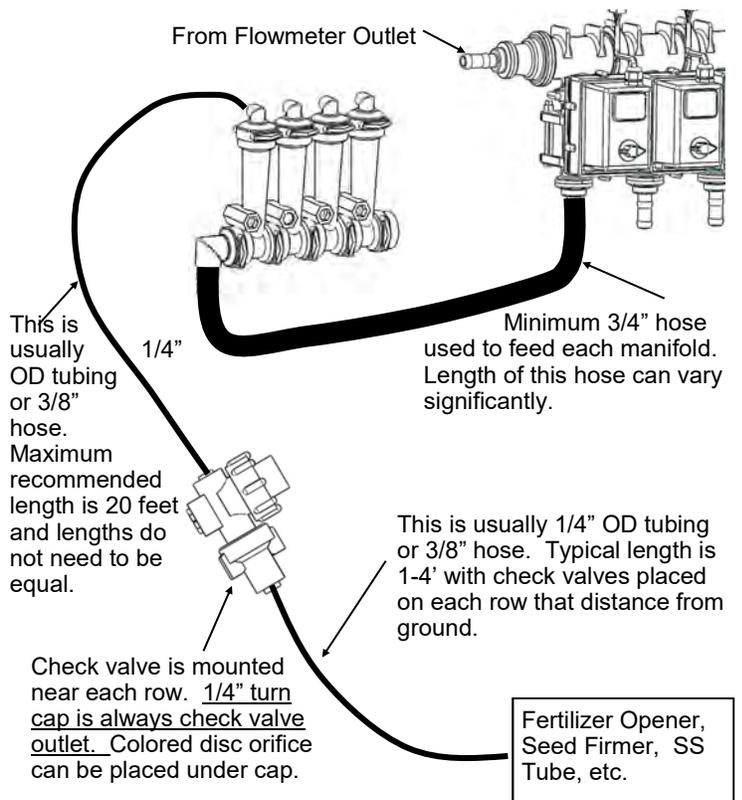

Tower 110 & 200 Mounting Options


E

Installation
Overview

Tower Basic Mounting Bracket

Item Number:
511-1007 (8x16 hitch)
511-1008 (8x12 hitch)

This kit includes a bracket to mount to the top side of a bar or hitch and mount the tower directly over that bar. It is often used on front fold planter hitches. U-bolts to mount to two common hitch sizes are included in the kits as labeled above.

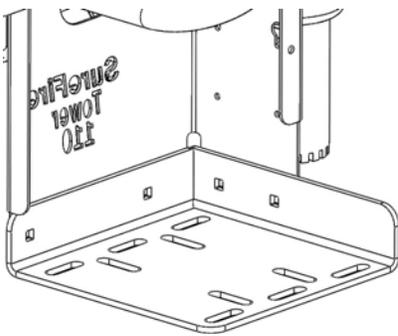


Tower Offset Mounting Bracket

Item Number 511-1010

The Tower is available as a stand alone item.



This kit includes a bracket to mount to the top side of a bar and hold the Tower. U-bolts are NOT INCLUDED. They must be ordered separately based on mounting bar size. Multiple slots allow the Tower to be mounted away from or directly over the bar.

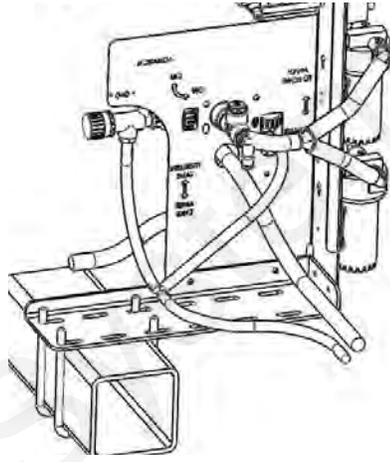

Tractor Front Mount Elliptical Cradle Tower Mounting Bracket

Item Number 511-1009

Mounts a Tower directly to the front of tractor front mount 200 & 300 gallon elliptical tank cradles. This bracket will mount the back of the tower just over 4 1/2" forward of the flat bracket mounting face. When using a tractor mounted tank, SurePoint recommends mounting the Tower near the tank, not back on the implement. Electric pumps work better to push the liquid than to suck the liquid a long distance into the pump inlet.

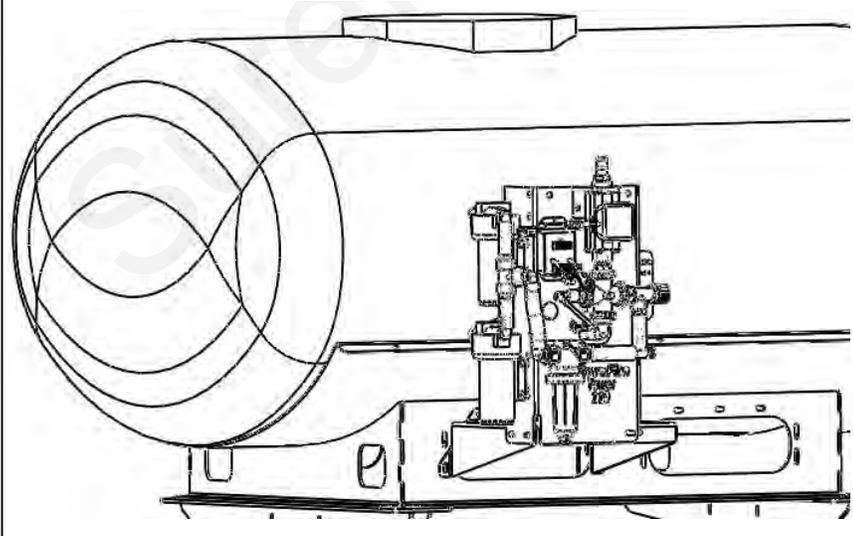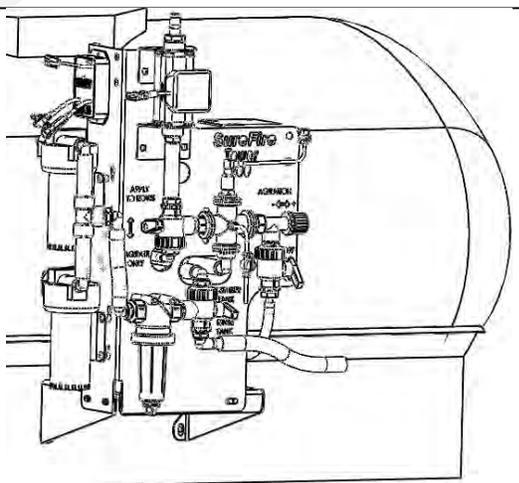

500 Gallon Elliptical Cradle Tower Mounting Bracket

Item Number 526-10-200500

Mounts a Tower directly to the side of the SurePoint 500 gallon elliptical tank cradle. This bracket will mount the back of the tower just over 9" forward of the flat bracket mounting face.


Accelerator with Tower 200 Pump Panel



The Accelerator is a completely assembled and tested fertilizer system. It has a 55, 110, or 155 gallon tank resting in a custom molded tank base that doubles as a rinse water tank. This bolts to a steel frame with eighteen 5/8" mounting slots for flexible mounting to fit many situations. The Tower 200 is often used with the accelerator to work with the rinse tank base.


Dimensions:

- 55 Gallon: 27" W x 54" L x 36" T
- 110 Gallon: 28" W x 72" L x 36" T
- 155 Gallon: 28" W x 72" L x 46" T

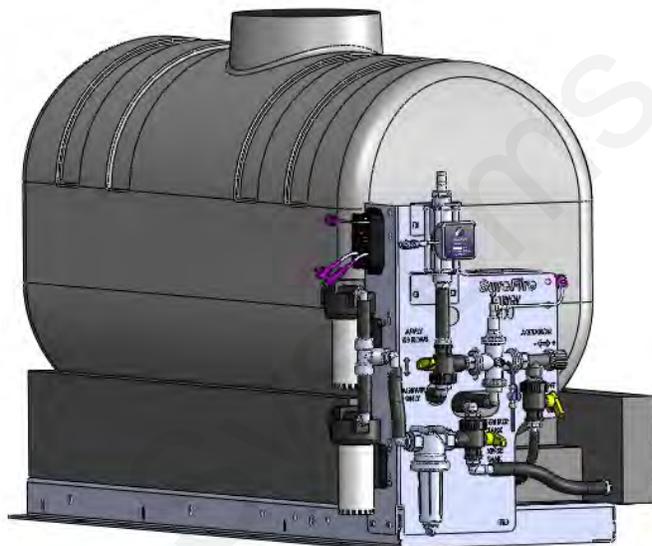

Accelerator Z Mount Kit (fits 5" to 7" wide bars, included bolts fit 7" tall bar) Item Number 526-01-100300


This mount kit includes two welded brackets to mount any of the 3 sizes of accelerator tanks above and offset from the 7x7 planter toolbar as shown.

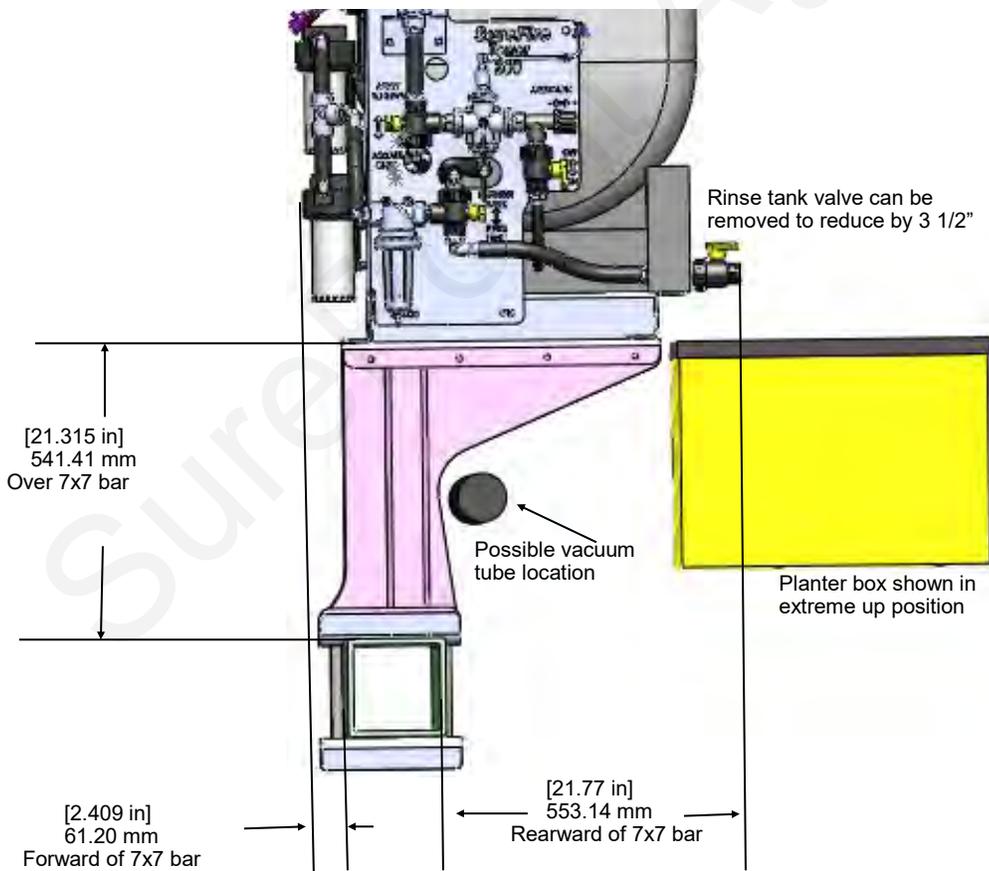

Tower 110 Plumbing Overview & Valve Operation

E

Installation Overview

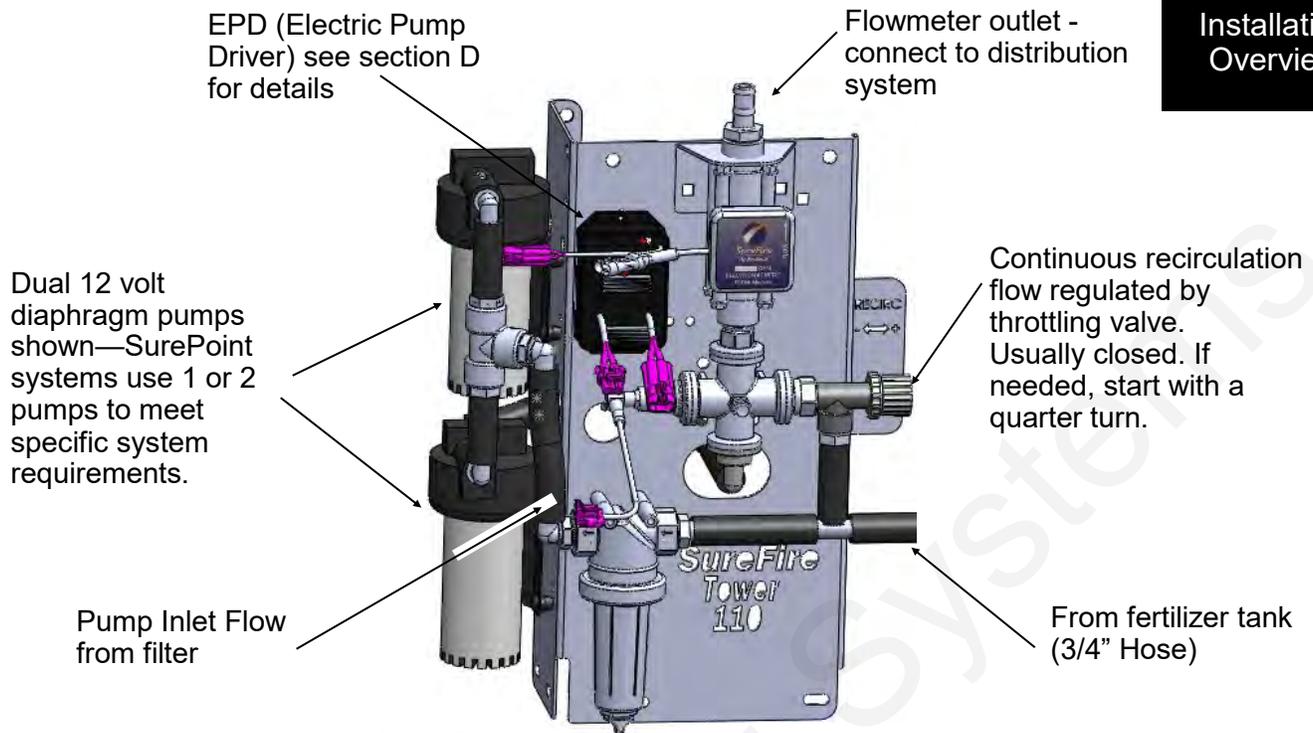

Do I need recirculation flow?

Recirculation flow allows the pump(s) to run faster than if the total pump flow was applied to the ground. This is helpful when operating at very low flow rates. On a Tower 110 equipped with two 5.3 GPM pumps, you likely will NOT open the recirculation valve if applying over 1.5 GPM to the ground.

How to use the Recirculation Adjust Valve:

Follow these steps to set the agitation adjust valve after your system is primed and tested:

1. On the Pro 700 display enter your field operating speed (default speed) and target rate. Turn your master switch on. The system will now operate at your Target Rate and Test Speed.
2. Start with the recirculation adjust valve completely closed and note the slow pump speed (by pump noise).
3. Open the agitate adjust valve slowly and note the increased pump speed and noise. The system is applying the same amount to the ground, the pumps are now running faster due to more recirculation flow. (A quarter to a half turn is often sufficient recirculation to speed the pump up slightly.)
4. On your display, verify the system has locked on to application rate at your agitation valve setting.



Troubleshooting:

- If the system is applying a rate lower than your target, you need to close the agitation adjust valve some.
- If the system is applying a rate higher than you want and will not lock on rate, you need to open the agitation adjust valve some.
- If the rate is still fluctuating around your target and you have a two pump system, unplug one pump. At low flows, one pump may deliver the needed rate and produce a more stable flow.

What if my product needs agitation?

- Tower Electric Pump systems can provide minimal agitation. If more agitation is needed, a separate pump may be needed or the system may need a hydraulic pump. On the Tower 110, simply remove the tee located below the recirculation valve. Connect the main hose from product tank to the filter and connect the tank agitation hose to the recirculation valve. Agitation will reduce the amount the pump can deliver to the rows.

Tower 200 Plumbing Overview

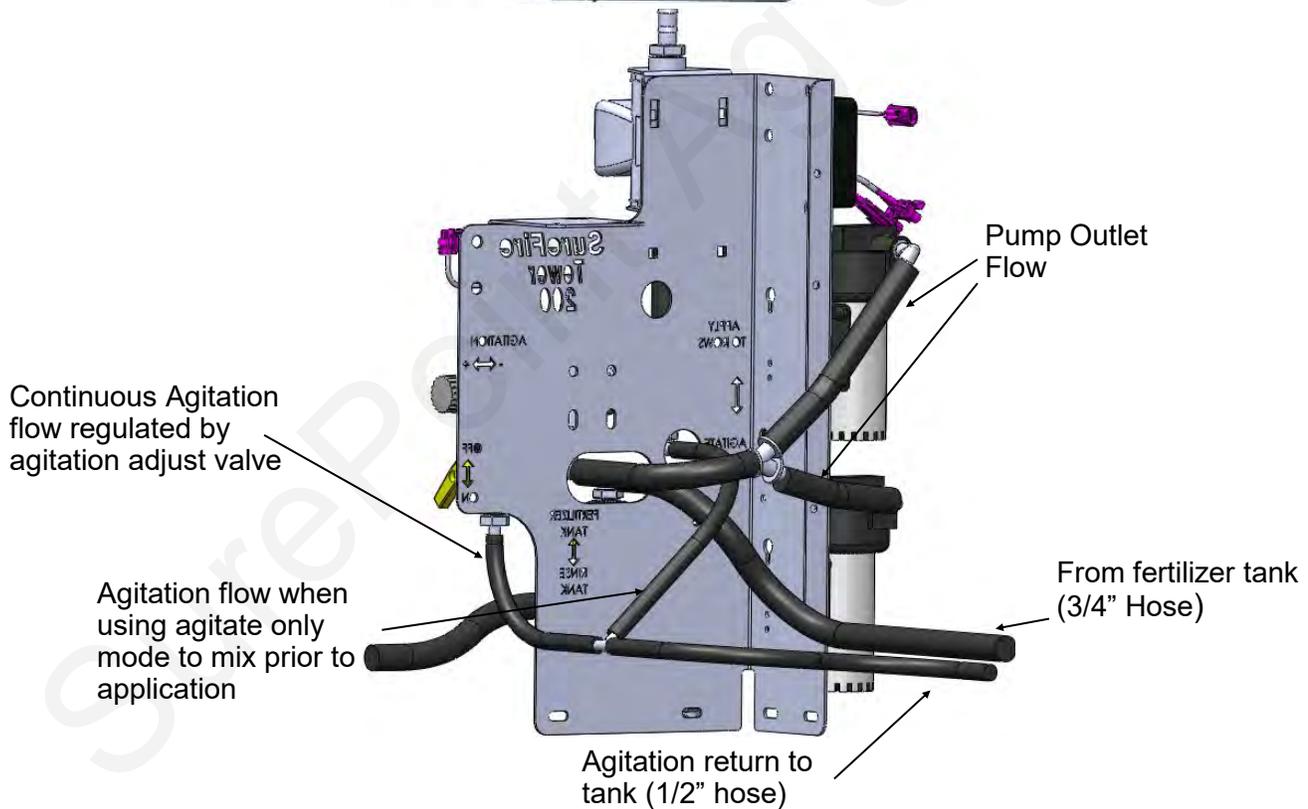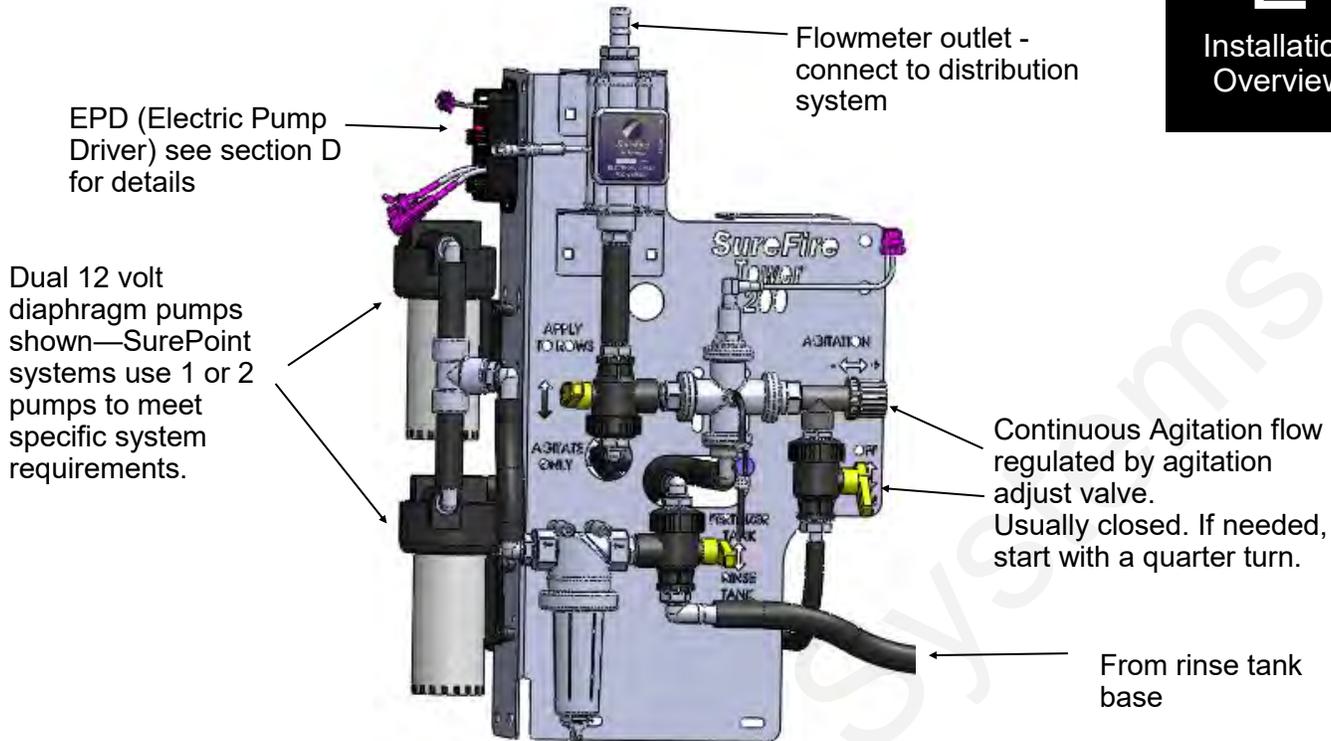

What if my product needs agitation?

- Tower Electric Pump systems can provide minimal agitation. If more agitation is needed, a separate pump may be needed or the system may need a hydraulic pump. Agitation will reduce the amount the pump can deliver to the rows.




Tower 200 Valve Operation

E

Installation
Overview

System Mode Valve: This valve selects if you will apply to the rows. Valve must be in the **up position for field operation**. Move down to Agitate Only for tank mixing prior to field operations.

Tank Selection Valve: This valve selects if product is pulled from the fertilizer tank or rinse tank. **For field operation the valve must be up**. Move down to Rinse Tank to flush fertilizer system.

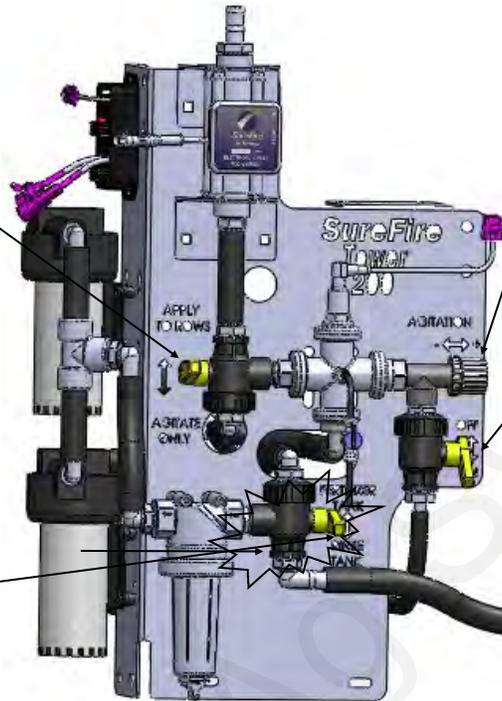

Agitation Adjust Valve: This valve adjusts how much flow returns to the tank while working in the field.

Agitation On/Off Valve: This valve will shut off agitation flow without the need to move the agitation adjust valve. **This valve must be closed when rinsing the system with product still in the fertilizer tank. If not closed, the rinse water will be injected into the fertilizer tank through the agitation line.**

How to use the Agitation Adjust Valve:

Agitation or recirculation flow serves two purposes. First, it mixes products that will separate. Second, it allows the pump(s) to run faster than if the total pump flow was applied to the ground. The pump(s) will become difficult to control if they are operated at the slowest speed possible. By circulating product back to tank, the pump(s) will run faster, producing a more stable flow.

Follow these steps to set the agitation adjust valve after your system is primed and tested:

1. On the display enter your field operating speed and rate. Turn your master switch on. The system will now operate at your Target Rate and Test Speed.
2. Open the Agitation On/Off valve.
3. Start with the recirculation adjust valve completely closed and note the slow pump speed (by pump noise).
4. Open the agitate adjust valve slowly and note the increased pump speed and noise. The system is applying the same amount to the ground, the pumps are now running faster due to more recirculation flow. (A quarter to a half turn is often sufficient recirculation to speed the pump up slightly.)
5. On your display, verify the system has locked on to application rate at your agitation valve setting.

Troubleshooting:

- If the system is applying a rate lower than your target, you need to close the agitation adjust valve some.
- If the system is applying a rate higher than you want and will not lock on rate, you need to open the agitation adjust valve some.
- If the rate is still fluctuating around your target and you have a two pump system, unplug one pump. **At low flows, one pump may deliver the needed rate and produce a more stable flow.**

SurePoint Ag Systems



The AFS AccuControl system allows an operator to use the AFS Pro 700 display to control implements using clutches and hydraulic drives with Trimble® Field-IQ™ hardware including Rate and Section Control Modules, and optional implement switches, master switch boxes, and section switch boxes.

For complete setup and operation of the AFS AccuControl with the Pro 700 see the manuals available from Case IH, especially the *AFS Pro 300, AFS Pro 700 AFS AccuControl Rate Controller Software Operating Guide, Part number 47799615*, and the *Pro 700 Display Software Operating Guide*. The following pages in this manual summarize the setup required for the SurePoint system, but for further information see the above Case IH manual or other documentation available from Case IH.

SurePoint Liquid systems on the Case IH Pro 700 / AccuControl can be run from “*Planter Operation Mode*” (Planter Op Mode) or “*Liquid Operation Mode*” (Liquid Op Mode).

Planter Op Mode allows the control of seed and liquid fertilizer application.

Liquid Op Mode allows for control of liquid fertilizer application.


If the Pro 700 AccuControl is going to be controlling *both planter operation and liquid application* the AFS AccuControl would be set up in **Planter Op Mode**. On the screen below the **AccuCtrl Operation** would be set to **Plant**.


The operation of the SurePoint liquid application system would then be a secondary operation under Planter Op Mode.

The following pages show screen shots of setting up the SurePoint Liquid System using the AccuControl Liquid Op Mode.



Setup screen when using Planter Op Mode with Liquid

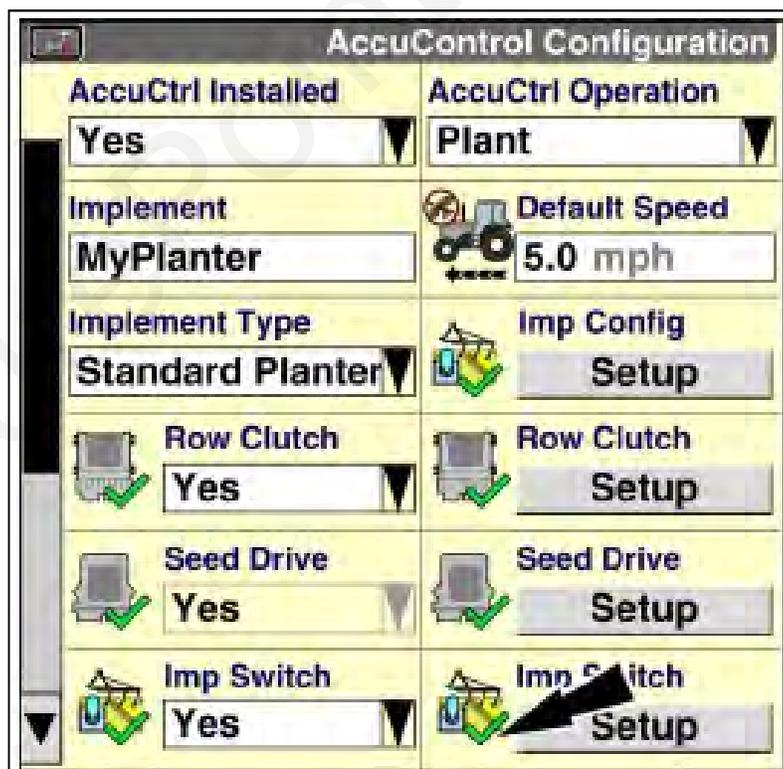

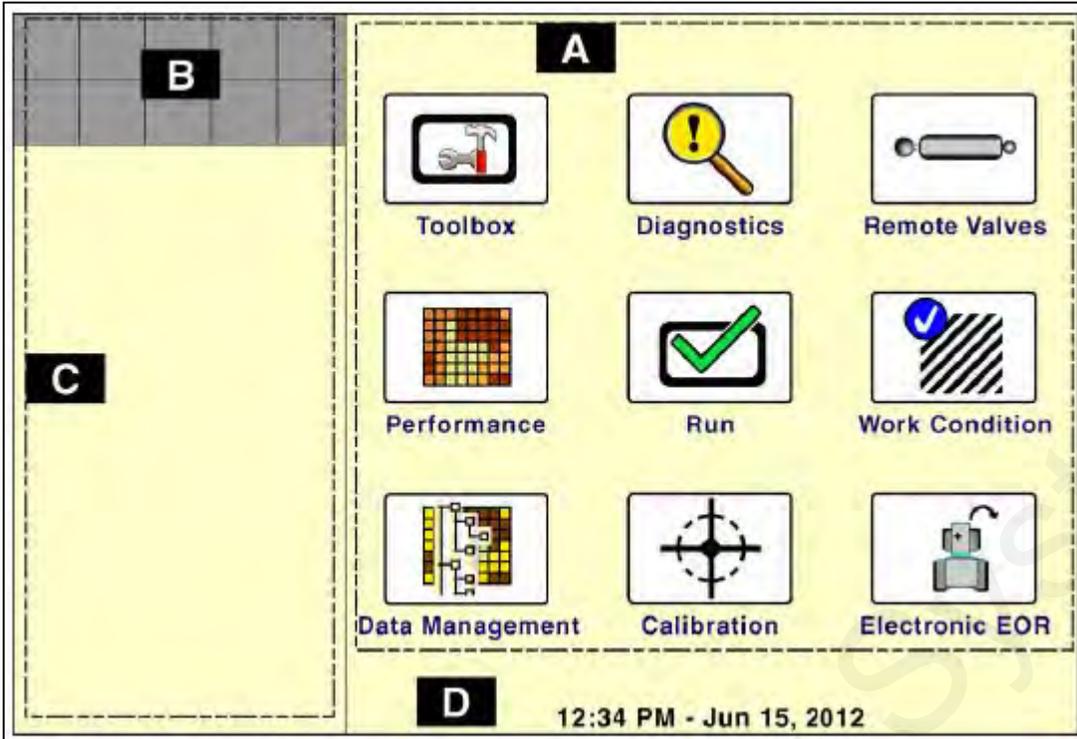

- A** Home Screen
- B** Status and Warning
- C** Left-hand Area—
 - Created by the vehicle
 - Is always displayed
 - Some parts may be configurable on the Layout screen
 - A window placed here has priority over the same window placed on a “Run” Screen
- D** Current time and date

Items in **Toolbox** will vary according to the products that are installed and activated. They could include:

AccuCtrl	Activate	Contrn	Display	GPS
Impl	Layout	Manual	Marks	NAV
Operator	Overlap	Precision Farming	Print	Product
TC	Vehicle	VT		



Items in **Work Condition** include:

Layer Assignment	Valve Calibration	Operation Setup	Controller Setup	Product Calibration
Layer	Valve Cal	Operate	Control	Liquid Cal

You must create or select a Work Condition to complete the setup for product application.



Items in **Run** include Run1 through Run6.



Items under the **Performance** icon could include:

Profile	Sum1	Sum2	Rx Setup
---------	------	------	----------



Items under the **Diagnostics** icon could include:

Version

CAN

Fault

Resource


GPS

GPS2

Pro 700 AccuControl Setup for Liquid PWM Control


Your system may vary from the screens shown here. See the *AFS AccuControl Rate Controller Software Operating Guide* for additional information about configuring your system. The setup may not always happen in the order shown here.

1. Create an Operator (**Toolbox > Oper**)
2. Check GPS Status (**Toolbox > GPS**)
3. Create Implement (**Toolbox > Impl**)
4. Set up Product (**Toolbox > Product**)
5. Set up Container (Optional) (**Toolbox > Container**)
6. Basic Setup (**Toolbox > AccuCtrl**)
 - A. Select AccuCtrl Operation (Liquid)
 - B. Select AccuCtrl Installed (Yes)
 - C. Select Implement Type (Liquid Toolbar)

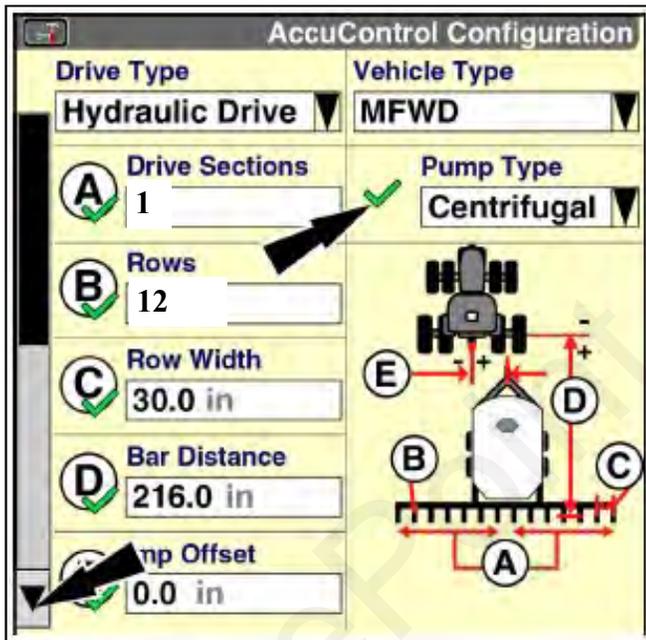

7. Implement Configuration (**Toolbox > AccuCtrl > Imp Config**)
 - A. Press 'Setup'
 - B. Select Drive Type (will be Hydraulic Drive)
 - C. Select Vehicle Type
 - D. Set Number of Drive Sections (A) **Always = 1**
 - E. Pump Type will be set at Centrifugal (yes)
 - F. Set Total Number of Rows (B)
 - G. Enter Row Width (C)
 - H. Enter Bar Distance in Inches (axle to knife) (D)
 - I. Measure Implement Right/Left Offset
 - J. Scroll down to Enter Rows per Drive Section (same as Total Number of Rows)
 - K. Press 'Done'


8. Section Control Setup (If equipped with Section Shutoff Valves) **Toolbox > AccuControl > Section Control**
 - A. Select Section Control (Yes)
 - B. Press 'Setup'
 - C. Assign Module Serial Numbers
 - D. Assign Rows per Output (number of rows per Section)
 - E. Select Control Polarity (**Active On**)
 - F. Select 'Done'
9. Overlap/ Boundary Control (**Toolbox > Overlap**)
 - A. Turn Overlap Control and Boundary Control ON.
 - B. Adjust values as desired.

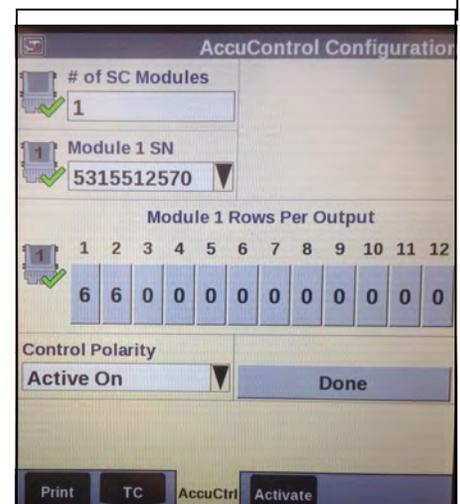


AccuControl Setup for Liquid

10. Liquid Drive Setup *Toolbox > AccuControl > Liquid Drive*

- A. Select Liquid Drive (Yes)
- B. Press 'Setup'
- C. Assign Liquid Drive Serial Numbers (from Trimble Rate & Section Control Module)
- D. Select Drive Type (**PWM**)
- E. Select Master Valve Type (**NO**)
- F. Select Pump Disarm (**No**)
- G. Select Sec Off Behavior (**Turn Off**)
- H. Enter Drive Meter Cal Number (**3000** pulses/gal for electric systems; **2000** pulses/gal for hydraulic systems)
- I. Press 'Done'

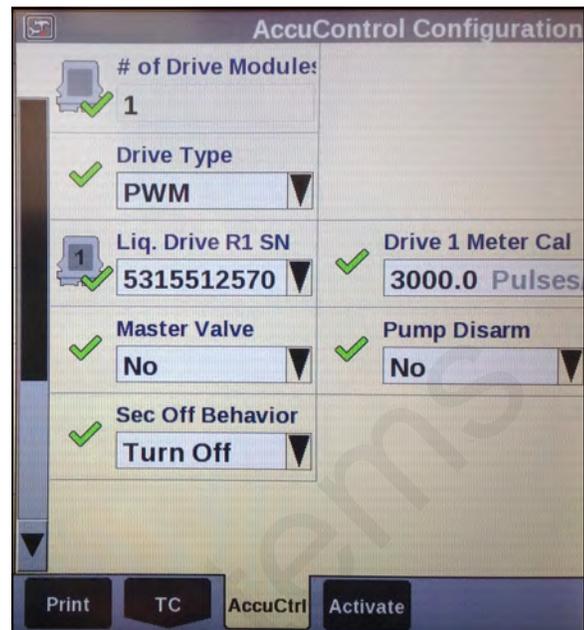

Optional Master Switch Box and Foot Switch

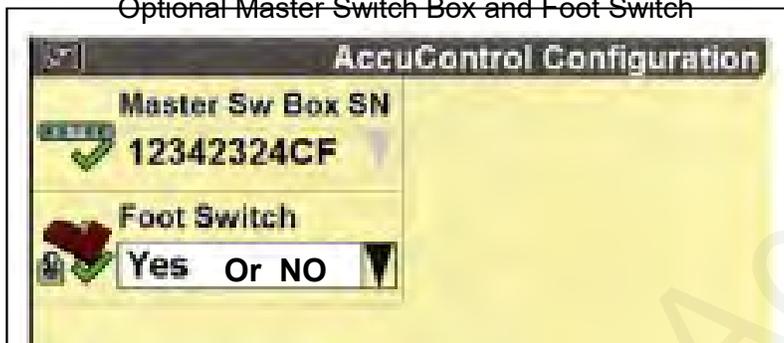


11. Master Switch Box (If equipped with External Switch Box)

- A. Select Master Sw Box (Yes or No)
- B. Press 'Setup'
- C. Verify Serial Number
- D. Select Foot Switch (if installed)
- E. Press 'Done'

12. Implement Switch (if installed)


- A. Select Imp Switch (Yes)
- B. Press 'Setup'
- C. Select Imp Switch Serial Number
- D. Select Switch Polarity (Determine this by raising and lowering the implement and watch the Implement Status Arrow in Status/Warning Area for proper operation.)
- E. Press 'Done'

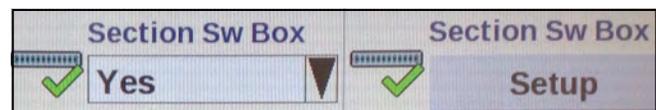

13. Section Switch Box (If system is equipped with External Section Switch Box or desire Manual Valve Section Control through Run Screens).

- A. Select Section Switch Box (Yes)
- B. Press 'Setup'
- C. Select Config Mode (Auto)
- D. Verify Sw Box Serial Number (if equipped)

If no external switchbox is installed, User Defined Windows can be assigned to a Run Screen (Toolbox>Layout). This is typical setup.

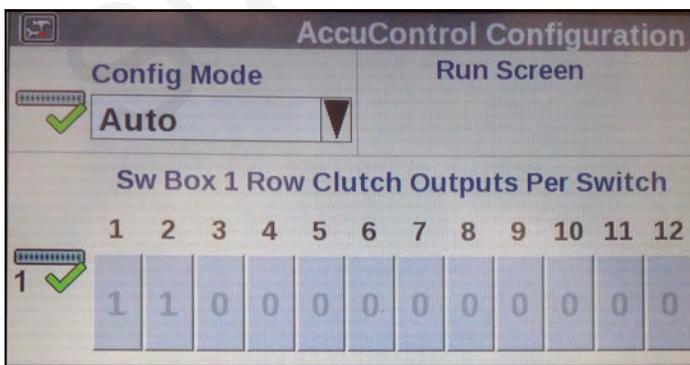

Create A Layout

Go to **Toolbox>Layout**

Select Current Layout and then select New.

Name the Layout. Under Run Screen select a screen.

In the white boxes consider adding the following items to a **Run Screen**:

- AccuControl Speed
- Master Control
- Liquid Op Mode
- Liquid Control
- Liq App Rate Scan Container
- Liq Flow Rt Scan
- Section Control
- Overlap Ctrl Overlap Control
- Clutch Control (may want this if the system has electric section valves)



The Run Screen Layout is largely a matter of operator preference. Some of these items may be added to the Left Hand Area if space is available there, or more than one Run Screen can be set up.

Valve Calibration

Work Condition > Valve Cal > Advanced Valve Calibration

The electric pump systems typically run well with the following default settings. There is more variation in hydraulic pump systems. The Valve Calibration procedure may give you the best settings for a hydraulic pump system. It may also give some settings that don't work well at times. Try the following default values as a starting point and make adjustments as needed for your system.

See the pictures on the following pages for other values.

	Integral Gain	Breakout	DeadZone	Integrator Upper Limit	Integrator Lower Limit	Comparator Limit	Integrator Upper Limit: <i>If system starts and then quits - MOTOR STALLED - increase to 200 or higher. This may help.</i>
Electric	0.50 (.40 to .60)	3	2	100	-100	100	
Hydraulic	0.20 (.15 to .25)	10	3	100	-100	100	

Additional Tips for Getting Started

1. Set the **Flow Error Timeout at 30—45 seconds** until you get the system adjusted and operating correctly. The default is 5 seconds. This may result in the application being shut down before you have a chance to see how it is operating. After the system is operating correctly, this can be set lower to give you a quicker warning if something is wrong. (**Work Condition > Valve Cal > Advanced Calibration > Scroll down to 2nd page and Flow Error Timeout**)

2. **Set the Fault Speed to Slow or Off** until you get the system adjusted and operating correctly. The default is Normal. (**Work Condition > Operate > Fault Speed**) After the system is operating correctly, this can be set back to Normal. You can run this at Slow if the system gives too many Fault Warnings at Normal.

Pro 700 & AccuControl Operation for Liquid Application

To start applying product:

Go to **Toolbox>AccuCtrl>Default Speed**

Enter a default speed. The applicator will default to this speed if all ground speed sources are lost.

The **Master Apply** button may need to be cycled twice to start the application.

1. Preparation

- A. Insert a data card in the display.
- B. Create or Select a Grower/Farm/Field/Task & Crop Type (Performance > Profile)

2. Product Setup: **Toolbox > Product**

- A. Name the product (28-0-0)
- B. Select the form for the product (Liquid)
- C. Select Usage (Fertilizer)
- D. Enter Default Application Rate
- E. Enter Minimum and Maximum Application Rate.



Product Setup	
Product Name 28-0-0	Form Liquid
Usage Fertilizer	
Default App Rate 6.000 gal/ac Units	Delta App Rate 1.000 gal/ac
Min App Rate 0.000 gal/ac	Max App Rate 25.000 gal/ac

3. Product Layer Assignment: **Work Condition > Layer** to assign a product to a control section of the applicator

- A. Select or Create a Work Condition.
- B. Select Layer 1 Control Type (AccuControl Liquid)
- C. Select Product for Layer 1 Control
- D. Select Container if using the Container
- E. Assign additional layers if needed.



Layer Assignment	
Work Condition Liquid	
Layer 1 AccuControl Liquid	
Product 1 28-0-0	Container 1 TANK

4. Controller Setup—Liquid: **Work Condition > Control**

- A. Verify Implement
- B. Verify Work Condition
- C. Select Controller—Liquid
- D. Product Delay-Default is 1 .0 sec.
- E. Enter the Minimum Speed (if the speed drops below this, the applicator will keep applying at this speed)
- F. Enter a value for Off-target Alarm Limit (probably 20%)

AccuControl Controller Setup	
Implement Liquid Toolbar	Work Condition Liquid
Controller Liquid	
✓ Default Rate 6.00 gal/ac	✓ Alarm Limit 10 %
✓ Delta Rate 1.00 gal/ac	
✓ Product Delay 0.7 sec	
✓ Minimum Speed 3.0 mph	

5. Enable Application: Run Screens

- A. Liquid Op Mode—Select Liquid
- B. Read the safety message and press Accept.
- C. Master Control—Press Apply on display or switch on Master Switch on switchbox (if equipped)

Liquid Op Mode
Liquid


Master Control
Apply

6. Liquid Rate Control


- A. Liquid Control defaulted to ON
- B. Increase or decrease rate if needed
- C. Automatic rate control (prescription) is assigned in **Performance > Rx Setup**.

Liq Ctrl
6.000
Reset
On

Possible Run Screen Layout for system with 2 electric section valves

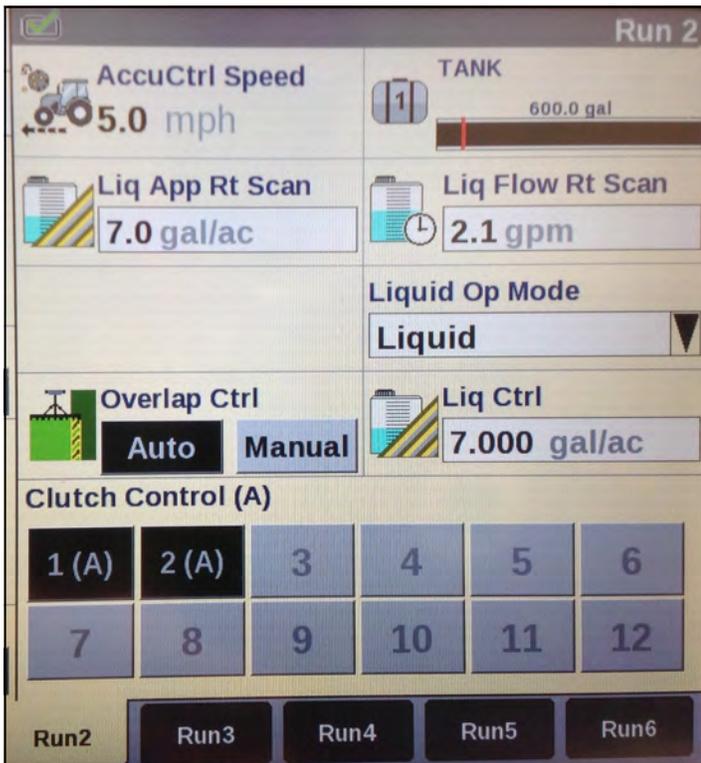



Start with these Valve Cal settings Work Condition > Valve Cal > Advanced Calibration (For Electric pumps)

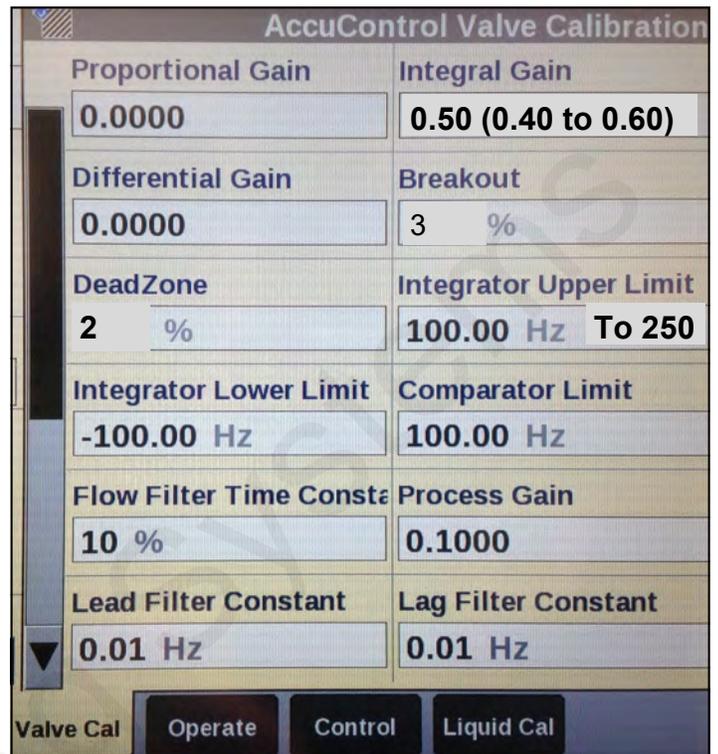

To use default AccuCtrl speed, turn Radar off.

Screen showing Flow Error Timeout set to 45 sec
Work Condition > Valve Cal > Advanced Calibration > Scroll down to 2nd page and Flow Error Timeout)

Screen showing AccuControl Liquid Drive Setup
Toolbox > AccuCtrl > Liquid Drive Setup

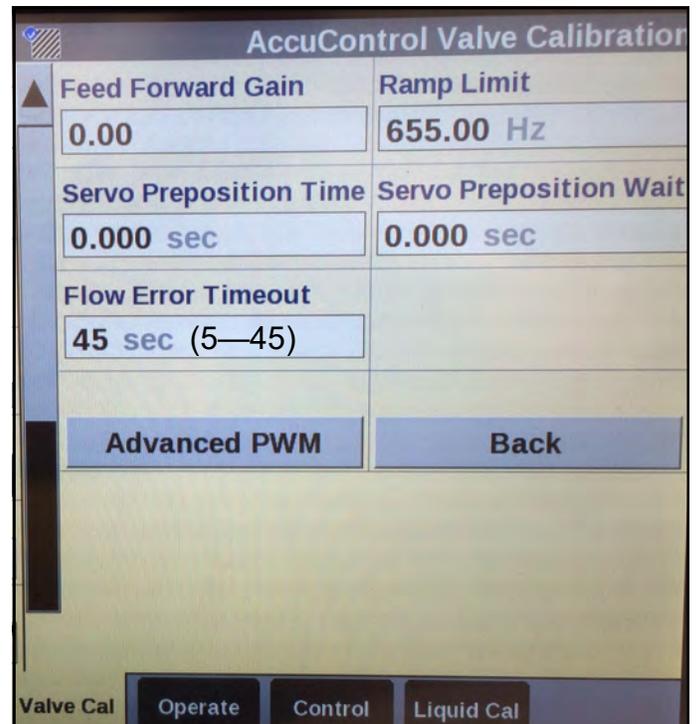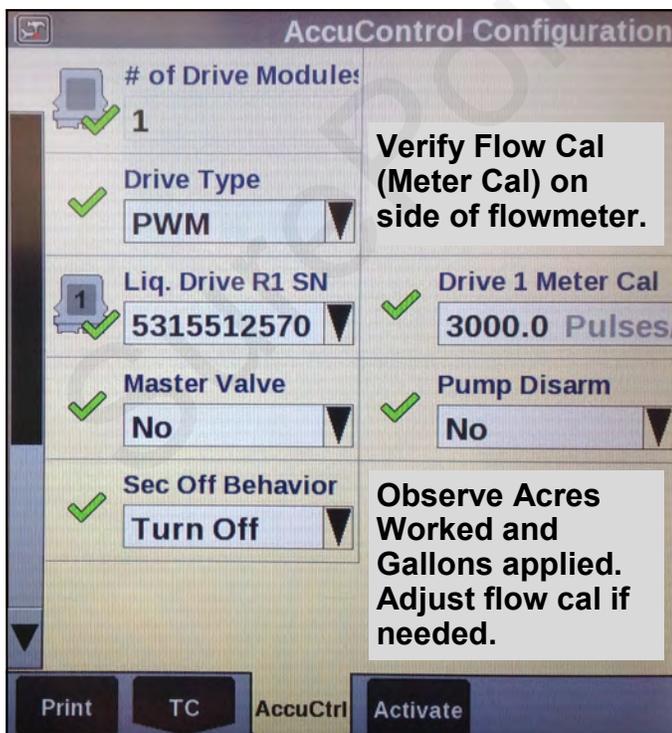

Container Setup (Sample) Toolbox > Contr

Fault Speed, Beeps, etc... Work Condition > Operate

Implement Setup (Sample) Toolbox > Impl

Your system setup may vary from the screenshots shown here. There may be other setup items that need to be completed for your system. Your system may not require all the setups shown here. See the manuals from Case IH for the Pro 700 display and for AFS AccuControl for more information about setup and operation of your system.

If the suggested Valve Calibration numbers don't work, try running the Valve Calibration procedure at **Work Condition > Valve Cal**.

AccuControl Liquid Calibration

This is a good place to run the system for initial testing.

The following screenshots show the screens used in running a flowmeter calibration or catch test. Adjust the Speed or Rate to try different scenarios.



AccuControl Liquid Calibration

Implement and Work Condition should be set before proceeding. Go to Work Condition Screen to set Work Condition. Press Next for Next Calibration Step.

Implement Liquid Toolbar	Work Condition Liquid
Liquid Op Mode Liquid	Master Control Apply
	Prime Control Prime
Next	

Valve Cal Operate Control **Liquid Cal**

AccuControl Liquid Calibration

Insert the Meter Cal # from the Tag on Meter or Encoder. Set the Target Rate. Proceed to Next Page.

Serial Number 5315512570	Meter Cal Value 3000.0 Pulses/Gal
Simulated Speed 5.0 mph	Target Rate 7.00 gal/ac
Back	Next

Valve Cal Operate Control **Liquid Cal**

AccuControl Liquid Calibration

Prime the system prior to performing the calibration run. Set Mode to Calibrate and be prepared to measure the system output. On completion of calibration run - Enter System Actual Output. Select Update Cal to modify Meter Cal Value.

Mode Calibrate	Product Control Start
Measured Output 0.0 gallons	Actual Output 0.0 gallons
% Change 0.0 %	Meter Cal Value 3000.0 Pulses/Gal
	Update Meter Value Update
Back	

Valve Cal Operate Control **Liquid Cal**

This is about the only place to run this system in a test mode.

The AccuControl platform does not provide good diagnostic or troubleshooting ability.

While this test is running, a catch test can be done to verify flowmeter calibration (Meter Cal Value).

Always compare Acres Worked and Gallons Applied. Adjust Meter Cal Value (Flowmeter Calibration) as needed for accurate measurement.

NOTICE


Running these tests will dispense liquid. Be sure it is safe to dispense the liquid in your tank in this location.

Electric Pumps Won't Run

EPD Status Lights

G

Trouble-shooting

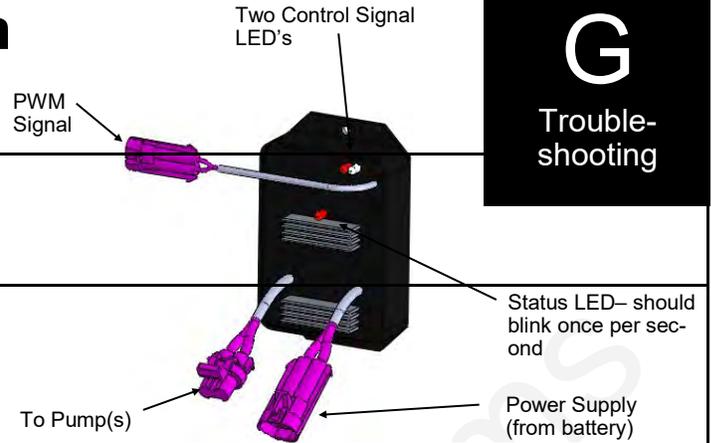

Status LED	Status Description	Troubleshooting Steps
On Steady	Power input is good and PWM input Signal is detected	No Problem, Typical operating condition.
Steady Blink (1 hz— 1 blink/sec)	Power input is good and PWM signal is not detected.	Typical 'Off' Condition. If pumps should be on: 1. Inspect wiring and connectors 2. Check voltage at PWM connector to EPD, should be 1-12 volts to turn on. 3. Check voltage on PWM wires at 37 pin connector, pins 15&16.
Blink once, pause, blink once, pause	Open circuit between motor output and motor.	Check harness and connectors to motor. If using two motors, plug each in separately directly to EPD (bypassing Y-harness)
Blink twice, pause, blink twice, pause	Output short circuit detected.	<ul style="list-style-type: none"> Check motor wiring
Three blinks, pause, three blinks, pause	Overcurrent condition	<ul style="list-style-type: none"> Check total load Clean cooling fins on EPD
Four blinks, pause, four blinks, pause	Input power fault. Low voltage condition in power to EPD.	Unplug battery power from EPD to reset. Check power cables and connections for quality. Be certain that power cable connects directly to battery and has a solid, clean connection. <ul style="list-style-type: none"> Test the voltage under load coming into the EPD. (Use 2-pin WP test connector by EPD.) Voltage may appear adequate when system is not on, but bad connectors or wiring may not carry the current needed under load.) Try running one pump at a time. You may be able to reduce power draw by lowering the system pressure. Typically, though, this is an indication of a cable or connector issue.
Five blinks, pause	Input frequency out of range.	Check PWM Settings on Rate Controller.
Control Signal LEDs (top corner)		
Light intensity varies	Off - No PWM Signal 100% brightness - Maximum PWM input signal	Red light in top corner should be on when PWM signal is received (system is applying product)

The most common issue with the EPD will be a low voltage condition (under load) delivered to the EPD from the battery. Voltage drop occurs anytime current is moved through a wire. A low-voltage (12 v) system with long runs (60-80 feet) may have unacceptable voltage drops if any part of the system is weak or the load is high. This could be bad (corroded, weak, loose or burnt) connectors (at the battery, at the hitch, and at the EPD), too small of wire used (smaller wire equals more voltage drop), low source voltage, and heavy load. Any or all of these may contribute to a low voltage condition under load that may shut down the processor in the EPD module. This will be indicated by 4 quick flashes of the red light, followed by a short pause. Unplug the power-in connector to reset the EPD. Check and correct any wiring deficiencies.

Troubleshooting / Service Guide for SurePoint PWM Liquid Application Systems

G

Troubleshooting

Always verify the controller settings. See the screenshots in Section F of the system manual and on the QuickStart setup sheet.

The pump won't run.

Electric Pump System

EPD flashing 4 times

1. Find the EPD module (electric pump driver—black module on Tower). Should have a steady blinking light (one blink per second) in the middle when pumps should be off. In Run mode, the center light should be steady red, the upper right should be steady red (indicates it is receiving a PWM signal). If Status LED (center light) is *flashing 4 times, then pausing*, EPD has tripped due to low voltage condition. Unplug the Power Supply to the EPD to reset. If condition persists, check Power Supply cables from battery to EPD to insure solid connections and good electrical path. Check connections at battery. Check connectors at the hitch and at the EPD. (*There should be 11.5-13 volts at the point where the EPD connects to the battery power harness, when tested under load. This voltage may show up when there is no load, but the harnessing may not be good enough to deliver 11.5-13 volts under load.*)

No Lights on EPD

1. There should be a steady blinking light in the middle of the EPD. If no light is ON, check the 40-amp fuse in the EPD harness near the battery. Use a voltmeter to verify that there is 12-13 volts at the Power Supply connector that plugs into the EPD. *If there is good voltage here, but no light on the EPD, replace the EPD module.*

Will pumps run?

1. Connect the two large connectors that are plugged into the bottom of the EPD to each other (bypass the module and supply 12 volts directly to pumps).
2. Do the pumps run? If not, check the 40 amp fuse in the EPD harness near the tractor battery. Inspect harnesses and connections. If 2 pump system, plug pumps in by themselves to check individually. If pump won't run, connect it to pickup battery with jumper cables.

Pumps run, but won't pump anything—

1. Are valves from tank to pump open? Is strainer clean? Close recirculation. Open air bleed valve.
2. Tap on pump with rubber mallet. Pour water (hot, if available) in inlet of pump. Remove outlet hose from pump.

Electric pumps only run with 12 volts direct from battery

Check to see if a PWM signal is getting to the EPD:

1. Connect pumps and power harness back to EPD.
2. Go to **Diagnostics > Tests > Calibrate PWM Limits** to investigate this issue.
3. In Calibrate PWM Limits, hold down "+" button for 8-10 seconds. A single tap of this button produces a very small change in signal to the valve, so you must hold it. (*Look at PWM Duty Cycle –DC%*)
4. Remove PWM valve connector at EPD and check voltage. You will need 6-12 volts to turn pumps on. (PWM Duty Cycle at 100 should be 12+ volts on PWM signal)
5. If 6-12 volts is not present, check harnesses and review control valve type setup (should be PWM Close or PWM).
6. Go back to the 12-pin Deutsch pump connector, check PWM voltage between Pins 5 & 6 (check pins 5 & 2 if wires on PWM connector are Yellow and BLACK).
7. If you have a 37-pin round connector, check the voltage between pins 15 & 16. Also check voltage between pins 2 and 16.

Application Rate & Flow Troubleshooting

G

Trouble-
shooting

Application Rate Fluctuates

First, you need to determine if the fluctuation is caused by the controller sending fluctuating signals to the valve. The Pro 700 does not allow for true manual operation to help with this diagnosis.

1. **Inspect & clean pump inlet strainer.** Strange flow rate fluctuations are very often due to an obstruction to the pump inlet. Inspect plumbing from tank to pump.

OR

1. Turn the system on and watch the flow in GPM on the 1,2,3 screen.
2. Is the flow steady within a very small range? For example a fluctuation from 2.3 to 2.5 GPM would be considered normal. A fluctuation from 2-3 GPM is a problem. If only a small normal fluctuation is seen, skip steps 3-6 and proceed to "Application Rate Fluctuates in Field " below.
3. If there is a large fluctuation, observe the system flow. Is the discharge a steady stream? Are the flow indicator balls floating steady?
4. If visually the flow is steady, but the display reports a fluctuation in GPM, inspect the flowmeter. See section B for flowmeter information.
5. If visually the flow is unsteady, the flowmeter is working correctly reporting a flow problem. Is the pump turning steady or surging?
6. Look for any type of obstruction in the pump inlet. Clean the strainer. If continually plugging the strainer, investigate fertilizer quality and necessary strainer size.

Application Rate fluctuates in field, but flow in manual mode is stable.

This problem indicates the PWM gain needs changed. The system is surging because the Control Module is "hunting" for the correct flow.

1. Go to Work Condition > Valve Cal > Advanced Calibration.
2. Change the settings by reducing the Integral gain (move the gain 0.1 at a time; use smaller changes if needed).

Application Rate is slow to get to the Target Rate

1. You may need to increase the Gain setting. Go to Work Condition > Valve Cal > Advanced Calibration.
2. Change the settings by increasing the Integral gain (move the gain 0.01 at a time; use smaller changes if needed).
3. If the gain is too high, the system may not lock on to the target rate going across the field.

No Flow shown on display, but liquid is being pumped

Flowmeter Tap Test

See which flowmeter connector you have



Remove red guard to reach pins. Don't break red side clips.

Flowmeter pinout:

3-pin MP Tower **A- Signal B- 12V Power C- Ground**
3-pin AMP SuperSeal **1- Ground 2- 12V Power 3- Signal**

1. Unplug the flowmeter. With voltmeter, check for **12 volts between Power & Ground** of flowmeter connector. Should have **4-5 volts between signal and ground**. If voltage is not present, inspect wiring harness and check for voltage at harness connection(s) nearer the Rate Controller (at 12-pin Deutsch connector, Power is 1, Ground is 2, Flow Signal is 3).
2. If 12 volts is present, then conduct a **tap test**. Change the flow cal to 1. Have a second person watch GPM on the screen while other person taps repeatedly (use a short piece of wire or a paper clip) between signal and ground pins of flowmeter connector. A flow value (gpm) should show up indicating the wiring is not damaged.
3. If the flow showed on the display during the tap test, your wiring to that point is good. If tap test did not work, go back to the next harness connection and do a tap test there between signal and ground.
4. If the tap test registers flow on the display, replace flowmeter. (*Sometimes, cleaning the inside tube of the flowmeter with soapy water and a soft brush will remove a film covering the electrodes.*)
5. Change Flow Cal back to appropriate Flow Cal when finished with Tap Test.
6. SurePoint has a Speed/Flow Simulator (PN 219-01462) or a Tap Tester (212-03-3912Y1) that can be used to confirm if the wiring is good between the flowmeter and controller.

Field Verification of Flowmeter Calibration

Always verify the flow cal setting by comparing the amount actually applied in the field (from weigh tickets) with the amount shown on the display. Adjust the flow cal as needed to get less than 1% difference between the actual amount applied and the amount shown on the display.

In general:

Increase the Flow Cal number if not enough product is actually being applied. (If you want more, increase the number)

Decrease the Flow Cal number if too much product is being applied. (If you want less, decrease the number)

Formula to Adjust Flow Cal Number

$(\text{Volume shown on display}) / (\text{Volume actually applied}) \times \text{flow cal number in display} = \text{new flow cal}$

Example: Display shows 727 gallons was applied. Weigh ticket shows 750 gallons was actually applied. Flow cal number in display was 3000. (*We applied too much, so we will decrease the flow cal.*)

$$727 / 750 \times 3000 = 2908 \text{ (new flow cal number to set in display)}$$

(Any adjustments to the flow cal number will only be as accurate as the measurements used in figuring it.)

Do not power wash the flowmeter.

Unplug the flowmeter before welding on the implement.



Recommended Care and Maintenance

H

Maintenance
& Parts

Winterization

SurePoint recommends flushing your fertilizer pump and complete system with adequate amounts of water first. Next, use RV antifreeze to winterize your system by pumping an adequate amount through all components. At the beginning of the next season, begin with water to verify the system is in working order with no leaks.

Inspect Electric Pumps

The electric pump and motor is a completely sealed component. Over time the electric motor will lose efficiency. The entire pump and motor will need replaced when it won't efficiently produce the flow required.

Each individual pump should be able to produce more than 4 gpm of water flow with an open outlet (zero pressure). If pump falls short of this specification, replace to ensure a trouble-free fertilizing operation.

You can test the operation of each pump individually by unplugging one pump and running one pump at a time. Compare the output of each pump to each other and to the standard above.

Pre-season Service

(A little time spent here may prevent some downtime when you want to be rolling.)

1. Visually check entire system (hoses, fittings, harnesses, etc.) for any signs of wear or trouble.
2. On the display, recheck all setup screens (see Section F) to verify correct setup.
3. Fill system with water and run in Manual mode to verify components and system are in working order. (May need to open air bleed valve to prime pump the first time. Be sure the recirculation knob is closed.)
4. Unplug one pump at a time to verify that each pump is operating as it should. Check GPM output of each pump.
5. Tighten all clamps. Loose clamps may not be evident by leaks on the output side of the system. Loose clamps from the tank to the pump are not always apparent, but can be sources of air getting into the system which can create issues.
6. Push in all QuickConnect fittings to be sure the tubes are tightly seated.
7. Remove the black cap from the top of each check valve. Check the diaphragm to be sure it is intact and not gummed up with residue. Look under the diaphragm for debris. Compress the spring in the cap to be sure it moves freely. Carefully replace diaphragm and tighten cap.
8. Remove and clean the strainer. Be sure strainer is tightened securely so it will not suck air.
9. Be sure all rows are flowing and that all metering tubes/orifices are open. (Note: It will take a higher flow rate with water to create enough pressure to open all the check valves.)
10. Run the system with Liquid Calibration mode to verify that system will lock on to a Target Rate.
11. Have dealer update display software—also for AccuControl and Trimble Field-IQ Rate and Section Control Module.

SurePoint Ag Systems
9904 Hwy 25
Atwood, KS 67730

www.support.surepointag.com



Addendum to 396-2860Y1 and 396-2861Y1 Setup and Troubleshooting the Pro 700 AccuControl Liquid PWM System (aka IntelliView IV IntelliRate)

Note to SurePoint people: The Default speed setting that works on our test stand does not work when the tractor is not moving when the Pro 700 is plugged into a tractor that has Radar, Wheel, or GPS speed capability. This makes testing the system in a Run mode impossible without driving the tractor. Use the method below, instead. On our test stand, set the Default Speed to 0 (Toolbox > AccuCtrl > Default Speed > 0) before doing this.

To test the Pro 700 AccuControl on initial startup and in a troubleshooting situation, use the *Liquid Cal* mode. (Work Condition > Liquid Cal)

1. Set up the **Toolbox > AccuControl** configuration page so all AccuControl items are set.
2. Set up the **Work Condition > Valve Cal > Advanced Calibration** screen to match the settings shown in the manual for Tower or PumpRight systems. The Valve Calibration procedure is likely to give results that will not work. It may be fairly good except for an Upper Integrator Limit that is too low, or it may have totally unworkable numbers in Dead Zone and other fields.


3. Set the **Flow Error Timeout** (on page 2 of the Valve Calibration setup) to 45 sec. This will let the system run for a while before it shuts down if it is not detecting flow.

4. Go to **Work Condition > Liquid Cal** 

5. If the **Prime** button does not show up here:

Home > Toolbox > AccuControl > Imp Config > Setup > Scroll down > Liquid Prime > Enabled. (Pressing the Prime button will run the pump for 10 seconds. To keep the pump running, press and hold the Prime button.)

6. To run the system from here with a simulated speed and target rate:

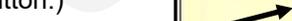Liquid Op Mode > On Master Control > Apply > Next 

7. Enter a **Simulated Speed** and **Target Rate** (these can be changed while running in this mode to test other speeds or rates). Press **Next**.

Serial Number 123456789A	Meter Cal Value 72 Pulses/Gal
Simulated Speed 5.0 mph	Target Rate 30.00 gal/ac
Back	Next

8. Press **Start** to start the pump.  System should run at Simulated Speed and Target Rate. **Measured Output** should count up as product is pumped. To see actual flow in gpm, you need to set up a **Layout for the Left Area with Liq Flw Rt Scn**. This is very useful when diagnosing pump or system issues. It needs to be in the Left Area

AccuControl Liquid Calibration Implement and Work Condition should be set before proceeding. Go to Work Condition Screen to set Work Condition. Next for Next Calibration Step	
Implement LiqApp	Work Condition Typical
Liquid Op Mode Off	Master Control Apply
	Prime Control Prime
Next	

AccuControl Liquid Calibration Prime the System: Prior to performing the Calibration Run, Set Mode to Calibrate and be prepared to measure the System output. On completion of calibration Run - Enter System Actual Output. Select Update Cal to modify Meter Cal Value.	
Mode Calibrate	Product Control Start
Measured Output 0.0 gallons	Actual Output 0.0 gallons
% Change 0.0 %	Meter Cal Value 72 Pulses/Gal
	Update Meter Value Update
Back	

so you can see it while running in this mode. (Remember, when testing with water, the pressure will be much less than it will be with a fertilizer product. If the pressure is too low, all the rows may not flow because there may not be enough pressure to open all the check valves. Increase the rate until all rows are flowing.)

9. If the pump does not run here, perform the other troubleshooting tests for hydraulic or electric pumps. You can start the system here and use a voltmeter to verify that there is PWM voltage at the EPD or hydraulic valve. (If it is not reading flow, it will quickly ramp up to maximum pump speed and shut off, giving a "Motor Stalled" error message. For "Motor Stalled" if it is reading flow, try increasing Integrator Upper Limit to 200 or more.)
10. If the pump runs and liquid is flowing but no flow is showing in the Liq Flw Rt Scn box, check for 12 v at the flowmeter connection (pins B & C) and do a tap test (pins A & C) to see if flow will register on the display (see note in #9 about setting Integral Gain).
11. If the pump runs, but is surging, lower the Integral Gain. If it is pumping, but getting to rate very slowly, raise this.
12. If the system has section valves, they should open when this test is started. If they don't open, check the AccuControl Configuration setup (Toolbox > AccuControl > Section Control > Setup {should have green checkmarks, Control Polarity is Active On}). Check Section Sw Box Setup > Config Mode > Auto (should say Run Screen in upper right corner). Set up a Run Screen layout with Clutch Control 2X2 to have section switches on the display. Be sure Boundary Control and Overlap Control are ON (Toolbox > Overlap). If they still don't open, check for constant voltage (pins A&B) and signal voltage (pins B&C) at valve.